

# MAS-1150D

## Automatic Label Dispenser

## Operator's Manual




### 1. How to operate the label dispenser MAS-1150D

- 1、 Turn off the power switch
- 2、 Load your label roller as the above picture show
- 3、 Adjust the sensor's position to ensure it's just under your label piece
- 4、 Adjust the label length control knob to a right position
- 5、 Adjust the speed control knob to a suitable rate
- 6、 Turn on the power switch

### 2. Features and specifications

Available type of plugs
-------------------------

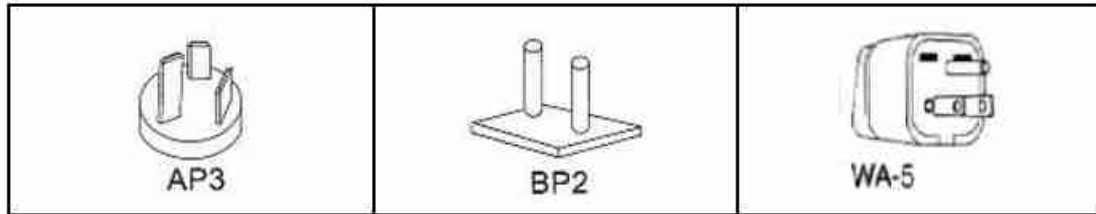

## Features

- 1、 Ideal for small labels and small work areas
- 2、 Will dispense labels and die-cut parts
- 3、 Photosensor Accuracy and Reliability
- 4、 Automatically removes paper, vinyl, acetate, polyester, foil, etc. from its liner
- 5、 Automatically rewinds liner scrap for a cleaner working environment
- 6、 No tools required for adjusting to different size labels
- 7、 No maintenance required
- 8、 High Torque Motor for large diameter label rolls

## Specifications

Model:	MAS-1150D
Display:	6 digit LED
Aplicable Label Width:	From 6 mm to 140mm
Label Height Limit:	4 - 200mm Free
Core and Roll Size:	Internal Diameter: More than 50mm Outside Diameter: Less than 250mm
Feed Speed	From 16mm to 130mm per second
Power:	AC110V 60Hz / AC220V 50Hz
Dimensions & Weight:	210(W) x 210(L) x 220(H)mm 4.5kg

## Packing List

No.	Descriptions	Quantity	N.W.	G.W.	Measurement
1	Automatic label dispenser	1 pc	4.5Kg	5.0Kg	30×24.5×35cm
One unit per carton, standard export packing.					