

LED Control System Instruction

1. Language setting



2. Set up the size of screen



When you click screen setting you should get it and the code is 168



Find out your controller type(ZH_U2)
Width and height is your screen's size
You can use Serial port or Usb disk

Online Read the

--

型号 ZH_U0

Screen 屏1

Width 128

Height 32

Quick Conventional P10

Alignment
0, the conventional
P10 1/4 sweep on
serpentine road data
with 16 rows and 8

OE polarity Data polarity

Color Mode

Gray levels No gray

Advanced Settings


Communication

Serial Ethernet U dis

COM1 38400

Save



3. Subtitle : edit words

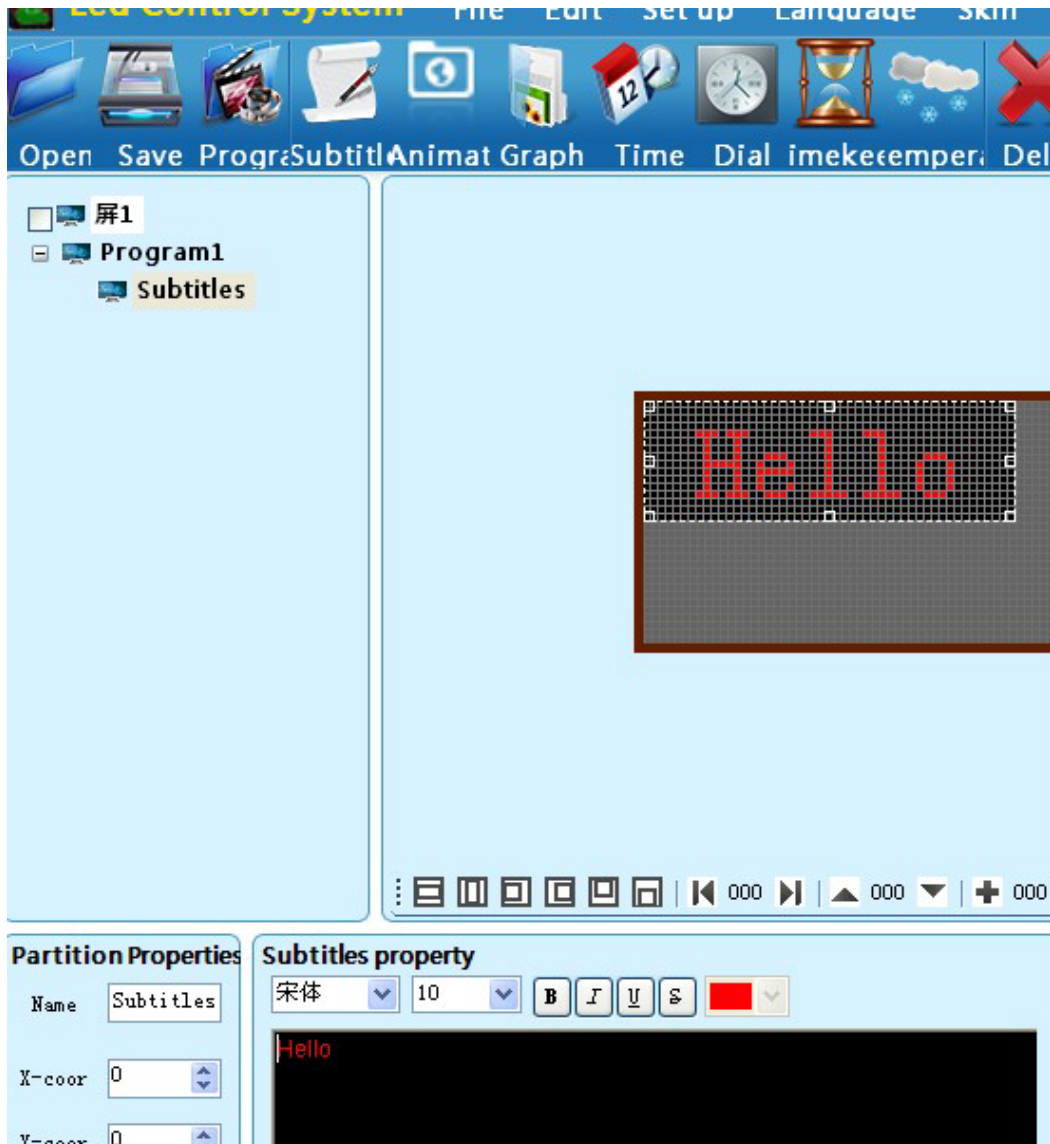

Animation




Graphic: If you have many subtitle lines you can chose "multiple"

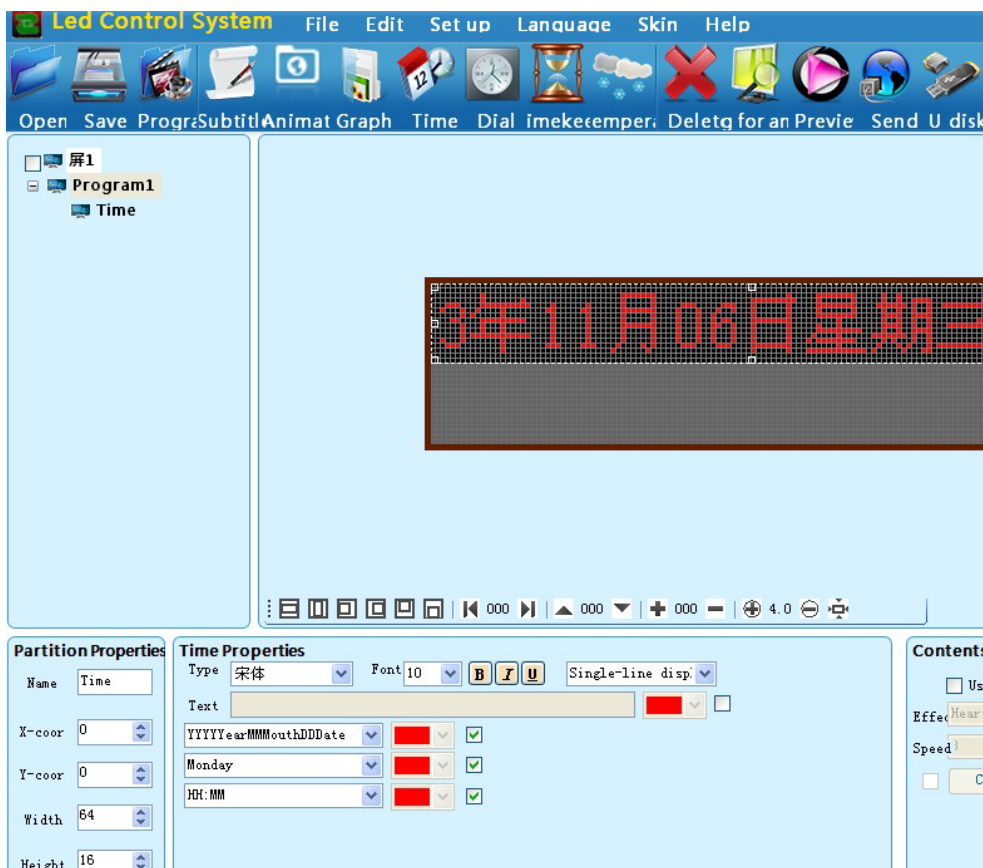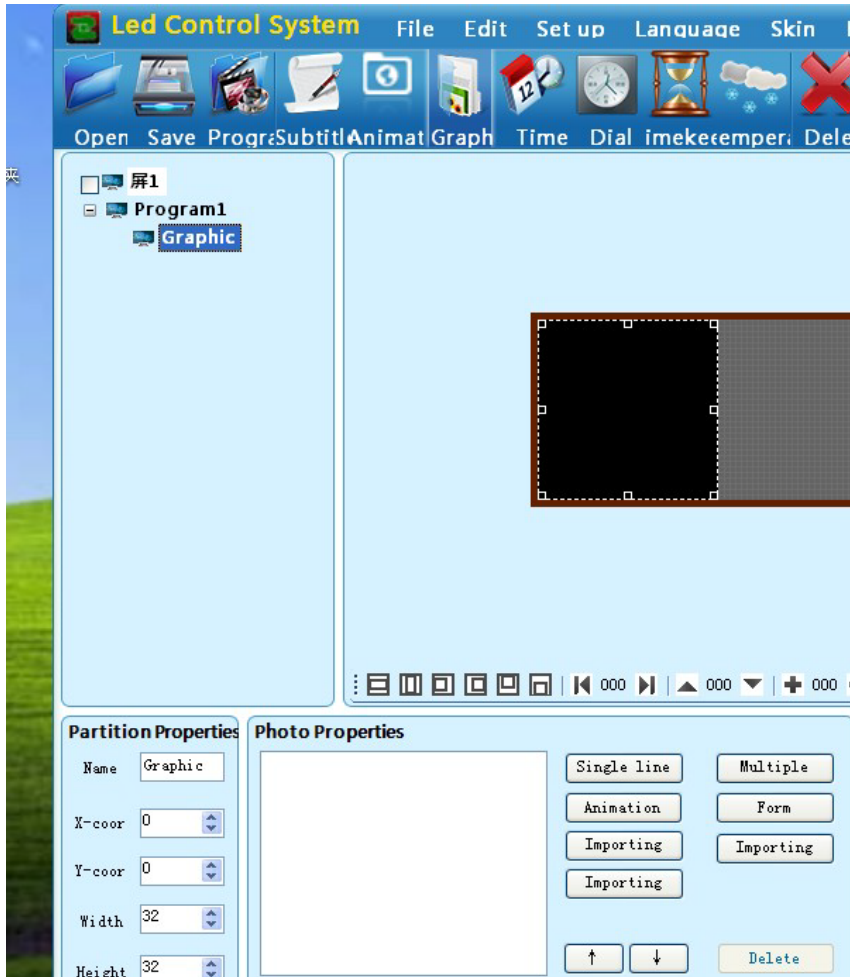


Time: it follows the time on your computer. You can chose what type of display,as only display the date


Dial

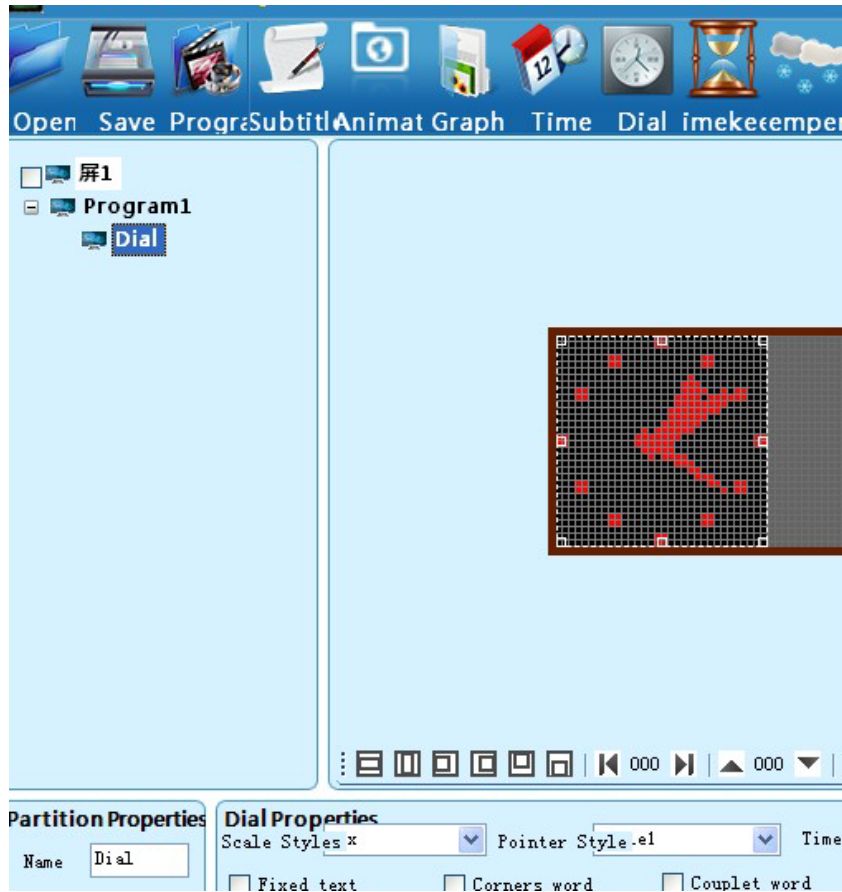

Timekeeping

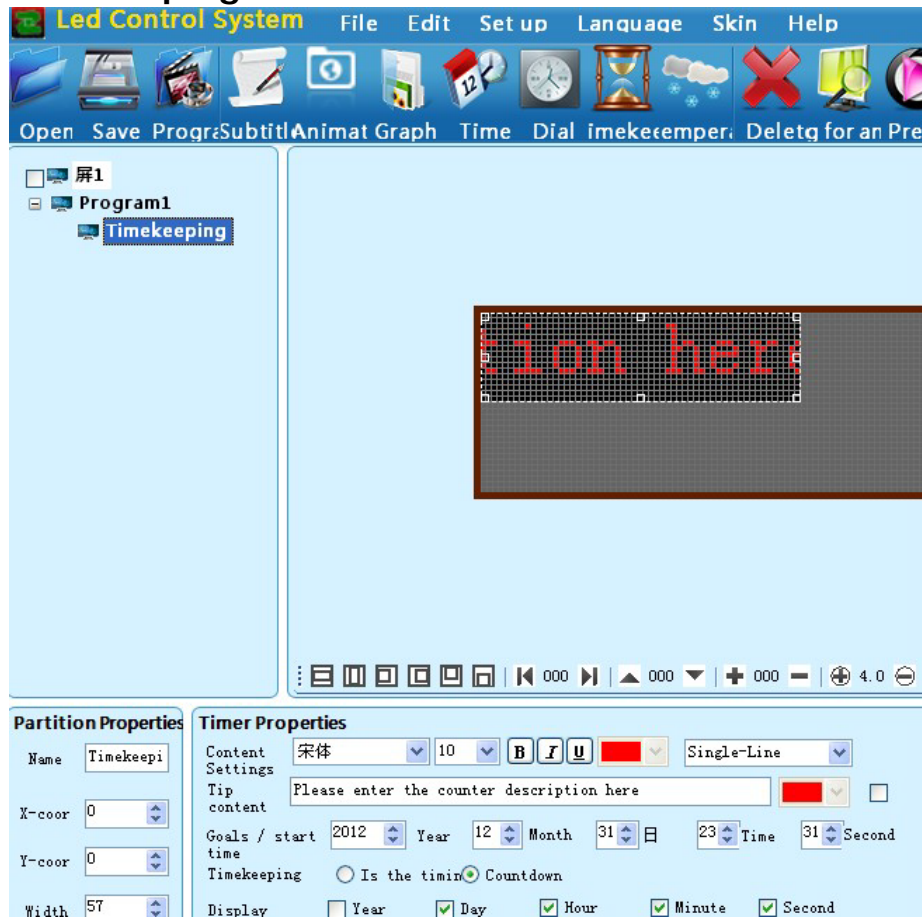

Temperature

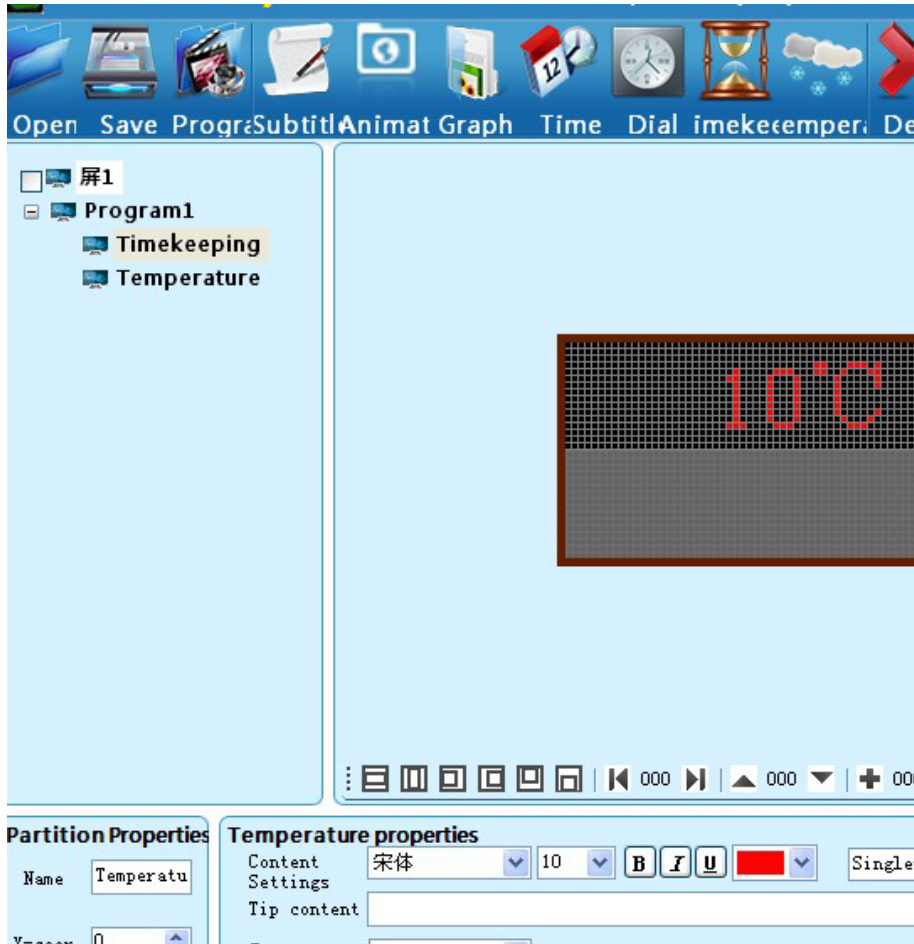

U disk. Save your setting and send it to your u disk.



Note:

If you want to set more items you should not make them overlap.

You can set the size of item and make sure they are not overlap.

When you save your settings to your U disk and you should plug your U disk to LED controller and check it out.

When all is down you can take off your U disk from controller and the controller has saved your settings.