


Double-Cup Auto Milk Tea Shaker



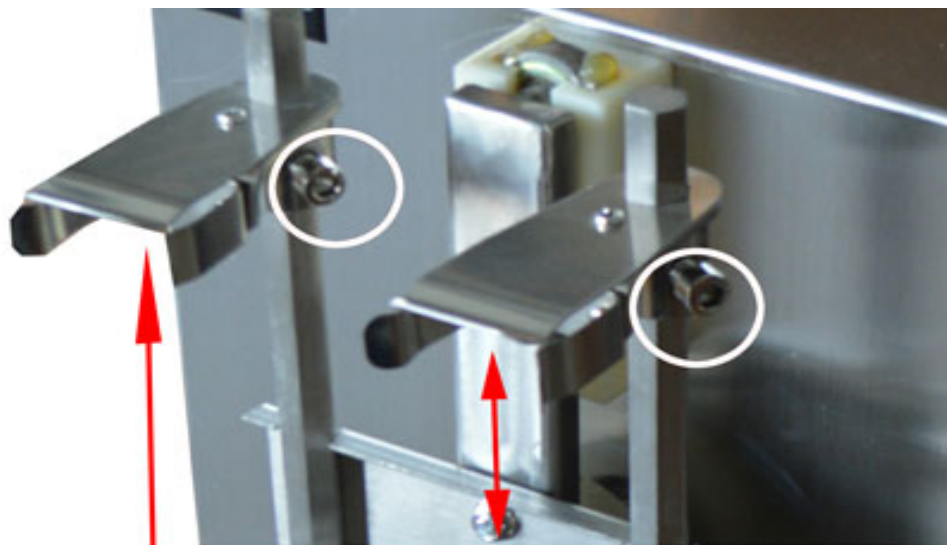

Adjusting screw

Control the pressure

Model	LJY120-2
Size	13.78”*12.21”*13.98”(350*300*355mm)
Voltage	110V
Power	120W
Net weight	25KG
Timer	1 - 120 s
Size of shaker cup	350-750ml

Item Number 134499

The latest double-cup auto milk tea shaking machine is made of stainless steel material and could replace the process of manual shaking .It is widely used in restaurant, cake room, coffee shop, bakery, food stores and beverage stores.

Features:

- 1.The latest double-cup auto milk tea shaking machine,the full body is made of stainless steel material.
- 2.The machine could replace the process of manual shaking in the milk tea production process.
- 3.Suitable for the shaking of milk tea,boba tea, beverage etc.
- 4.High-power,360 degree rotation.
- 5.Special control procedures,you can stop at any time.
- 6.0-120 seconds timing function.

Operation steps:

- 1.Access the power cord to the power, pull up the rocker cap according to the direction of the arrow, and set the time. (The time controller with adjustable time of 1s to 20s, and tea milk shaking time was about 10s to 20s.)
- 2.Put the cup on the bottom cap , pull down the rocker cap according to the direction of the arrow, and check whether the cup and seal tightly.
- 3.Press the Start button, the machine will stop at the set time, then pull up the rocker cap

and take out the cup.

Item Included:

One milk tea shaking machine, two cups

Fault Analysis and Treatment

Cases	Cause of issue	Check the contents	Approach	Remark
After pressed the start button, the machine did not work	Power problems	Check the power	Replacing the power outlet	Electrician repair if necessary
	Plug and socket connection is bad	Check the plug is loose or not	Replace the plug wire or socket	
After pressed the start button, the timer lights but the machine didn't work	The wiring was loose inside the machine	Open the machine rear plate to check the wiring	Reconnect the loose wire	
	The belt was loose	Open the machine rear plate to check the wiring	Tighten the belt or replace the belt	
After pressed the start button, the machine work, but can't stop working	The timer is bad	Timer	Replace the Timer	
Machine working noise	Machine was put instability	Check whether the table and the machine is flat	Replace the table	
	Shrapnel loose	Shrapnel should be in close contact with the cup	Adjust the shrapnel	
Cup was thrown off	Shrapnel loose	Check the shrapnel	Tighten or replace the shrapnel	