

Here are instructions to guarantee a good contact between the screen frame and printing pallet, which will help you get a better printing effect.


First Adjusting the position of the printing head & pallet

By adjusting the two screws of the printing head to confirm that the bottom line of the printing head will be in paralleled with the printing pallet, later tighten the two screws.

Then adjust the distance between the printing head & pallet; later fasten the printing pallet tightly.

Notes:

- a. You can fix a screen frame on to the printing head before adjusting, which will give you some standards as a reference.
- b. Please make sure that the bottom line of the printing head must be in paralleled with the pallet or a little lower than the printing pallet.
- c. In normal circumstances, the horizontal gap between the printing head and pallet is about 0.2"-0.4" (0.5cm-1cm), that's OK.

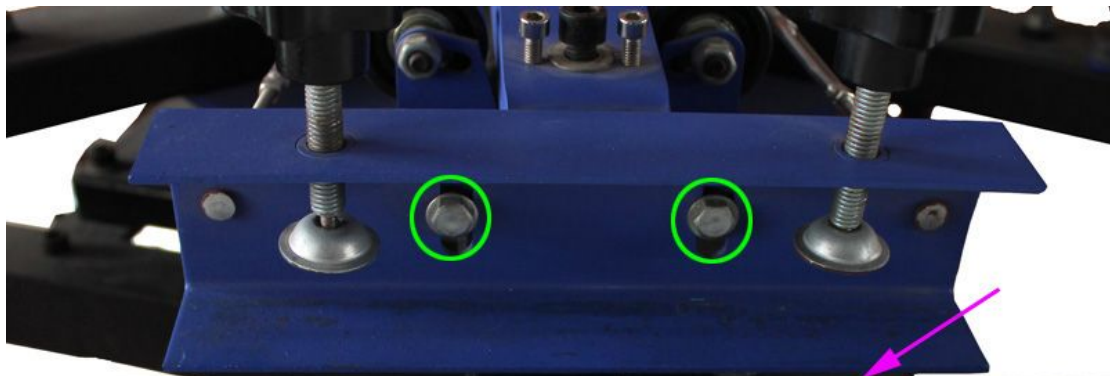


1. Adjusting the two screws to confirm that the bottom line of the printing head will be in paralleled with the printing pallet.

Two Put down the printing head to check whether the height between the printing head and pallet is ok.


Third If the printing head support arm is still a little lower or higher than the pallet, then adjust the cushion pad to control the height of the printing head support arm according to your needs.



2. Loosen this screw, so that the cushion pad can be adjusted up and down.

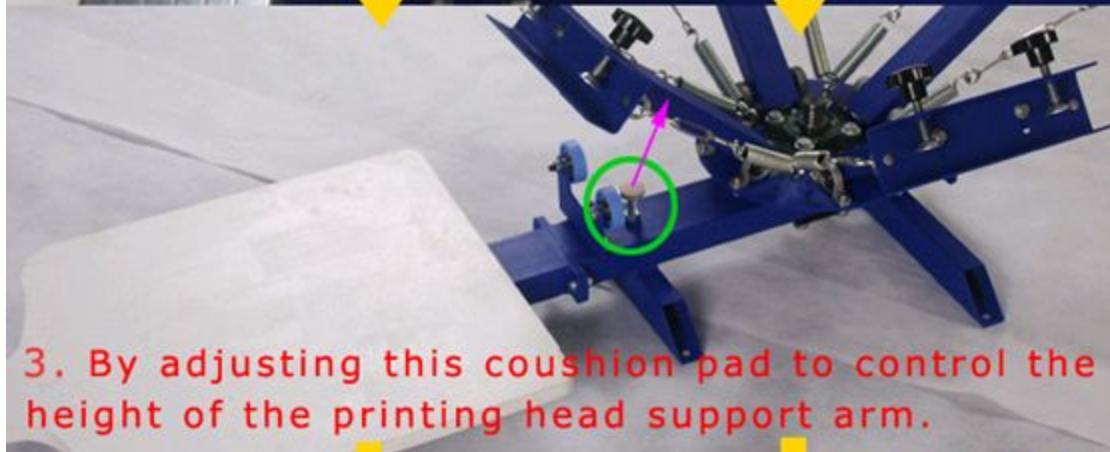

3. By adjusting this cushion pad to control the height of the printing head support arm.

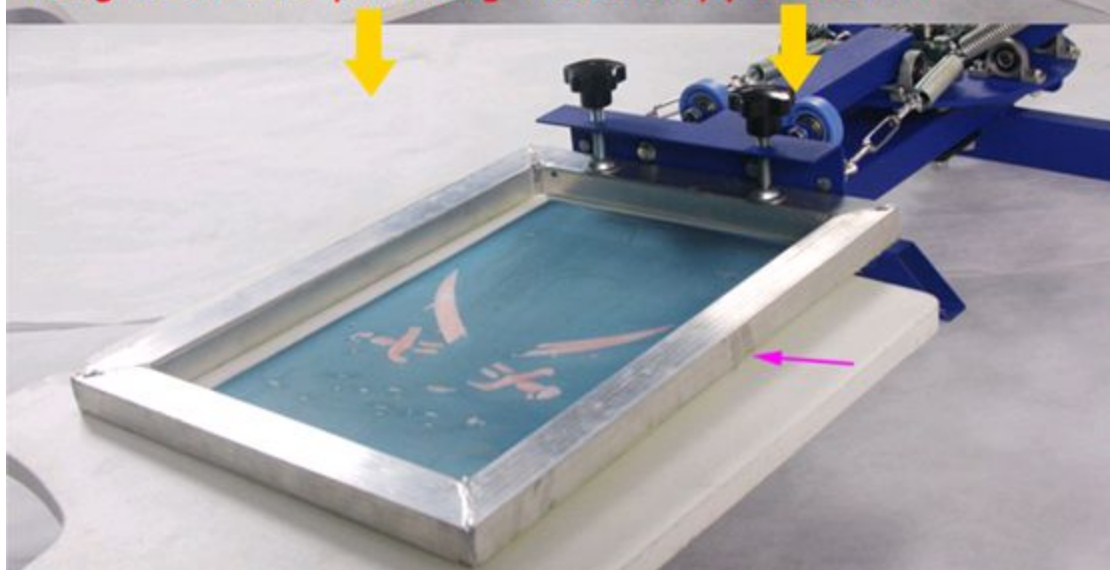

Forth Put down the printing head again to confirm whether it can be easily to be lifted or down easily after installing a screen frame.

Fifth If it's ok, please tighten the screws of the cushion pad. Then just begin your printing process.

ASC365 International Ltd
<http://asc365.com>