

Catalog

Catalog	1
Preface	1
I Manual of laser machine	2
Statement	2
Safety Note	3
I Chapter 1 Machine Appearance and Accessories	4
I.1.1 Machine Appearance (Different model will have different appearance, according to the real object)	4
I.1.2 Accessories set (according to the real object)	5
I Chapter 2 Installation and Commissioning of the Machine	7
I. 2 Installation and Adjusting Steps	7
I Chapter 3 the Operation of laser machine	13
I.3.1 Introduction of Main Interface	13
I.3.2 Introduction of key	15
I Chapter 4 Alignment Standards of Optical Path	24
I Chapter 5 Daily Maintenance and Common Faults	27
I.5.1 Daily maintenance	27
I Chapter 6 Warranty Regulations	30
II RDCAM V6.0 User Manual	31
II Chapter 1 Overview	31
II.1.1 Laser engraving cutting system introduction	31
II.1.2 Environmental requirements	31
II.1.3 Software running	31
II Chapter 2 Software installation	33
II.2.1 Install steps	33
II.2.2 Installation settings	34
II.2.3 Installation	34
II.2.4 Exit	34
II.2.4 Other matters	35
II.2.5 The plug-in of CorelDraw installed	35
II.2.6 The plug-in of AutoCAD installed	38
II.2.7 The plug-in of Cadian installed	41

II.2.8 The plug-in of Illustrator installed	42
II Chapter 3 Introduction of CorelDraw_Laser	44
II.3.1 Main interface	44
II.3.2 Language settings and machine information	44
II.3.3 File parameters setting	45
II.3.4 Object Selection	46
II.3.5 Object Color	47
II.3.6 Object Transformation	47
II.3.7 Place object	48
II.3.8 Object align	48
II.3.9 Object View	48
II.3.10 Group and unGroup	49
II.3.11 Basic graphics creation	49
II.3.12 Important Tool	49
II.3.12.7 Bitmap Handle	56
II Chapter 4 System Settings	62
II.4.1 Output Setting	62
II.4.2 General settings	65
II.4.3 Machine parameters	66
II.4.4 Document Management	71
II.4.5 Manual	73
II.4.6 Info	74
II Chapter 5 Processing Output.....	75
II.5.1 Device port	75
II.5.2 Go Scale, Cut Scale	75
II.5.3 Start, Pause, Stop, SaveToUFile, UfileOutput, Download	76
II.5.4 Layer Setting	76
II Chapter 6 FAQ.....	83
II.6.1 After start processing, the machine does not move or disorder or loss part of graphics	83
II.6.2 Software automatically shut down when import file	83
II.6.3 Machine panel prompt 【Less buffer distance】	83
II.6.4 Processing graphics sis mirror to the actual graphics	83
III User's Manual of Laser Engraving Cutting Software LASER__WORK RDCAM6.0.....	84
III Chapter 1 Overview	84
III.1.1 Laser engraving cutting system introduction	84
III. 1.2 Software supported file formats	84
III. 1.3 Environmental requirements	84

III Chapter 2 Software Basic Operation	85
III.2.1 The main interface operation	85
III. 2.2 Language settings and manufactures information	86
III.2.3 Page Setting	86
III. 2.4 File Open and Save	87
III. 2.5 File Import and Export	88
III. 2.6 Basic graphics creation	90
III.2.8 Object Color	94
III. 2.9 Object Transformation	94
III. 2.10 Object Align	99
III. 2.11 Object View	100
III. 2.12 Group and UnGroup	100
III. 2.13 Important Tool	101
III. Chpater 3 System Settings	120
III. 3.1General settings	120
III. 3.2 System info	123
III. 3.3 User parameters	124
III. 3.4 Document Management	129
III. Chapter 4 Processing Output	130
III. 4.1 Search Device	130
III. 4.2 Layer processing	131
III. 4.3 Position	131
III. 4.4 Go Scale、 Cut Scale	131
III. 4.5 Start、 Pause、 Stop、 SaveToUFile、 UFileOutput、 Download	131
III. 4.6 Output select graphics	132
III. 4.7 Path optimize	132
III. 4.8 Test	132
III. 4.9 Output Setting	133
III. 4.10 Layer Settings	134
IV Introduction of AutoCAD_Laser	143
IV .2.1 Features of AutoCAD_Laser	143
IV.2.2 Environmental requirements	143
IV.2.3 Installation and startup	143
V Attached	146
VI User Parameters	151
VII Instruction on the Machine Parts	154

Preface

Thank you for buying our products. Our machine is professional and high-technology equipment combined with the optical, mechanical and electrical; here especially edit this manual for your good operating and maintenance.

We also take many real object photographs in the manual; it helpfully introduces installation & adjustment, maintenance, safety attention etc. in details.

The user should read this manual in details before using, because it will help you have a good grasp of operating and maintenance.

Welcome to provide your valuable comments or suggestions, will highly appreciate it!

I Manual of laser machine

Statement

1. Any differences are not specially notified in advance for products update etc. reasons.
2. All products according to the real object, manual's photograph maybe different with real object for products update etc. reasons.

Safety Note

★The users should read the related operating manual carefully before operating. Must obey the operating regulations strictly. Non-trained people are forbidden to operate machine.

★The machine uses IV LASER (strong laser radiate), this kind laser radiation might make following accidents:

①Easy to burn around combustible materials; ②Different working materials might produce other radiations and toxic or harmful gases during laser processing; ③Laser radiation's direct sunlight will cause body harm;

The machine location must equip fire-fighting equipment, so forbidden something combustible and explosive around the machine, keep drafty. Non-trained people are forbidden to operate the machine.

★Processing material and emission should conform to local laws and regulations

★The user should consider carefully whether processing materials are suitable for laser working for risk reason.

★There are high-voltage and other potentially dangerous in the machine, nonprofessionals are forbidden to disassemble machines.

★The operator is forbidden to leave during operating and must cut off switch when finishing work.

★Forbid open any cover during working.

★Make sure the wire connects well with the ground before operating.

★Forbid the things inconnected diffuse reflection around the machine for fear the laser light reflect the person or incendive directly (advice use firehosereel box in location of working).

★The operator must observe carefully during the working of machine, if something is exceptional, should cut off all the switch.

★Keep the machine in the dry place, non-pollution, non-concussing, non-strong electricity, strong magnetism etc.,environmental temperature should be 5-40℃,environmental humidity should be 5-95%(no condensed steam).

★The laser machine needs far from sensitive EMI equipment, it will make EMI to this kind equipment.

★The machine is forbidden to open machine when the power supply voltage is unsteady or mismatch.

Manufacturer won't take any responsibility and liability because of improper use and user not obey above all regulations.

I Chapter 1 Machine Appearance and Accessories

I.1.1 Machine Appearance (Different model will have different appearance, according to the real object)

1. Right side is shown in Fig.F1-1



F1-1

2. Back side is shown in Fig. F1-2



F1-2

I.1.2 Accessories set (according to the real object)

Your accessories set include following parts except machine (except option spare parts)

1. Water pipe (air pipe), Air pump, Water pump (some installed in water tank), is shown in Fig. F1-3:



F1-3

2. Exhaust fan, smoke pipe, is shown in Fig. F1-4:



F1-4

3. Laser tube, is shown in Fig. F1-5:



F1-5

1) Water tank (for this machine water tank is optional part), is shown in Fig. F1-6:



F1-6

2) Manual Bag and inside accessories, is shown in Fig. F1-7,F1-8:



F1-7



F1-8

6. Ground Wire is shown in Fig. F1-9(customer need to prepare it by yourself):



F1-9

I Chapter 2 Installation and Commissioning of the Machine

A complete working system is composed by laser engraving machine, the exhaust fan, air pump, water pump, water tank, exhaust pipe, data transmission lines and so on.

According to the needs, the users can configure the computers, printers, scanners and so on by themselves.

I. 2 Installation and Adjusting Steps

1. Laser Tube Installation

As the laser glass is fragile goods, the laser tube should be packed separately in order to ensure its safety during the transportation. So the users must install the laser tube before machine installation and commissioning.

Laser tube should be mounted on the back of the machine, open the protective cover of laser tube; you can see the two Vee-blocks. As shown in Fig. F2-1:



F2-1

Put the light-emitting window (low-voltage end) of laser tube with the same side of No.1 reflector mirror on the Vee-blocks carefully, and then latch on the rubber strip on the Vee-blocks wear of laser tube, fix laser tube well. As shown in Fig. F2-2:




F2-2

Attention: ①The laser tube can't be fixed too tightly to avoid damaging it; ②Be sure to keep the water inlet (laser tube high-voltage side) is located at the bottom of tube to keep the water filling the laser tube fully.

After Fixed the laser tube, the water inlet pipe which connect with water sensor should be connected with the high-voltage side water inlet mouth of the laser tube; the water outlet pipe should connect with the low-voltage water outlet mouth of laser tube (if the

weather is cold, in case of break the laser tube, we'd better scald the end of the water pipe with boiled water to make it soft.), As shown in Fig. F2-3, F2-4:

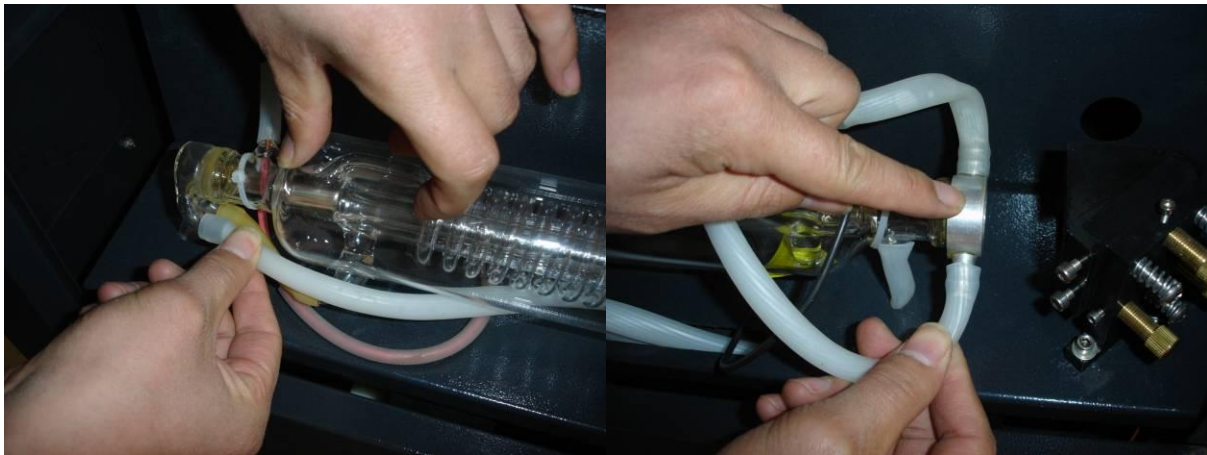

F2-3

F2-4

All the connectors must be butted firmly to prevent water leakage. The rubber pipe must be straight, can not be curled in order to avoid poor water flow.

Finally, let the high-voltage cable of the laser power supply connect to the high-voltage side post head of laser tube, the low-voltage cable of laser power supply connect to low-voltage side post head of the laser tube, as shown in Fig.F2-5 F2-6:



F2-5

F2-6

For security, please seal the post head of the high voltage side and low voltage with silicon gel.

2. Water Pump Installation

Please fill pure water into the water tank (the water level should be higher than the pump at least). Let the water pump outlet connect to water inlet of the machine, using another piece of water pipe connect to the water outlet of the machine, and put the other side of this water pipe into the water to complete the circulating water piping connection. As shown in Fig.F2-7, F2-8:



F2-7



F2-8

Connect the water pump power supply, at this time we can see that the laser tube is gradually filled with water. If the water can through the water outlet pipe smoothly, it shows that the pump is working properly.

In order to ensure the cooling water flow of the laser tube normally, a water protection sensor is installed in the water recycling system, when water pumps working poor or abnormal, the laser engraving machine will come into the protection state automatically. Then the laser tube will not emit the laser light. Therefore, in the course of routine maintenance, you should pay attention to the clean water pumps and water pipes.

3. Installation of Air Pump

Make the air outlet of the pump connected to the air inlet of the engraving machine with air pipe; ensure the outlet can vent air normally after turn on the power. As shown in Fig. F2-9, F2-10:



F2-9



F2-10

Air pump is very important in the system. High-pressure air runs through the air pump and blew out from the laser light-emitting window of the laser head. On the one hand, it can ensure the cleanliness of the focus lens, on the other hand, it can prevent the material inflame by the laser light. Therefore, in the routine maintenance, the user should pay attention to the air pipe, must ensure that it can not be twisty or damaged, otherwise abnormal air may lead to burning materials.

4. Installation of Exhaust Fan

First, let the suction inlet of the exhaust fan connect to the dust suction outlet of the engraving machine by a smoke pipe, and fix them with lock. And then take another smoke pipe connect the outlet of the fan, and put the other end of smoke pipe to outside. At last, connect the power supply wire well. As shown in Fig.F2-11, F2-12:



F2-11

F2-12

5. Safety Grounding

Morn laser engraver uses fourth type of laser tube. The type of drive is high-voltage-driven, so during users use the machine, they must comply with the "Safety Note ". On the other hand, it asks stringent requirement about the safety grounding to the users. The safe Line-to-Ground Resistance should be less than 5Ω . Specific connection method are shown in Fig.F2-12, F2-13



F2-12


F2-13

Attention please, bad grounding can cause high failure rate of equipment and at the same time may cause other safety incidents! ! !

The company won't assume any responsibility and obligation to the fault and the accident caused by bad grounding!!!

6. Optical Path Adjustment

After let all power cables connect well and electrify, turn on the engraving machine power supply, at this time, the machine starts to reset and return to the last origin point . All above shows that the machine is running normally, then turn on the laser power supply, begin to adjust the optical path. As shown in Fig.F1-14:

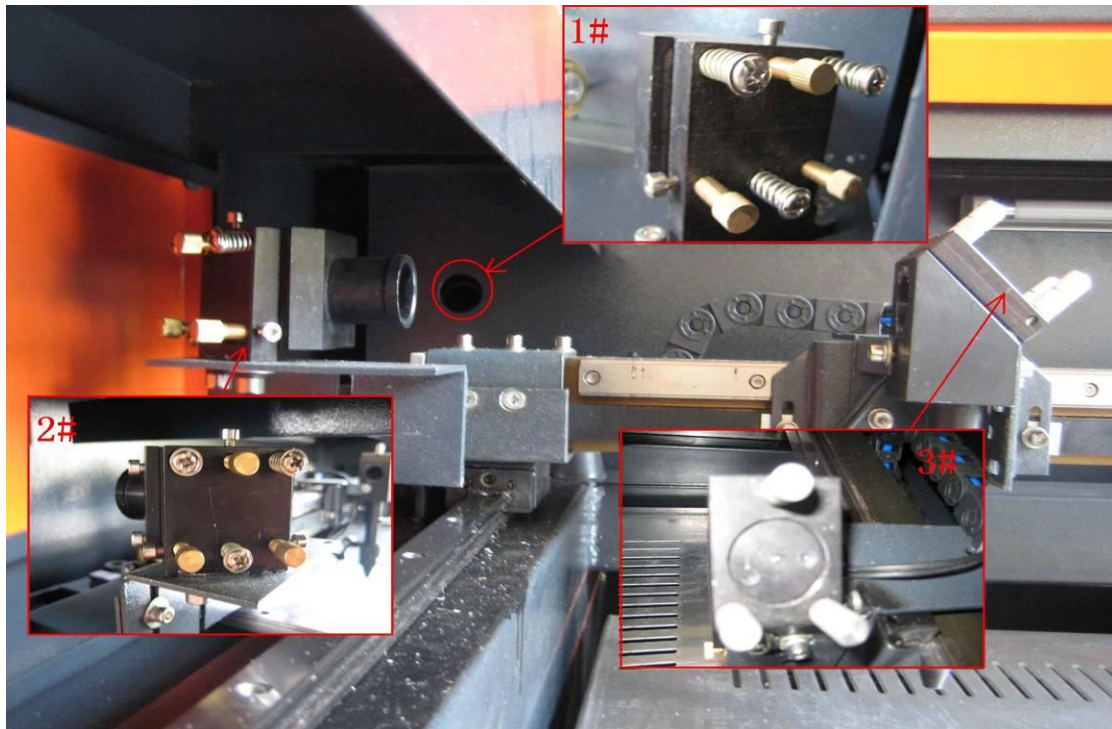

F2-14

Firstly, adjusting the laser position. Make the multilayer adjusting paper stuck on the 1# mirror frame, and then push the "Pulse" key on the control panel. There will be a burned point in the paper, check whether the light spot is in the center of the mirror, if the light spot is not in the center of the mirror center, we have to make the light spot in the center of the mirror by regulating the location of the laser tube.

Then adjust the 1# reflector mirrors. Move the beams to the nearest place to the 1# reflector; push "Pulse" to get a spot in the paper. And then move the beams to the farthest place from the 1# reflector, get another spot in the paper. We adjust the angle of the mirrors by adjusting the three screws on the back of mirror (clockwise rotation the above screw, the spot will be down; clockwise rotation of the lower left corner of the screw, the spot will move to right; clockwise rotation of the lower right corner of

screw, the spot will move to left.), to insure that all the spot are in the same place in the paper when and where the beam we move.

After adjust the 1# reflector mirror well, the next, adjust the mirror 2# as we do at the first step, move the laser head to the nearest side to 2# reflector , then make a spot in the paper , then move the laser head to the farthest place to 2# , make a spot.

We have to adjust the further spot overlap with the first spot by adjust the screws on the 2# reflector frame.

Note: As the best, the location of light spot should be in the center of mirrors. The light spot can not hit the edges of the mirrors. If playing in the edges, please continue to adjust the mirrors until the light spot in the central of them.

At last we have to check whether the light spots are superposition wherever the laser head is. If the spots can not coincide, please re-adjust the optical path by the way we talked above until the spots coincide

After finished the adjustment, we will check whether this laser spot is playing in central of the laser head light hole. If not, turn off the laser power supply, adjust the laser tube position. If it is left and right excursion, which side is biased on, we move the laser tube to this side direction. Such as: if left, we adjust the laser tube to left ; if right , we adjust the laser tube to right .

If the migration is up and down, we have to adjust the laser tube to the opposite direction, that is, if up, we will make the laser tube down; if down, we will make the laser tube up.

Note: The above adjustments is just for a low-voltage side of laser tube (light side), if we want to adjust high-voltage side of the laser to achieve the same effect, then the adjusting direction is opposite.

The detailed description of how to adjust optical path, please see Chapter 4 "Alignment Standards of Optical Path".

After adjustment of optical path, please close the laser tube protective cover.

I Chapter 3 the Operation of laser machine

Besides use the computer to control the function key, we can use the Control Panel. The following is the brief instruction of control panel and main function.

There are 16 function keys and one LCD Panel in the Control Panel:



I.3.1 Introduction of Main Interface

Idle Interface (display system time: day/month/year)

```

File: XX    File Number: XXXX
Max Power: XX.X%
Run Speed: XXX mm/s
System Idle: 25/12/2010
  
```

Figure: 3.1-1

Running Interface (display run time of the selected file: hour/minute/second)

```

File : XX    File Number : XXXX
Max Power : XX.X%
Run Speed : XXX mm/s
System Run: 00.12.40
  
```

Figure: 3.1-2

Main Interface (Pause)

```

File: XX      File Number: XXXX
Max Power: XX.X%
Run Speed: XXX mm/s
System Paused: 00.12.40

```

Figure: 3.1-3

Run finished interface (display the total run time of the last file: h./min./sec.)
 In this interface, if “ESC” key is pushed down, the interface will return to idle interface, that is to say, the figure 3.1-1.

```

File: XX      File Number: XXXX
Max Power: XX.X%
Run Speed: XXX mm/s
System Idle: 25/12/2010

```

Figure: 3. 1-4

The interface in Figure 3.1-1 shows when the system is idle. “File” means the number of the memory file presently selected by the operator. If it is 00, it means the memory file is not selected. “File Number” means the processing times of the current file number. “Max. Energy” and “Speed” separately mean the maximum energy and the engraving speed set on the keyboard. Maximum energy is expressed by percentage and accurate to 0.1%. The unit of processing speed is millimeter a second (mm/s). When there is a laser tube, the interface only shows the maximum energy of this tube as shown in the above figure. If there are two laser tubes that are enabled, the interface show the maximum energy of two laser tubes. The main idle interface is taken for example as shown in Figure 3.1-5. On the interface shown in Figures 1-1 and 1-4, you can press any keys on the keyboard. On the interfaces shown in Figure 3.1-2 and 3.1-3, some keys can't respond.

```


File: XX      File Number: XXXX
Max Power: XX.X%/ XX.X%
Run Speed: XXX mm/s
System Idle: 25/12/2010

```

Figure: 3.1-5

I.3.2 Introduction of key

(1) Reset

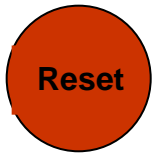

On any interfaces, press the Reset key (or when the system is powered) and the mainboard will be reset. The machine will seek for the origin (configured according to the user's parameters through start-up and reset) and show the "Reset-in-progress" prompted in the interface. The machine having successfully returned to the origin, the laser head will automatically move to the setpoint set last time. If the last processing is successfully completed prior to the resetting, the system will at this time return to the interface in Figure 3.1-1; if the last processing is not completed (i.e. the power supply is cut off during the processing), the system will at this time show as follows:

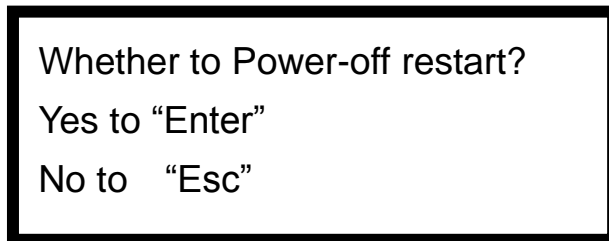



Figure:3.2-1

Pressing the "Esc" key in this interface and this de-energizing for continuous engraving will be cancelled and the system return to the interface in Figure 3.1-1. If processing was once started, the figure uncompleted in the former processing can't be de-energized for continuous engraving; if the "Enter" key is pressed in this interface, the de-energizing for continuous engraving can be started in order to process such a figure continuously.

 <p>Prompt</p>	<p>After the de-energizing for continuous engraving is started, the interface will show "Looking for cutoff point, please wait". The waiting time has something to do with the data size of last processing. The larger the data size is, the longer the search for the cutoff point by the mainboard is. Generally speaking, if the power is cut off after the figure processing of one hour, the time that the mainboard looks for the cutoff point is approximately one minute when the de-energizing for continuous engraving is started after it is powered next time.</p>
--	---

(2) Laser



On the system idle interface, the work finished interface, the system paused interface and the interface to prompt whether to de-energize for continuous engraving, press the “Laser” key and the laser outputs on the bursting. The time of open laser may be set. If the time is set to zero, then the outputting time is the time when the “Laser” key is pressed, that is to say, press this key for outputting and release it for blanking. If the time is not zero, such as, 100ms, then the laser flash 100ms when you push down the laser key. You can press the “Down” key on pressing the “Laser” key to start manual cutting. The laser energy of burst is the maximum energy value set on the keyboard. It is no use to press the “Laser” key on other interfaces. If the water protector is started and something wrong happens to the protector, no laser will be outputted after the laser and the interface prompts dislocation.

(3) Max. Power key



On four main interfaces (i.e. idle system, running system and suspended system, work finished interface) this key can be pressed. On pressing this key, if the manufacturer only provides a single laser tube or if there is a double-path laser tube, but the user only enables one path, it only shows the maximum energy of this-path laser tube and the interface shows the same as Figure 3.2-2. If two laser tubes are enabled together, it will show the maximum energy of two laser tubes and the interface shows the same as Figure 3.2-3.

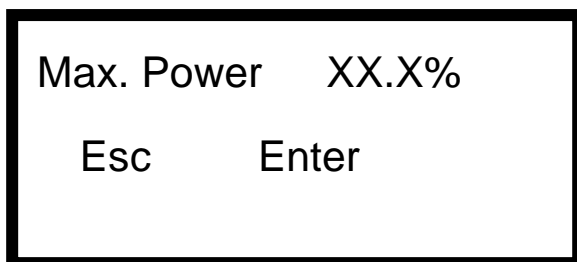


Figure: 3.2-2

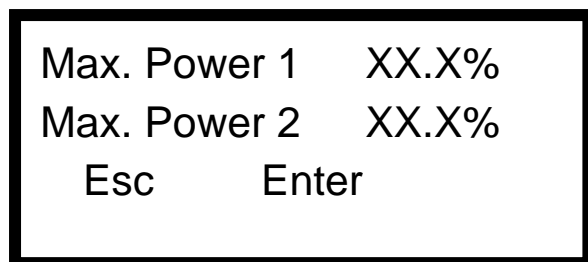


Figure:3.2-2

(4) Min. Power key



The display interface and the operating mode of this key are similar to those of the “Max Power” key.

(5) Speed key



On four main interfaces (i.e. idle system, running system and suspended system, work finished interface) this key can be pressed. Press this key and the interface will show the same as Figure: 3.2-4.


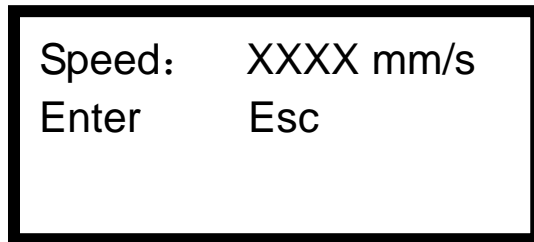


Figure: 3.2-4

The operating mode of this key is similar to that of the “Max Power” key.

When the PC software generates the cutting/engraving data file, if a certain or all the parameters of the maximum power, the minimum power and the speed parameter are set at 0, the value set on the keyboard will be taken as the corresponding parameter in the idle state. Once the work is started, what is shown in the display interface is the parameter of the layer that is being processed now.

The power and the speed parameters corrected when the work is not started will influence the following operations: bordering, bursting and manually shifting the axle on the keyboard. If the three parameters will be modified after the work is started, it will only influence the layer that is being processed, but neither the keyboard parameters set in the idle state nor other layer parameters.

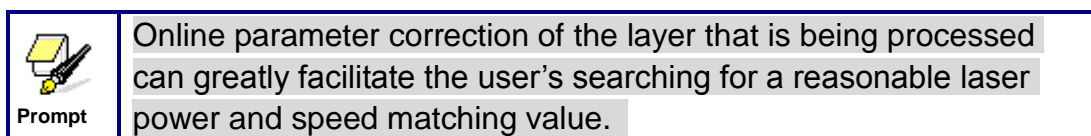

(6) File key



Press the “File” key in the idle system interface or the work finished interface and two pages will appear. Press the “Up” and “Down” key and you can turn the pages up and down. The interface will show the following in turn:

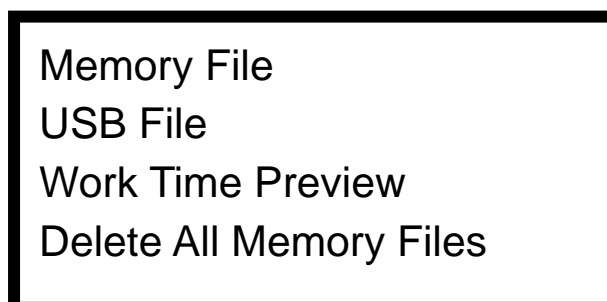


Figure:3.2-5

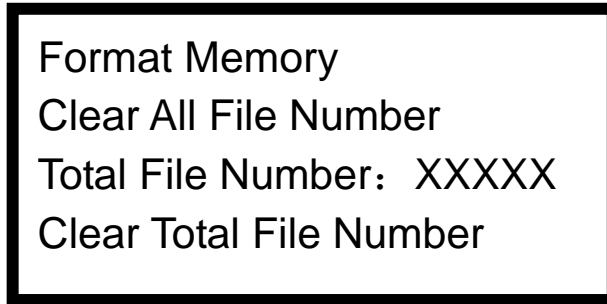


Figure: 3.2-6

Brief the following items separately:

- ◆“Memory File”: the related operations on the memory file such as processing, bordering, copying, deletion and etc.
- ◆“USB File”: the operations on USB file, such as copy to memory and deletion.
- ◆”Work Time Preview”: press this entry, the work time of the currently selected file will be calculated (you can also lower the memory file on the menu to start the work time preview feature of a certain file), calculated time according to the file size and complexity of the graphics, in general, if the actual work time is several hours, then the calculated time may require ten seconds or even more. The work time calculated is consistent with the actual working hours, accurate to the millisecond.
- ◆“Delete All Memory Files”: to delete the data of all memory files on the mainboard.
- ◆“Format Memory”: to format the memory on the mainboard. There are “Quick Format” and “Complete Format” for option. If there is some abnormality in memory, you may check the invalid block with the format function.
- ◆“Clear All File Number”: to delete the corresponding processing times to each memory file.
- ◆“Total File Number”: to show the present total times of processing by the machine.
- ◆“Clear Total File Number”: to clear and recalculate the total file number.

Move the cursor by way of the up and down directional keys to select an item first, and then press the “Enter” key to enter the submenu. On selecting “Memory File” or “USB File”, if the callee has no files, the interface will show the information of no file, otherwise it will show the numbers and names of all object files (the suffix name of object file is .rd). The processing times corresponding to this file is shown after the file name in the “Memory File” interface. Each page has four files:

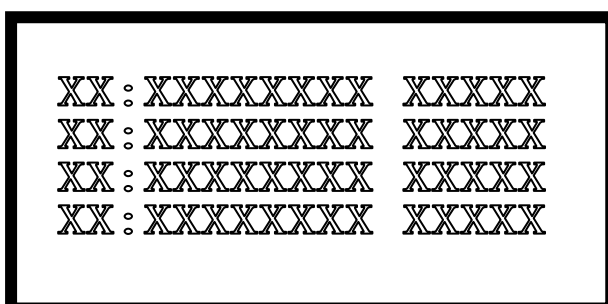



Figure: 3.2-7

Select a certain file by pressing the directional keys (move the cursor with the up and down keys and turn pages with the left and right keys) first, and then press the “Enter” key to enter the submenu. For memory file, it supports such six items as “Copy to USB”, “Run”, “Deletion”, “Work Time Preview”, “Track Frame” and “Clear File Number”.

On pressing the “Enter” key when you select the “Run” item, directly start the processing of this file and the interface shows the same as Figure 8.1-3 (Running Interface); selecting “To USB” and pressing the “Enter” key, this memory file will be copied to USB disk. If copying fails, the interface will show the error information; if copying succeeds, the system will return to the prior interface after the bell rings. On selecting the “Deletion” and pressing the “Enter” key, this file in the memory will be deleted. Selecting the “Work Time Preview” and pressing the “Enter” key, to start the work time preview feature of the certain file. If “Track Frame” is selected, the frame of the graph is previewed. Then if “Clear File Number” is selected, the work number of the certain file is set to zero.

For USB files, it supports such two options as “Copy to Memory” and “Deletion”, the operation of which is similar to that of memory file. In the operation of file copying, if the interface shows the error information, please press the “Enter” key or “Esc” key and the interface will return to the prior one.

 <p>Prompt</p>	<p>This system supports such file formats of USB as FAT32 and FAT16, but it can identify them when the files are put under the root directory of USB. The file name of more than 8 characters will automatically be cut out by the system. The file name that has only English letters and digits will not show when they are copied to the mainboard. The files copied from the mainboard to USB will be placed under the root directory of USB.</p>
--	---

(7) Start/Pause key



Under the four main interfaces it is ok to press the Start/Pause key. Press this key on the system idle interface or work finished interface; the selected file will be processed. Press this key under the running system interface, and the work will be suspended. Press this key under the suspended system interface, and the suspended work will continue.

(8) Origin key



It will respond when this key is pressed under the idle system interface or the work finished interface. If the single setpoint logic is selected by the system, press this key and the mainboard will take the current X/Y-axle position of the machine as the relative origin of the figure; if the multiple setpoint logic is selected by the system, it is invalid to press this key at any time.

(9) Frame key



It is valid to press this key under the idle system interface and the work finished interface. Press this key and the bordering will be operated on the currently selected file.

(10) Esc and Enter key




Press the Esc or Enter key under different interfaces means to confirm or deny this operation.

(11) Directional Keys (Up, Down, Left and Right keys)



In addition to being used for modifying parameters and moving the cursor as abovementioned, the directional keys can be used to move the kinematic axis under such three interfaces as idle, suspended system or work finished interface. Under such three interfaces, press the Left and Right keys to move X axis and press the Up and down keys to move Y axis. If the inching distance is set at 0, the moving time means the time of pressing this key, which means that movement starts after the one of the keys is pressed and movement stops after the keys are released. Where the inching distance is not 0, the corresponding axis will move for the corresponding inching distance after one of the directional keys is pressed once. In the movement processing the speed can be increased or reduced automatically in order to reach the maximum/minimum coordinates. The maximum speed of key movement is the speed value set on the keyboard when the system lies idle.

 Prompt	<p>After the polarity of directional signal for each axle of the machine is adjusted well, if you press the Left key and the X axle will move rightward; and if you press the Up key and the Y axle will move down, which mean the key polarity of the axles moving to the opposite direction is not right. In such a case you should modify the key polarity of this axle.</p>
--	---

(12) Z/U key (Function key) in the middle of directional keys



The Fn key can be pressed when the system is idle or the work is finished. On pressing this key, it will show three pages and nine entries in the following interface:

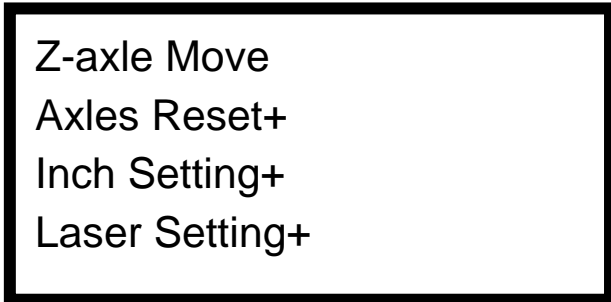


Figure: 3.2-8

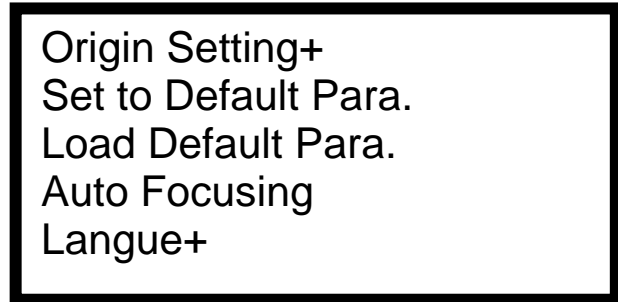


Figure: 3.2-8

1) Press the Up and Down keys to select the cursor position. When the cursor stops at “Z-axis Move”, press the Left and Right keys and the system will move the Z axle. If the inching distance is 0, Z axle will continuously move; if it is not 0, Z axle will move the well-set inching distance value.

2) When the cursor stops at “Axles Reset”, press the Enter key and it will show four entries as follows:

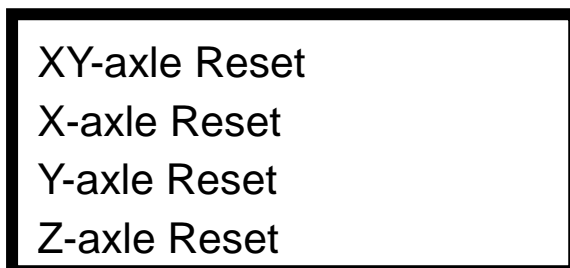


Figure:3.2-10

Press the Up and Down keys to select the desired entry. Press the Enter key and the corresponding axles will reset (Only when the reset of this axle is activated in the manufacturer's parameters can the resetting will function). Press the Esc key to return to the prior menu.

3) When the cursor stops at “Inch Setting” or “Laser setting”, the inching distance or the Laser shot time can be set.

4) When “Origin setting” is selected, it will show below:

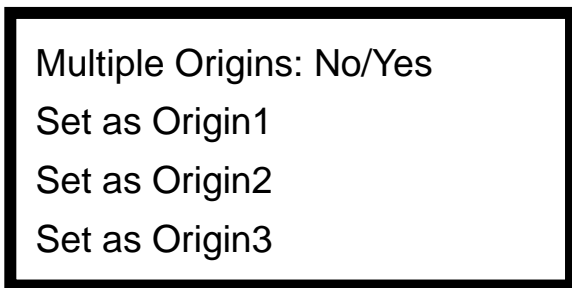


Figure: 3.2-11

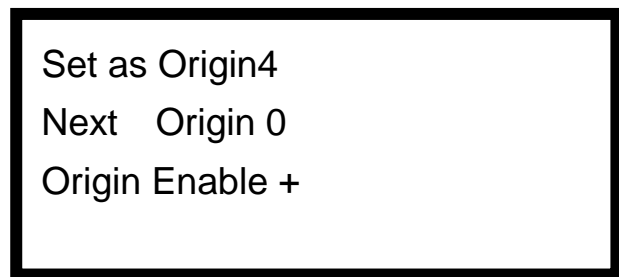



Figure: 3.2-12

- Multiple Origins: “Yes” or “No” can be selected. If you select “No”, the system will use the single-origin logic. You can press the “Origin” key and set the origin, and only this origin can become valid. If you select “Yes”, the system will use the multiple- origin logic and the “Origin” key on the keyboard become invalid. In such a case, the parameter of each origin must be set in the menu as follows.
- Set as Origin 1/2/3/4: after the multiple- origin logic is enabled, you can stop the cursor at “Set as Origin 1/2/3/4”. Press the “Enter” key on the keyboard and the system will take the coordinate figures of current X/Y axes as the corresponding ones to the origin 1/2/3/4.
- Next Origin: there are such five digits as 0~4 for option, which are the origins to be used for the next figure. Origin 0 means the origin set by the “Origin” key on the panel in the single- origin logic. 1~4 means the serial number of the origins in the multiple- origin logic. Next origin can be modified to any one of origin 1~4, so as to control the start location of next work (the premise is that the origin is enabled), but it can’t be modified to origin 0.
- Origin Enable+: after the multiple-origin logic is enabled, the four origins can independently be prohibited and enabled.

 Prompt	<p>Once the multiple- origin logic is selected and if the serial number of the next origin is 1 and four origins are enabled, when the memory file function is started or the processing file is uploaded into the PC and this file selects “Take the Original Origin as current Origin”, the work started for each time will use different origins. The rotation order of origin is 1->2->3->4->1->2.....</p>
--	---

5) After the “Set to Default Para” in Figure 3.2-9 is selected and the Enter key pressed, the interface will show the specific password to be entered when set as default parameter. After the manufacturer regulates all parameters of the machine well

(including all manufacturer parameters and user parameters), this function can be used to store the well-regulated parameters to help users to recover the original parameters (including all manufacturer parameters and user parameters) through selecting “Load Default Para” when they regulate parameters improperly.

6) After the “Load Default Para” in Figure 3.2-9 is selected and the Enter key pressed, the “Successful Recovery” dialog box will pop up to prompt that all manufacturer parameters and user parameters are recovered successfully. You can return to the previous menu by press the Enter key.

7) When the cursor stops at “Auto Focusing”, press the Enter key to search for the focus(When there is z axes, and the z axes reset function is enabled, the auto focusing is valid); press the Esc key to return the prior menu.


8) The item “Langue” helps you to select a appropriate langue which is displayed on the panel.

I Chapter 4 Alignment Standards of Optical Path


During common use, there may appear some deviation with the optical path, resulting in no laser or light path is abnormal, then please refer to the following method to adjust the optical path:

Step one: First to ensure laser beam from laser tube to the center of 1# reflector mirror.

Step two: Affix multi-storey double sticky tape paper on the 2# reflector (Or other objects can be marked on), move laser beam to closest location of laser tube, press pulse (choose suitable power), get a spot on the paper (with special attention: In order to prevent the laser radiation wounding, with a piece of cardboard first to test the approximate location of the spot, and then adjust).

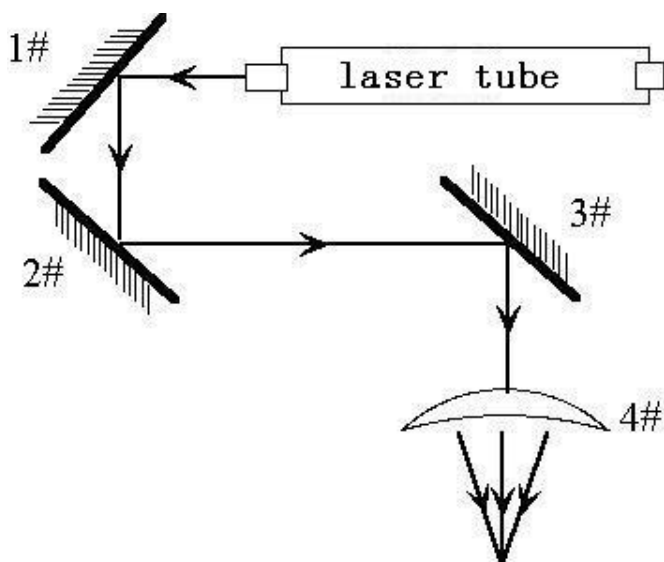


Step three: Move away the beam to the position far from the laser tube, press pulse, get another spot on the paper.

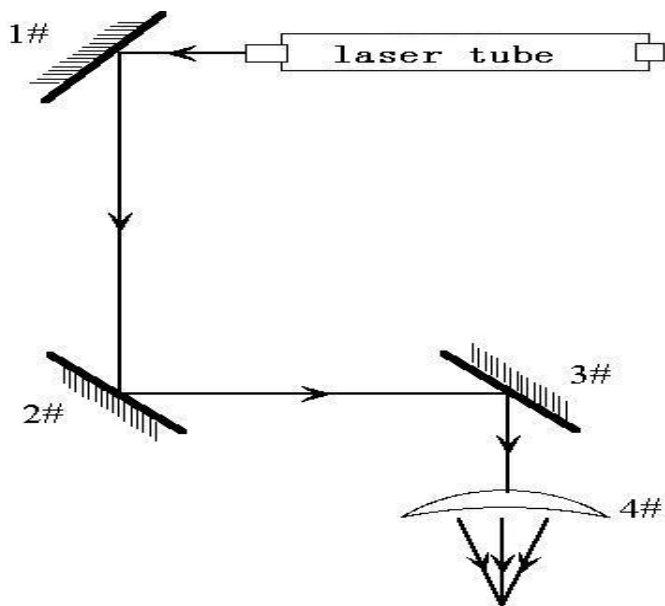


Step four: If the two spots are not superposition, adjust the screws on the back of the 1#mirror to make the laser fire on the same position as the first spot.

Step five: Repeat the second to the fourth steps until the two spots overlap completely. Moreover, the spots should be in the center of the hole.

Step six: Affix multi-storey double sticky tape paper on the 3# reflector ,move laser head to the nearest position from 2# mirror, press pulse(choose suitable power),get a spot on the paper.

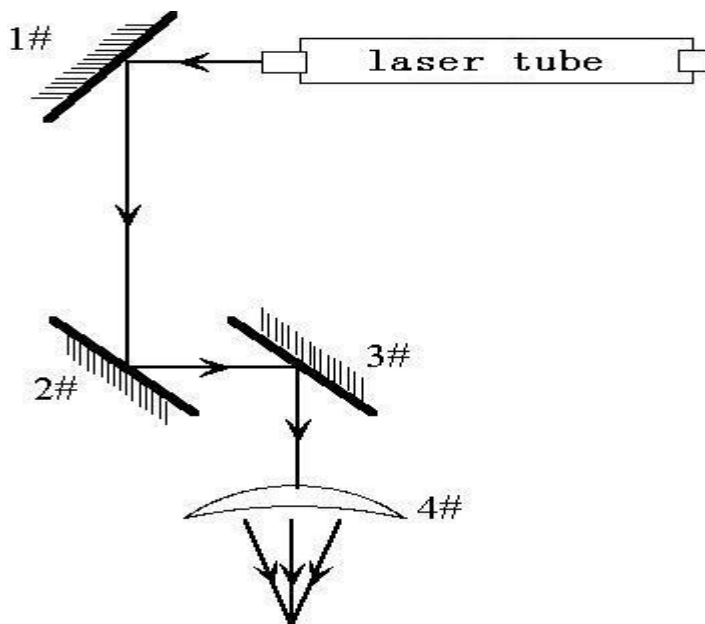

Step seven: Move away the laser head to the position farthest from the 2# mirror, press pulse(first to detect the approximate location of laser with a piece of cardboard to prevent wounding),get another spot .

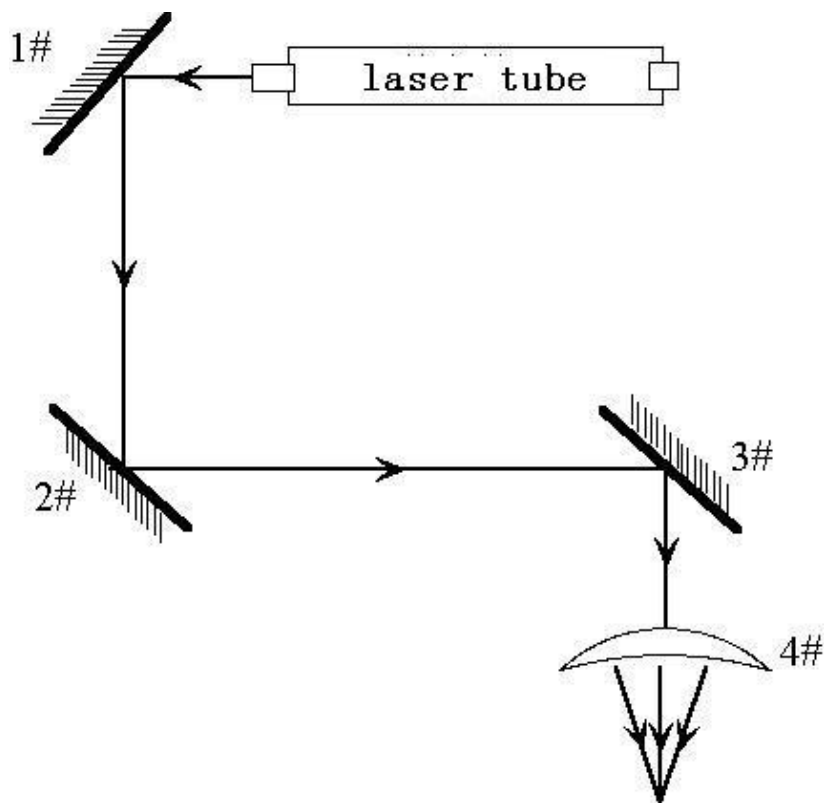


Step eight: If the two spots are not superposition, adjust the screws on the back of the 2# mirror to make the laser fire on the same position as the first spot.

Step nine: Repeat the sixth to eighth steps until the two spots overlap completely. Moreover, the spots should be in the center of the hole.

Step ten: Affix multi-storey double sticky tape paper on the 3# reflector, press pulse, get a spot on the paper. If it is in the center of light hole, then pass.

Step XI: If the laser light is not in the center of light hole, as below figure:

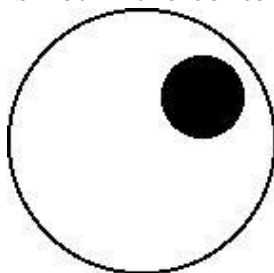

In the left Figure, the spot is upper and right biased.

Top to bottom bias: can only raise or lower the laser tube.

Inside and outside bias: only move the laser tube in or out to adjust.

In this case, it is essential to lower the laser tube (here refers to low-voltage side of the laser tube), and then, from the beginning of all the re-adjustment of the first step.

Note: The operator can't do the above working until after the professional training. Otherwise, the operator do this working must with the help of the professional .The operator must pay attention to security when adjusting, to prevent the laser radiation wounding.

I Chapter 5 Daily Maintenance and Common Faults

The stable working of the machine is inseparable with normal daily operation and maintenance. Here are some common daily maintenance and common faults analysis:

I.5.1 Daily maintenance

1. Replacement of the cooling water (clean water tank and replace recycled water once a week are recommended):

Quality and temperature of the cooling water can affect the lifetime of laser tube directly, suggest use purified water or distilled water, and water temperature should be below than 35 °C. When higher than 35 °C, please replace cooling water, or add ice cubes to lower the water temperature, (cooling device is recommended, or use two water tanks).

Note: To ensure that the laser tube full filled with cooling water before machine working.

2. Cleaning of Water Tank

First of all, turn off power, disconnect the water inlet pipe, let the inside water of the laser tube flow into the water tank automatically, open water tank, take out the water pump, clean water pump and water tank, put the pump back to water tank, insert the water pipe which connect water pump to water inlet mouth of the machine, finish all joints, then replace cooling water. Turn on the water pump power supply isolately, let the pump run 2-3 minutes (make laser tube full filled with water).

3. Cleaning of Exhaust Fan

After long time using, inside of fan will accumulate much solid dust, so the exhaust fan will make a great noise, and it is not conducive to the exhaust .When the exhaust effect become poor, we have to clean the fan and smoke pipe .Firstly, turn off the power supply, remove the two pipes from the fan, clean dust inside of the pipes, and then clean the dust inside of the fan.

4. Cleaning of Lens (daily cleaning is recommended before work, equipment must be in shutdown state)

As we have talked before, engraving machine has three reflector mirrors and one focus lens (1# reflector mirror is near the light outlet mouth of laser tube, the upper

left corner of the machine, 2# reflector mirror is at left side of the beam, 3# reflector mirror is on the top of laser head, the focus lens is located in the bottom part of the laser head), the laser is send out by the mirror reflecting and focus lens focalizing. Mirror is easy to be dirty, resulting in laser loss and mirror damage, you needn't remove 1#,2# and 3# mirror when cleaning them, Just using a cotton bar to dip some cleaning solution (acetone or alcohol) , swab carefully by rotating from central to edge of the lens.

Take out the focus lens from the laser head, using the same method clean it, after cleaning, put it back.

Note: ① you should wipe the lens carefully, cannot damage the surface coating; ② you should do that lightly, to prevent falling; ③keep concave side downward when install the focus lens.

5. Cleaning of Guideway (suggest cleaning every two weeks, equipment must be in shutdown state)

First of all, move the laser head to the far right (or left),wipe with a dry cloth until shiny clean, together with a little oil (sewing machine oil is recommended),push the laser head several times slowly along the guide, so that lubricant can be evenly distributed. Clean and lubricate the Y axis two guideways is the same as X axis.

Note: Please prepare for cleaning Guide - dry cotton cloth, lubricating oil.

6. Optical path inspection

Optical path system of the laser engraving machine is completed by the mirror reflection and focus lens focusing, and there is optical path bias with the focus lens, but the three mirrors is fixed by the mechanical part, optical path bias is very possible for them, although there is no optical bias normally, we still suggest you check optical path before working.

Please get detailed explanation from Chapter 4 "Alignment Standards of Optical Path "

I.5.2 Common Faults Analysis

No.	Phenomena of Malfunction	Analysis method	Solution
1	Open the machine but no movement	Check power supply of machine connects well or not	Make all power supply electrify again
		Mainboard parameter is right or not	Correct the parameters according to software operating manual
2	Working with nonstop laser	Mainboard parameter is right or not	Correct the laser parameters according to software operating manual
3	Desultory light when working	Check water circulation is swimmingly or not	Clean water tank, water pump and water pipe
		Voltage is stable or not	Add regulator for the laser machine
4	Self-test abnormal when starting	Mainboard parameter is right or not	Correct the X and Y axis direction ,limit position parameters according to software operating manual
5	After output data ,machine no action	Check whether the data port choice is correct.	Choose correct port
		Check whether turn on the machine	Turn on the machine
		Check whether connected ground wire for the machine	Connect ground wire
		check whether installed the USB driver	install the USB driver
6	No laser when working	Check whether optical path is bias	Adjust the optical path
		Check whether the cooling water is running	Ensure the water is running
7	Can't detect the laser equipment	The computer or USB communication problem	Change computer or USB line

I Chapter 6 Warranty Regulations

I 6.1 Warranty Periods

From the date of purchase, whole year warranty (except consumables). Optical lenses and the laser tube are consumables, three months warranty.

I 6.2 Warranty Clauses

This warranty is for products of our company.

During the warranty period and under the correct use, malfunction can be based on this warranty terms, show the warranty card or invoice, enjoy our free maintenance service.

The following cases, can't enjoy the free service, a fee will be charged according to the concrete condition.

- 1) Maintenance services not caused by the machine quality;
- 2) Overstep the warranty period;
- 3) Can't show or alter warranty card;
- 4) Didn't fulfill the contractual obligation;
- 5) Without the company agrees, privately to tear open outfit, modification, maintenance of product;
- 6) Equipment failure due to human or force majeure factors.

The company only assume the legal obligation for the product itself, but don't assume other responsibilities which caused by the using of the products.

II RDCAM V6.0 User Manual

II Chapter 1 Overview

II.1.1 Laser engraving cutting system introduction

Laser engraving cutting system through a computer numerical control machine tools to achieve effective control, according to the user's different requirements of the completion of processing tasks. This manual describes how to use the software to complete the task of laser processing

II.1.2 Environmental requirements

- (1) Windows XP operating system and above, XP recommended。
- (2) Above CPU586,above PIII or PV recommended。
- (3) Memory, above 1G recommended

II.1.3 Software running

Embedded software can be embedded in CorelDraw、AutoCad、CaDian2010 and Illustrator CS5 software, the software is similar to the operation, embedded software, installation methods, please refer to <<RDCAM software Setup Manual >>

1.3.1 Run CorelDraw

1>Run CorelDraw。

2>Import graph to CorelDraw, or draw some graphics。

3>Click toolbar  button , then RDCAM running。

1.3.2 Run AutoCad

1> Run AutoCad

2> Import grahic to AutoCad, or draw some。

3>Click toolbar  button

then RDCAM running.

1.3.3 Run Cadian2010

1>Run Cadian2010

2>Import graphic to Cadian, or draw some.

3>Click toolbar



button

then RDCAM

running

1.3.4 Run Illustrator CS5

1>Run Illustrator CS5.

2> Import graphic to Illustrator, or draw some.

3> Click toolbar



button




, then RDCAM running.


II Chapter 2 Software installation

II.2.1 Install steps

- (1) Double-click the RDCAMSetup.exe under the installation directory, the following dialog box appears:

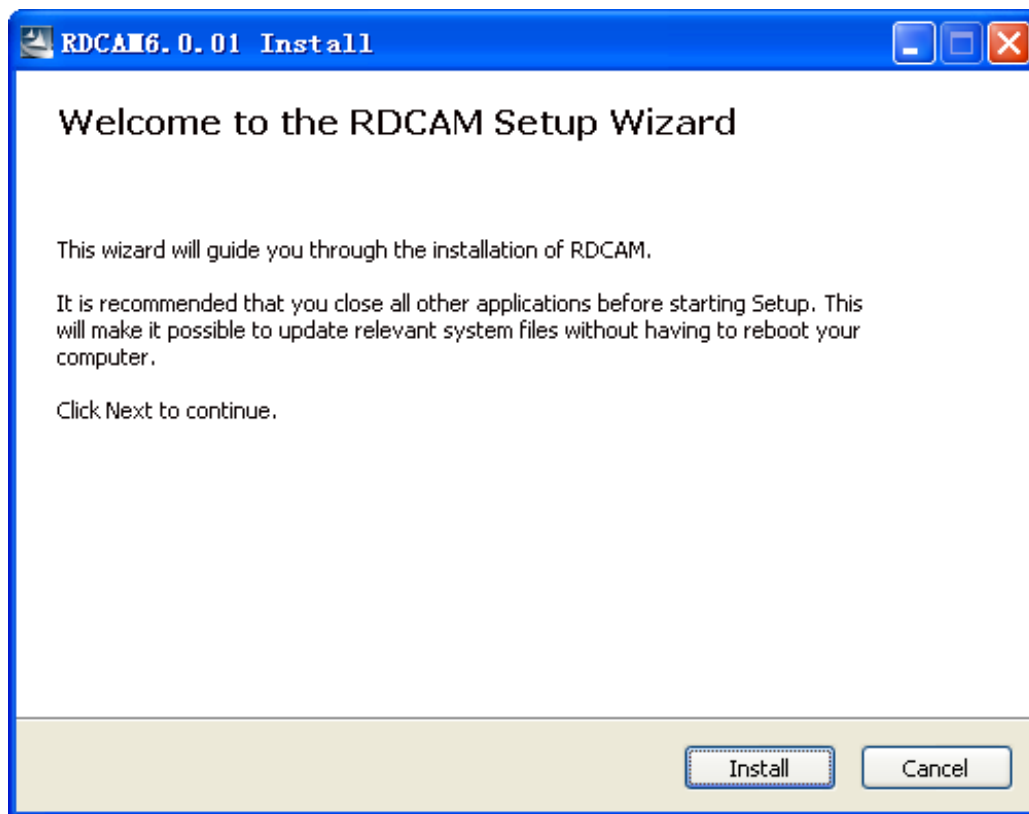

- (2) Click **【Install】**, when extract copy is to be completed, the installation main interface appears:

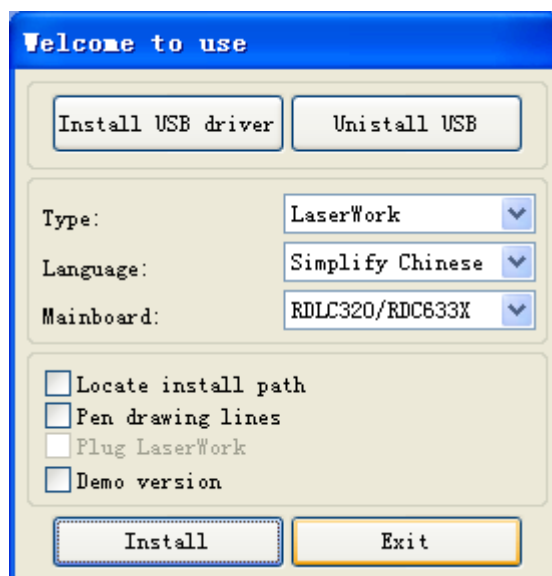


II.2.2 Installation settings

The installer can choose different installation content.

- 1> Install/Uninstall USB driver , reference 《Install USB driver》
- 2> According to the different customer application needs and the habit of using to select the type of software
 - a. Stand-alone software LaserWork.
 - b. The software that plug-ins to CorelDraw. Support the version from Coreldraw11 to X5.
 - c. The software that plug-ins to AutoCad. Support the version from 2004 to 2010.
 - d. The software that plug-ins to Cadian.
 - e. The software that plug-ins to Illustrator.
- 3> Choose a different installation languages
At present, it support Simplified Chinese, Traditional Chinese, English and the custom language type.
- 4> Select the software matches the motherboard
The software can support three kind of motherboards:RDLC430、RDLC320、RDC633X. Both RDLC320 and RDC633X are compatible, but RDLC430 is different. So, please choose the corresponding software with motherboard. Otherwise, it does not work.
- 5> Locate install path
When install the LaserWork, default install path is “C:\”, for change the install path, check this option.
When install the plug software RDPlug, under normal circumstances, the install program will locate to the target software automatically. If the installer does not locate to the target software automatically, you need to check this option, and locate to the target software manually.
- 6> Pen drawing lines
This option is only applicable to a particular machine, which has the function of the chalk line, ordinary machines do not need to check this.
- 7> Plug laserwork
The installer default install a special plug-ins RDPlug, if the users are more accustomed to using LaserWork program ,can check this.
- 8> Demo version installation
According to the type of software installation, the installation language, the choice of motherboard generate different versions of the DEMO Software.

II.2.3 Installation

Choose the type of software, installation language and the appropriate motherboard. Click **【Install】** to install the software. After installation is complete, the following dialog box appears to prompt the user that the software has been installed successfully.

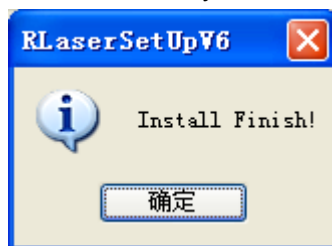

II.2.4 Exit

After installing the installation needed. Click **【Exit】** to end the installation process.

Because of the possible need to use several installation, so the installation dialog does not automatically exit, until users click button **【Exit】** .

II.2.4 Other matters

1> Before installing the plug-in software, the software that has been articulated should be shut down. After installation, restart the software.

2> The regular version and the DEMO version of the plug-in software is covered by each other.

3> In the default installation path, the normal version and the DEMO version of the independent software and different types of independent software motherboard with each other.

For the same time to install two versions, select the **【Locate install path】**. The regular version and the Demo version should be installed in the different location.

In addition, need to the appropriate software installation location, manually add a desktop shortcut for the software.

4> Modify the information of manufacturers

In the package, in addition to RDCAMSetup, there are four text files.

Info_Sche、Info_Tche、Info_En、Info_Other, the four files correspond to the software information of manufacturers that be displayed in Simplified Chinese, Traditional Chinese, English and the custom language. If the four text is modified, manufacturer information also will be installed when the program was installed.

Open the text that should be modify, an example in Simplified Chinese:

0 = Company Name:


1 = ... (Fill in company name here)

And so on, the company information in other languages is the same set.


II.2.5 The plug-in of CorelDraw installed

Plug-in software support the version from CorelDraw11 to X5, but some simplified versions of CorelDraw is not supported. Here to the installation of CorelDraw12 as an example to introduce the installation process of plug-in software. If not specified, it is referring to CorelDraw12.

Before installing the plug-in software to run CorelDraw.

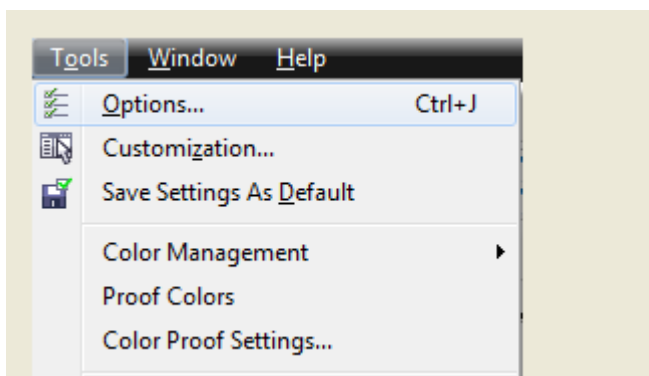


Select **【Tools】** -> **【Option】**

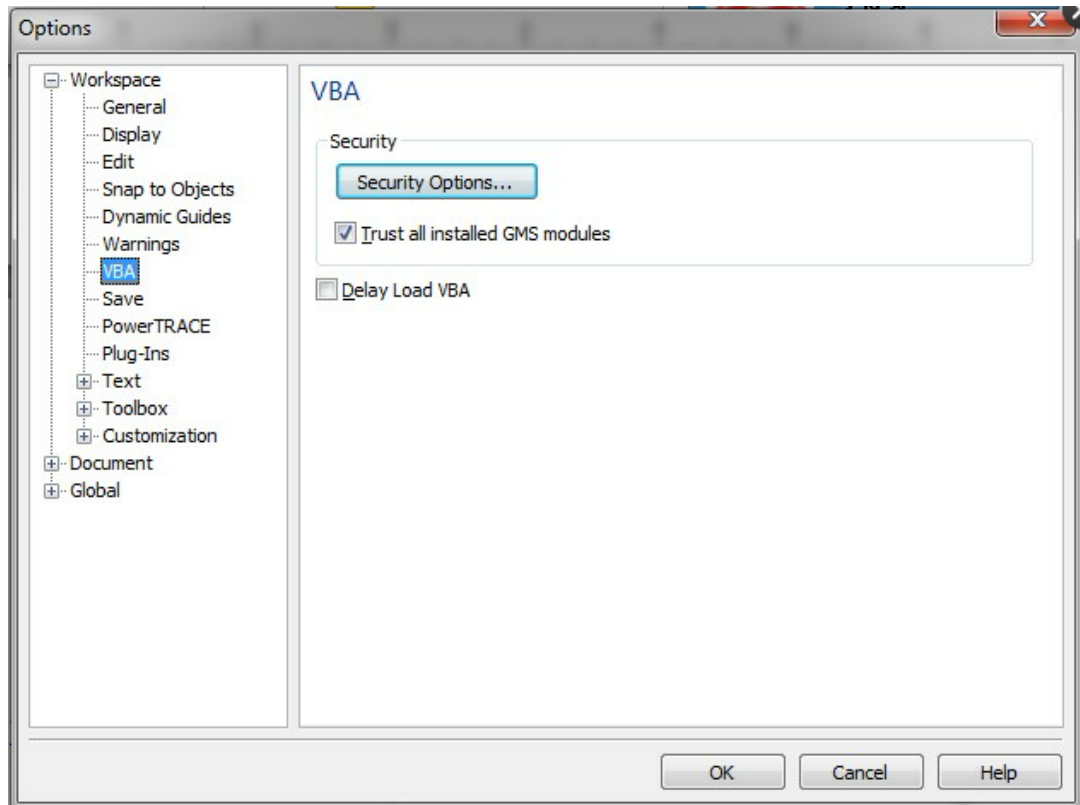

In the pop-up dialog box, select VBA, on the right do not check the “delay load VBA”, then OK, and exit the application CorelDraw.

Run the program of installation, choose “Type” to “CorelDraw_Laser”, then click

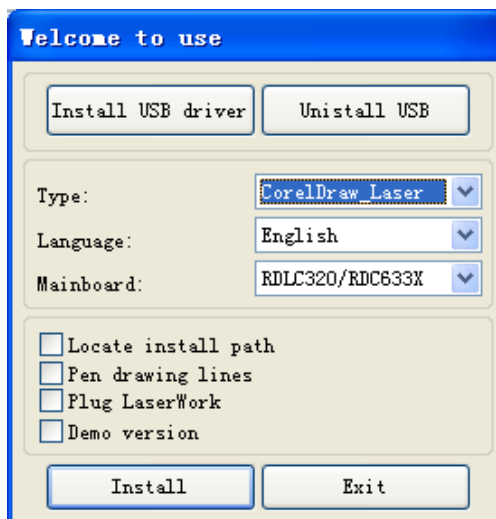


【Install】 .

The installer will automatically install the plug-in software to the all versions of CorelDraw RDCAM that are installed on the operating system and pop-up dialog box.




For some versions of CorelDraw (such as green version) may not automatically navigate to the locate where the CorelDraw is installed on. Only need to check “Locate install path” on the installation software, and then manually browse to navigate the folder location to the root of CorelDraw software where the plug-in program should be installed on.

Exit the installation program, and run CorelDraw.


Toolbar in the CorelDraw interface will appear .

If the button does not appear, you should select **【Tools】** -> **【Option】** in the menu.

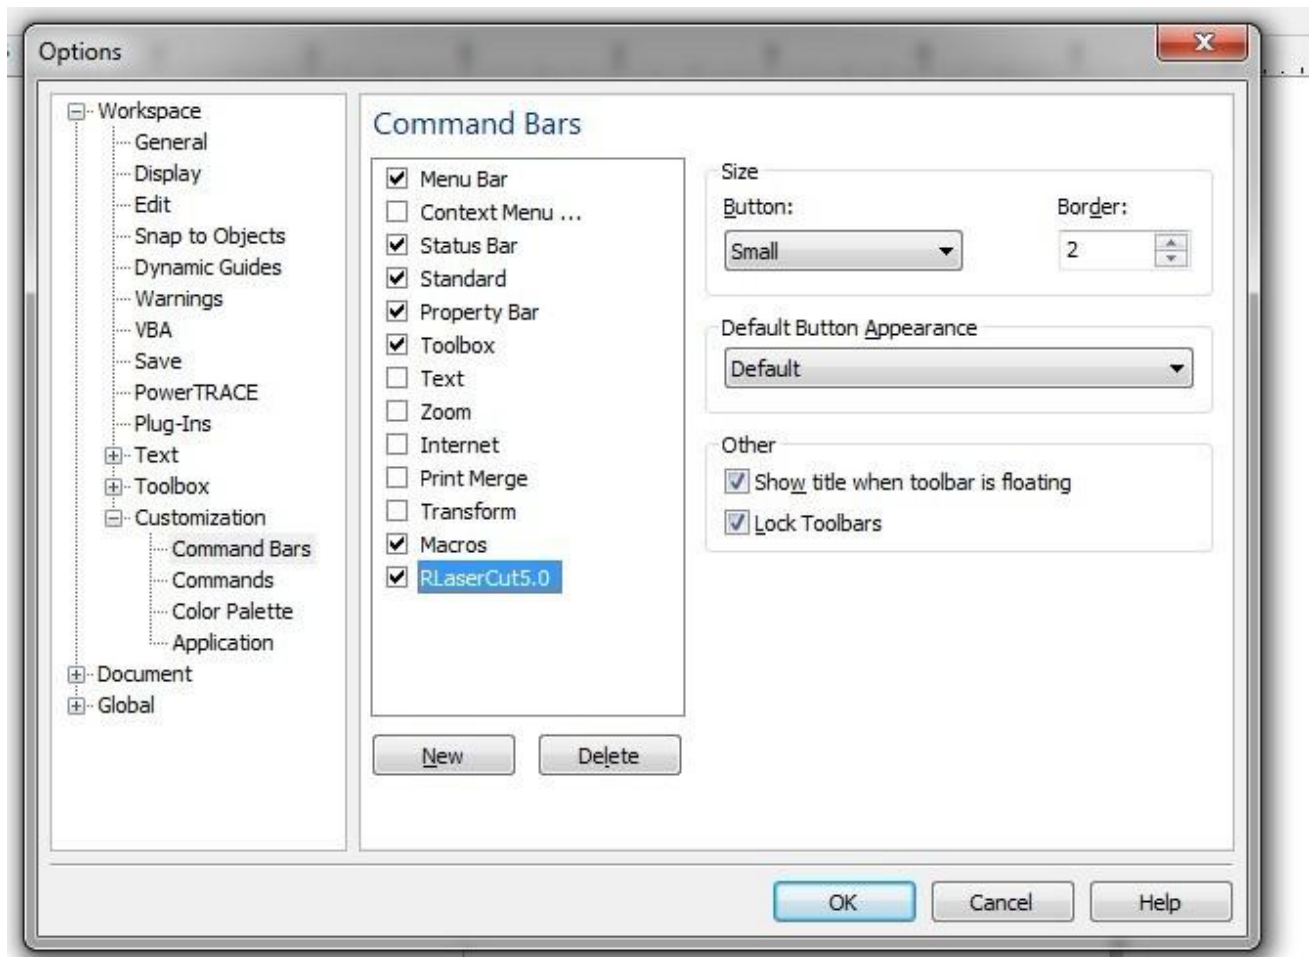


On the left select the “command bar” and then check “Visual Basic applications”, and select “OK”.



, this tool bar will appear in the software, select the first button .

If the toolbar does not appear, reinstall the software CorelDraw.

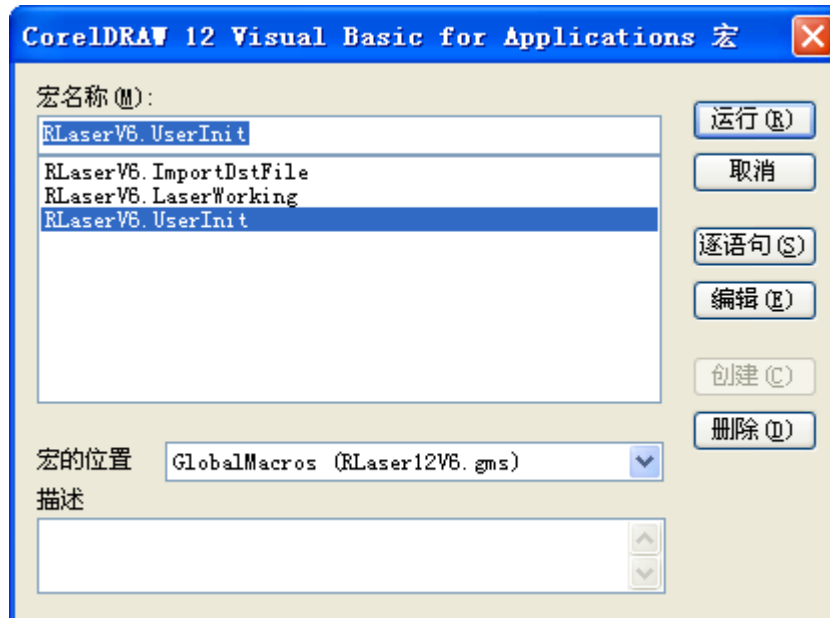


In the “macro location” select “GlobalMacros(RLaser12V6.gms)”.
And the “Macro name” choose the RLaserV6.UserInit. And then “Run”.

II.2.6 The plug-in of AutoCAD installed

AutoCad plug-ins can be used to AutoCad2004-2010 non-simplified version. Here to the installation of AutoCad2004 as an example to introduce the installation process of plug-in. If not specified, it is referring to AutoCad2004. Close all running AutoCad programs before AutoCad plug-in installed.

Run Setup. Select “AutoCad Laser” as The “Type”, and then click **【Install】**.

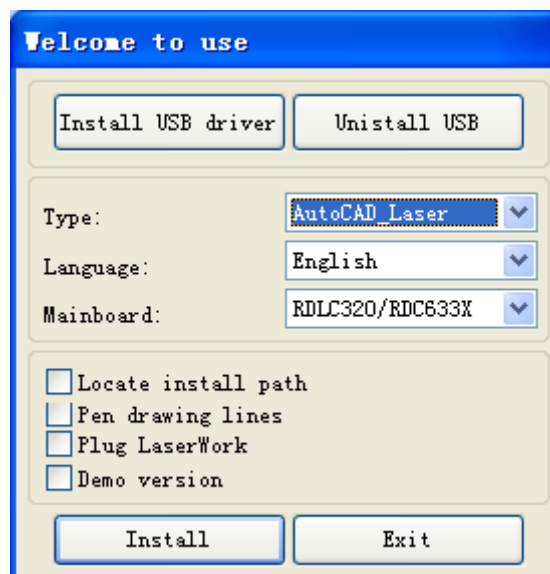

Setup will automatically install the RDCAM plug-in software to all versions of AutoCad that were installed on the operating system and pop-up dialog box.




For some versions of AutoCad(such as green version) may not navigate to the locate where the AutoCad was installed on. Only need to check "Locate install path" on the installation software, and then manually browse to navigate the folder location to the root of AutoCad software where the plug-in program should be installed on.


Exit the installation program, and run AutoCad.

Toolbar interface in AutoCad will appear 

If the button does not appear, select **【Tools】 -> 【Macro】 (A)->Macro(M)** in the menu.

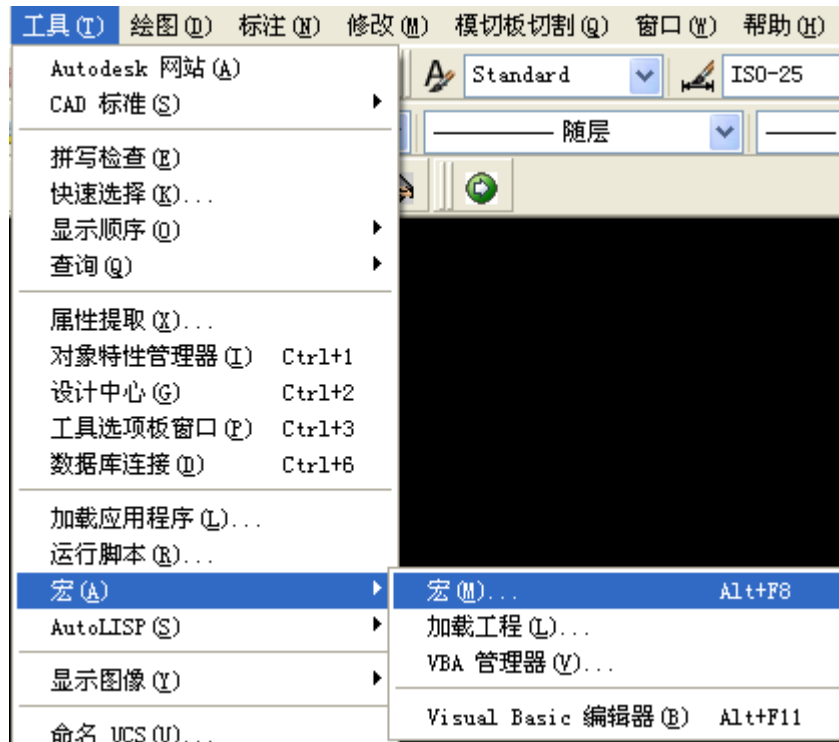

If you can not find it in the menu, it is because the version of AutoCad may not support the plug-in. Please re-install a full version of AutoCad.

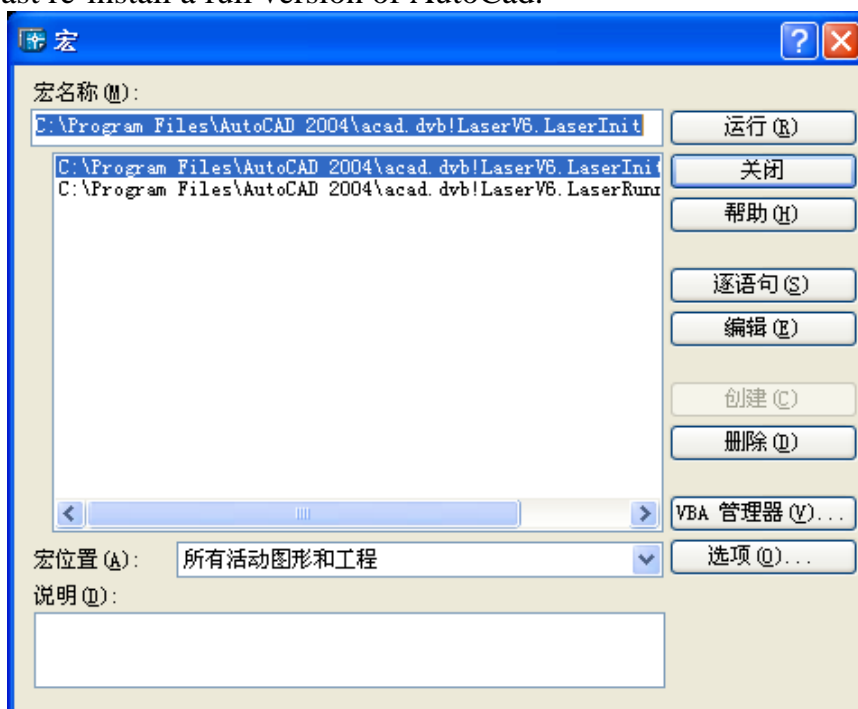

In the pop-up dialog box, select LaserInit, and run.

The plug-in toolbar can occur if you select this option, but when you close AutoCad and then open the AutoCad software again. But also do not see the toolbar. Then it is possible that your computer is infected with a virus. You must manually to define the boot loader works of AutoCad, or you can re-check for viruses or reinstall the operating system and AutoCad software.

Manual process of loading plug-in as follows, select the menu **【Tools】** ->AutoLISP->加载.



In the dialog box, you should to choose the “Content” button that was under the “Start Group”.



Select “Add” button in the pop-up dialog box. In the AutoCad directory, manually locate and select acad.dvb,acad.lsp. And loading these two files.




Adding the file, close the dialog box, and then close the AutoCad. You can see the plug-in toolbar when you open the AutoCad again.


II.2.7 The plug-in of Cadian installed

Cadian plug-in are now available for the non-simplified of Cadian2010. The other version is not tested. When Cadian was installed, you should close the running Cadian procedures.

Run Setup. Select “CaDian Laser” as the “Type”. And then click **【Install】**.

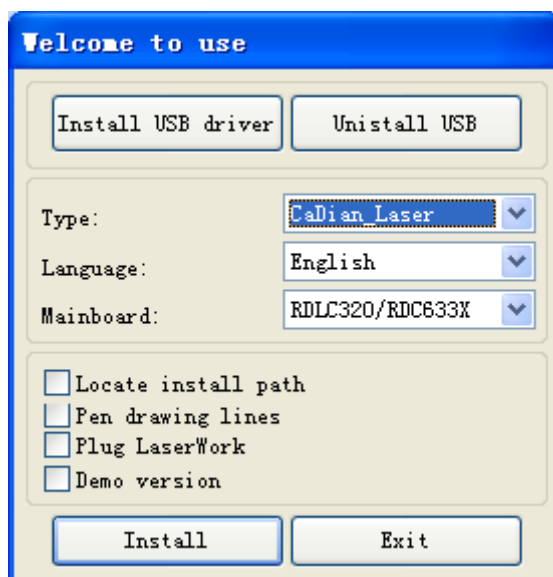

As CaDian is green software, installation program can not automatically find the installation directory where the need to manually locate the installation path. Select the CaDian installation folder, and click “OK” button.

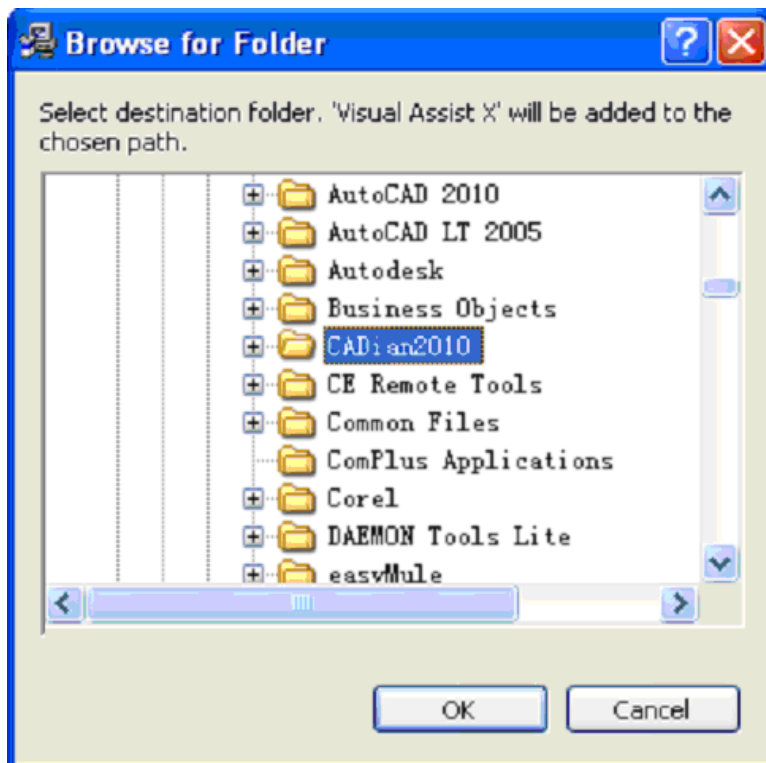

After installation is complete, the following dialog box appears.




Exit the installation program, and run CaDian.

II.2.8 The plug-in of Illustrator installed

Illustrator plug-in are now available for the non-simplified of Illustrator CS5. The other version is not tested. When Illustrator was installed, you should close the running Illustrator procedures.

Run Setup. Select "Illustrator_Laser" as the "Type". And then click **【Install】**

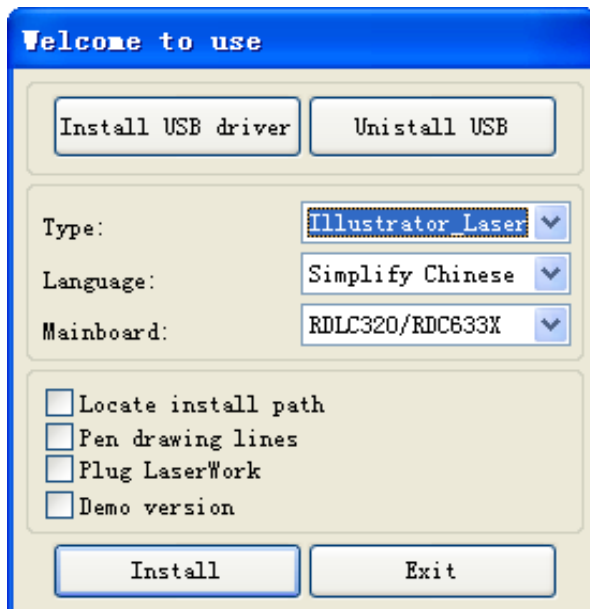

As Illustrator is green software, installation program can not automatically find the installation directory where the need to manually locate the installation path. Select the Illustrator installation folder, and click “OK” button.



After installation is complete, the following dialog box appears.




Exit the installation program, and run Illustrator.

II Chapter 3 Introduction of CorelDraw_Laser

II.3.1 Main interface

After RDCAM running, will see the following interface. Familiar to this interface, will helpful to use the software for laser working.

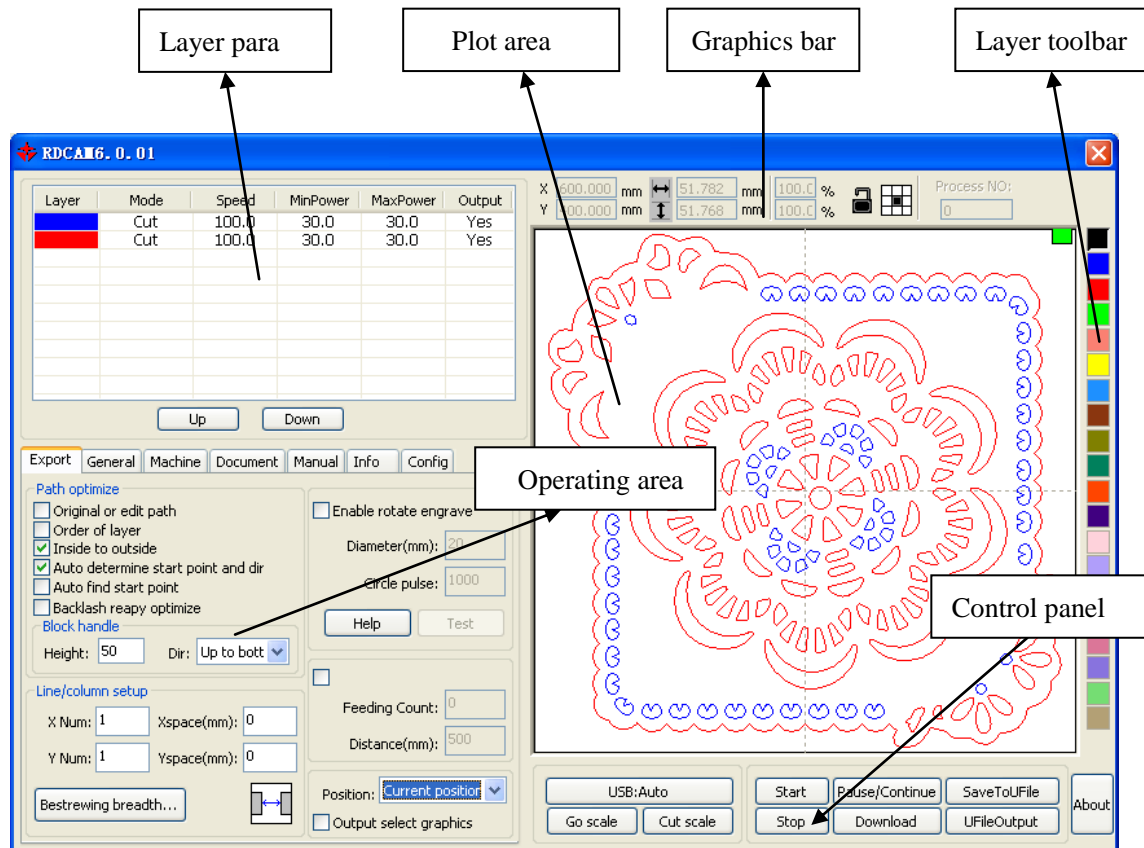

Layer para: Depending on the graphics processing requirements layer configuration process parameters.

Plot area: Display graphics to be processed and simple graphics rendering.

Graphics Bar: Graphics property bar is the basic attributes of graphics operations, including graphic location, size, scale, number processing.


Layer Toolbar: Change the color of the selected objects.

Control Panel: All operation relate to processing.

Operating area: basic operation.


II.3.2 Language settings and machine information

In addition to installation process can set the software language type, you can easily switch in different language.

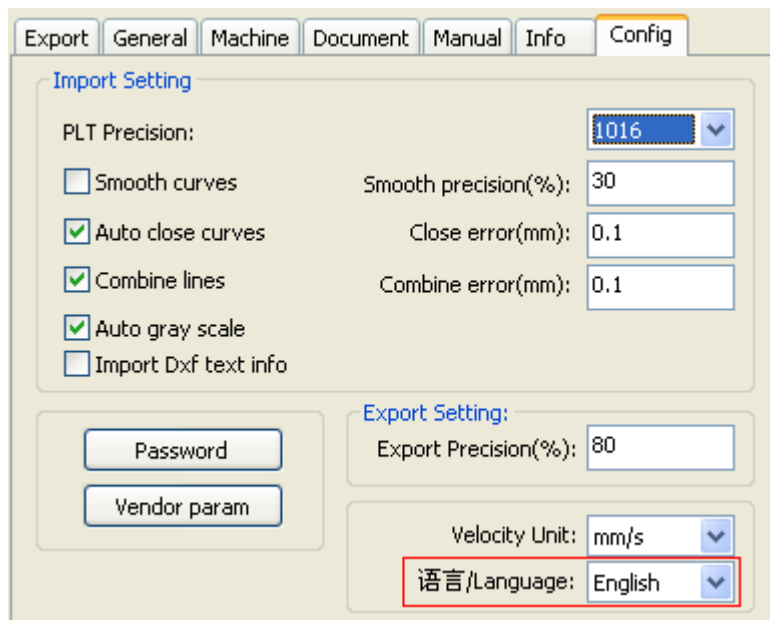

Select the desired type of language, can easily switch between different languages.
To obtain manufacturers information, so that we can provide you with better service.

Click Menu Bar **【Help】** -> **【About】** .

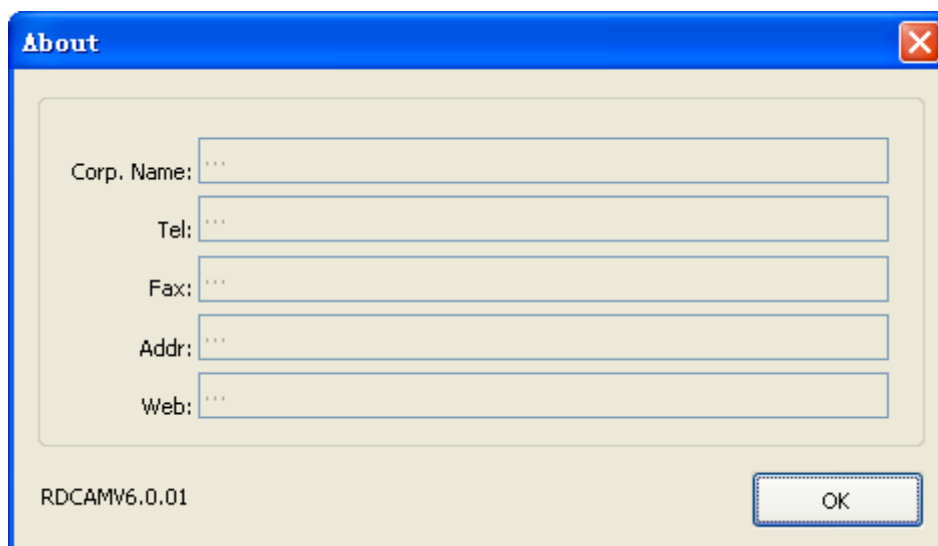


The bottom of the dialog box shows the current software version number. As different versions of software may be have some differences on the functions and interfaces, you can easily contact and communicate with manufacturers through software version number.

II.3.3 File parameters setting

- ◆ **PLT Precision:** According to the accuracy of the original plt file to select the appropriate import unit.
- ◆ **Smooth curves:** When import vector file, automatically smoothing the original curves. For the original graphic is smooth or need to repeatedly adjust the beset smoothing effect, you can uncheck this button. Do not do smoothing curves may reduce time of import processing.
- ◆ **Auto close curves:** According to close tolerance automatic check and closed curve

- ◆ **Combine lines:** According to merger tolerance, auto-connecting curves.
- ◆ **Color map automatically switch to grayscale:** Because under normal circumstances, graphics are based on grayscale. If the imported bitmap is a color image can be converted to grayscale.
- ◆ **Import Dxf text info:** When the user need only Dxf the graphic information, not need the text information within the file, do not check this.
- ◆ **Dxf Unit:**
The default dxf unit of software is MM. Users can change it to CM、inch and custom.
- ◆ **Export precision:** The precision of export output file (rd format).
- ◆ **Velocity unit:** Software supported two types of speed unit: mm/s、 m/min. Selected according to usage. After it was selected, the speed of parameters on the interface unit will change with it.

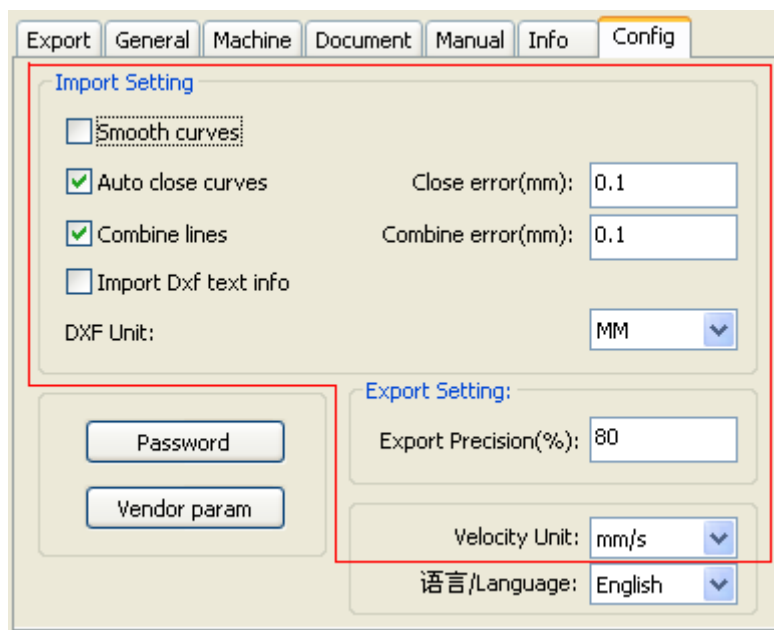

II.3.4 Object Selection

In the process of drawing and edit graphics, first of all is to select the object. When the object is being selected, in the center of this object will have a shaped mark “×”, and surrounded by eight control points.

Click menu **【Select】**, switch to status “Select”. Under this status, you can select object. The following are five kinds of method of selecting

- ◆ Shortcuts **Ctrl+A**, select all objects。
- ◆ Click mouse on the screen to select single object



◆ Select object using select box

Press the mouse and drag, as long as the box come into contact with the object will be selected.

◆ Increased select object/minus select object

Increase select: Press “Shift” key, click or box select to increase select object.

Minus select: Press “Shift” key, click or box select the selected object.

◆ Select object according to layer

Layer	Mode	Speed	MinPower	MaxPower	Output
	Cut	100.0	30.0	30.0	Yes
	Cut	100.0	30.0	30.0	Yes
	Cut	100.0	30.0	30.0	Yes
	Cut	100.0	30.0	30.0	Yes

Up Down

Right-click the selected layer, then the part of all objects in the layer will be selected.

II.3.5 Object Color

The color of object that is the color of the object contour. You can click the color button on the Layer Bar to change the color of the object has been selected. The color of the pressed button is the color of current layer.




II.3.6 Object Transformation

Transformation of object mainly include: object location、 orientation and size. But does not change the basic shape of the object and its characteristics.

Transformation of object for users, provides a convenient user interface.


You can also use the Object Properties toolbar



You can also use the right transformation tools to transform and copy the graphics.

II.3.7 Place object


Place the object is to facilitate the view or position. Right-click menu functions can be docked in the object will be placed on the page selected several special position (upper left, upper right, lower right, lower left, and center of the page), and if placed in another location, you can use the 2.6 object transform feature implementation.

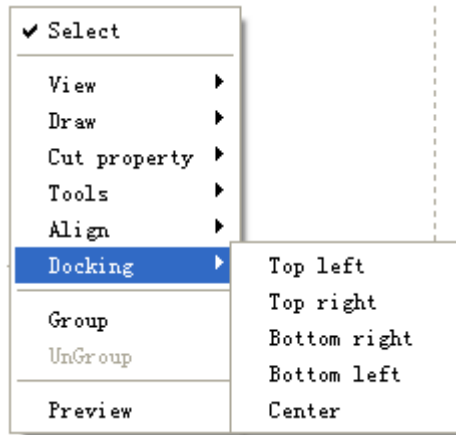

II.3.8 Object align

Select multiple objects, use the alignment tool in the context menu on the selected object to a variety of publishing operations.

Align the base object: Press SHIFT for a single object in turn check for an object to the final choice as a benchmark. Curve number for the marquee to the object at the bottom for the benchmark.

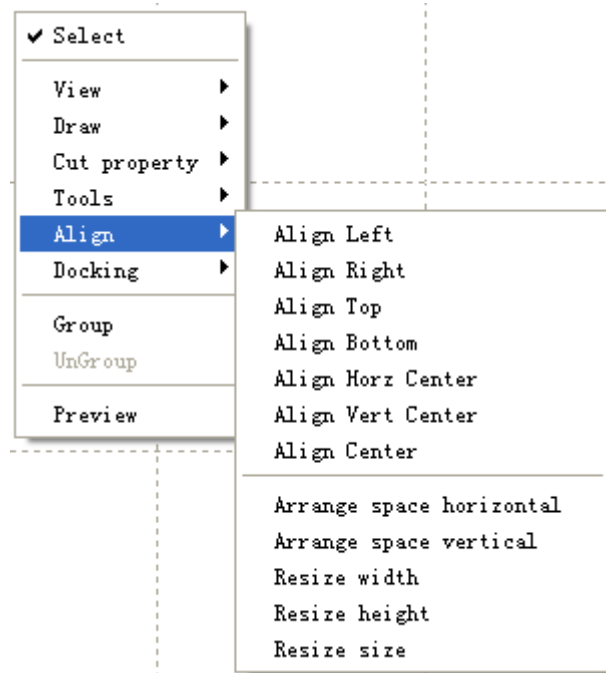

II.3.9 Object View

The view of the object can be used in the viewer right-click menu.

◆ **Translation:** Click **【View】 / 【Move】**, Then hold down the left mouse button in the drawing area, drag the pan.

◆ **Marquee view:** Click **【View】 / 【View select】**. Mouse to the drawing area, hold down the left mouse button and drag in the drawing area displays a marquee in the dashed

box, release the mouse, were framed in the region will be the largest share in the drawing area to display.

◆ **View page:** Click **【View】/【View Page Frame】**. You can view the full page display.

◆ **View data:** Click **【View】/【View Data Frame】**. You can view the full selected object.

II.3.10 Group and unGroup

Edit graphics, and sometimes need to be a part of the operation as a whole (such as multi-line text layout).

Method: Select the group of graphics, and then select the menu **【Edit】 / 【Group】** (**【UnGroup】**).

II.3.11 Basic graphics creation

◆ Line

Click menu **【Line】**, drag the mouse on the screen you can draw an arbitrary line. Press the “Ctrl” key while dragging the mouse to draw horizontal or vertical line.

◆ Polyline

Click menu **【Polyline】**. Drag the mouse on the screen you can draw an arbitrary polyline.

◆ Rectangle

Click menu **【Rectangle】**. Drag the mouse on the screen you can draw an arbitrary size rectangle.

Press the “Ctrl” key while dragging the mouse to draw square.

◆ Ellipse

Click menu **【Ellipse】**. Drag the mouse on the screen you can draw an arbitrary size ellipse. Press the “Ctrl” key while dragging the mouse to draw round.

◆ Point


Click menu **【Point】**. Click the mouse on the screen, you can draw a point.

II.3.12 Important Tool

Here are some frequently used tools. Using these important tools, can make the current document in the graphics more orderly, and make the processing of output more fast.

II.3.12.1 Manual sorting and the set of cutting point and the cutting direction



Software provides users a convenient tool for the manual sorting. Select **【Edit】 -> 【Set cutting property】**. Cutting property dialog box will pop up. All with manual sorting, and cut points, cutting the direction of the settings in this dialog box can be completed.

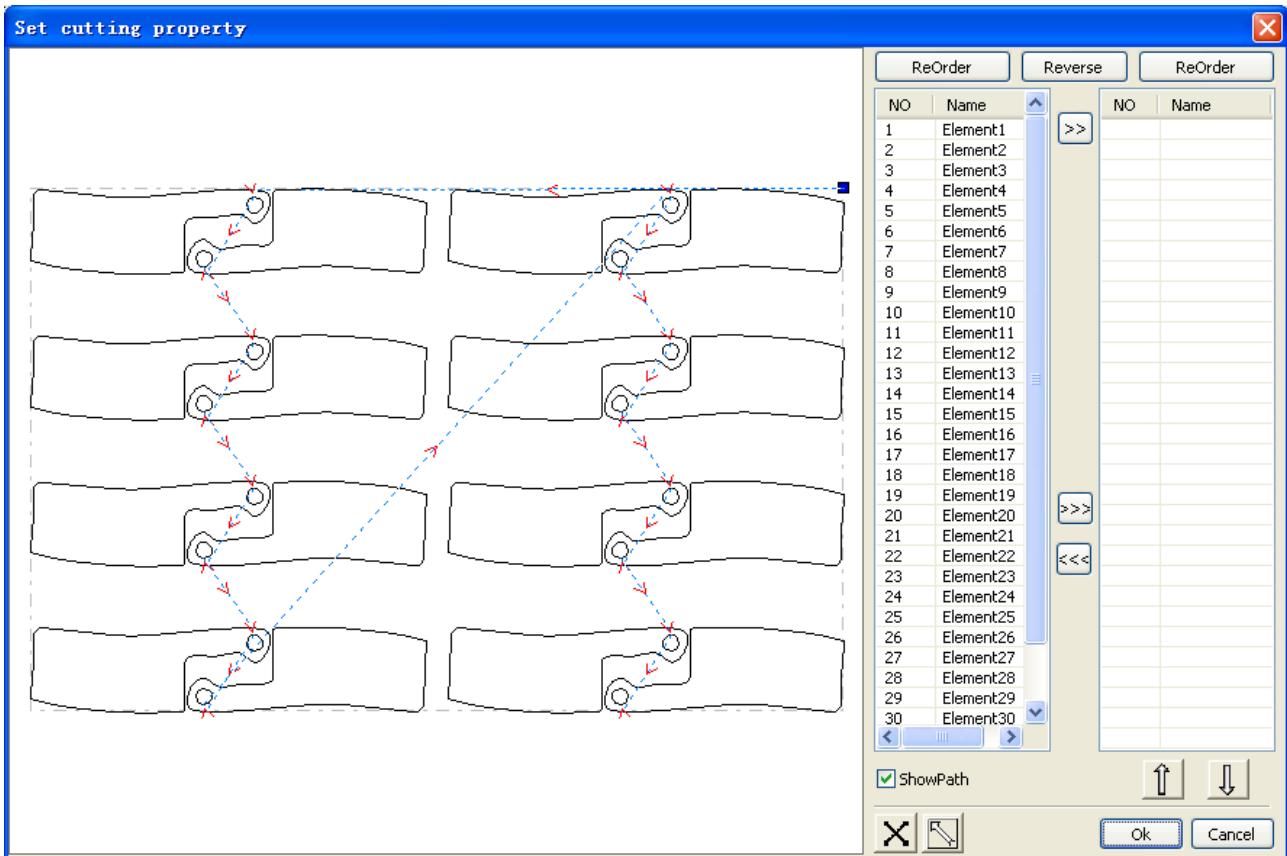

1> Show path

First check the “show path”, it will display the current graphics cutting order and the cutting direction.

2> Manual sort

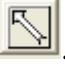
Select . This button is used to switch the current status of the operation is to edit or view. Then you can marquee or click the graphics in the graphics display area (or click one pixel or check many pixels). After selecting the graphic, select , these graphics to be redirected to another list, to be processed as the first primitive. Primitives followed by repeated operations, to complete sequencing of all graphics.

3> Change the direction of graphic processing

Mouse select the graphic in the graphics display area or in the list. And then click

.


4> Change the cutting point

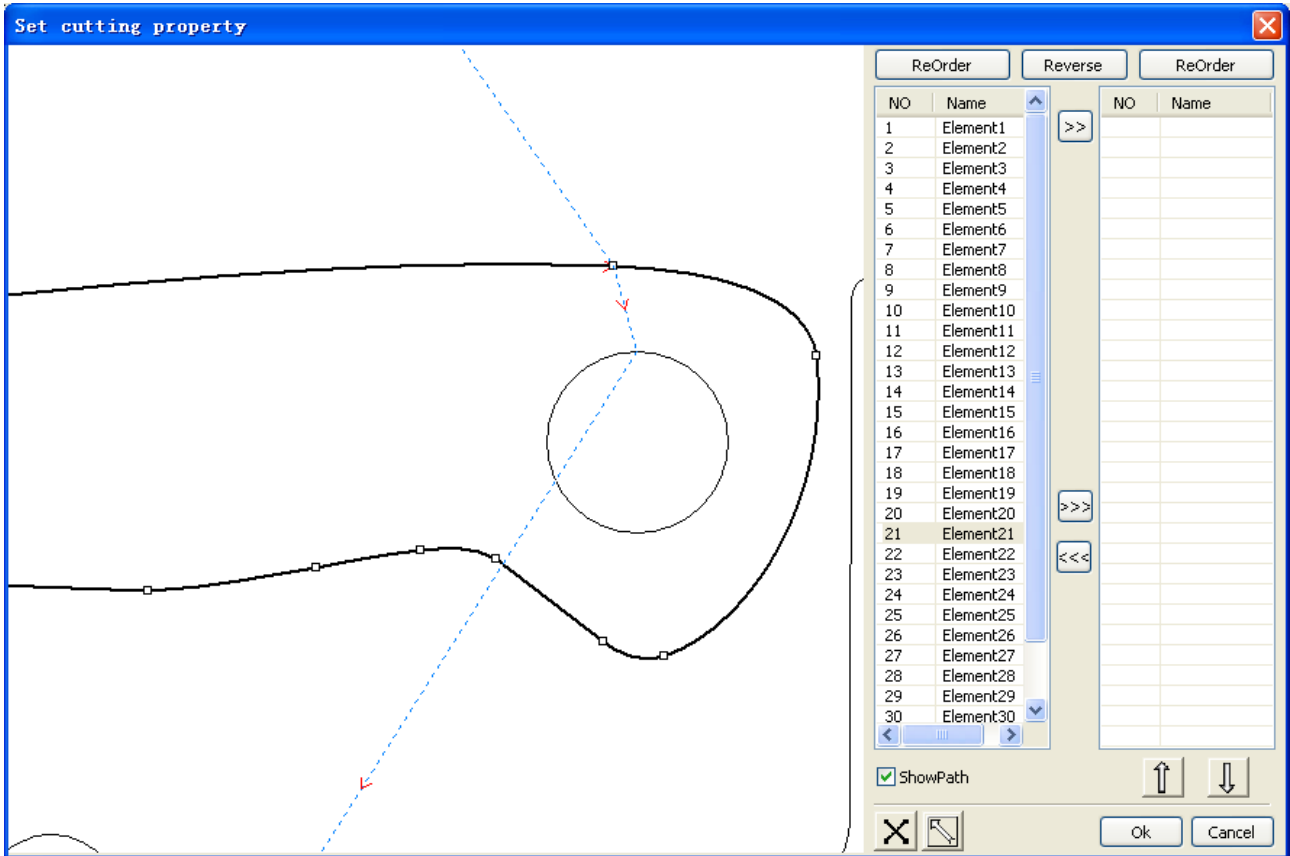

Select the graphics that should be changed the cutting point, it will show all the nodes in the current graphics. Select the starting point, double-click the mouse, it will change the starting point of the current graphics. After the completion of all changes, click 确定, the result of the changes can be saved.


In addition to cutting property features, the software also offers some tools to change the cutting order, cutting direction and cutting point.

Click menu **【View】 / 【Show Path】**

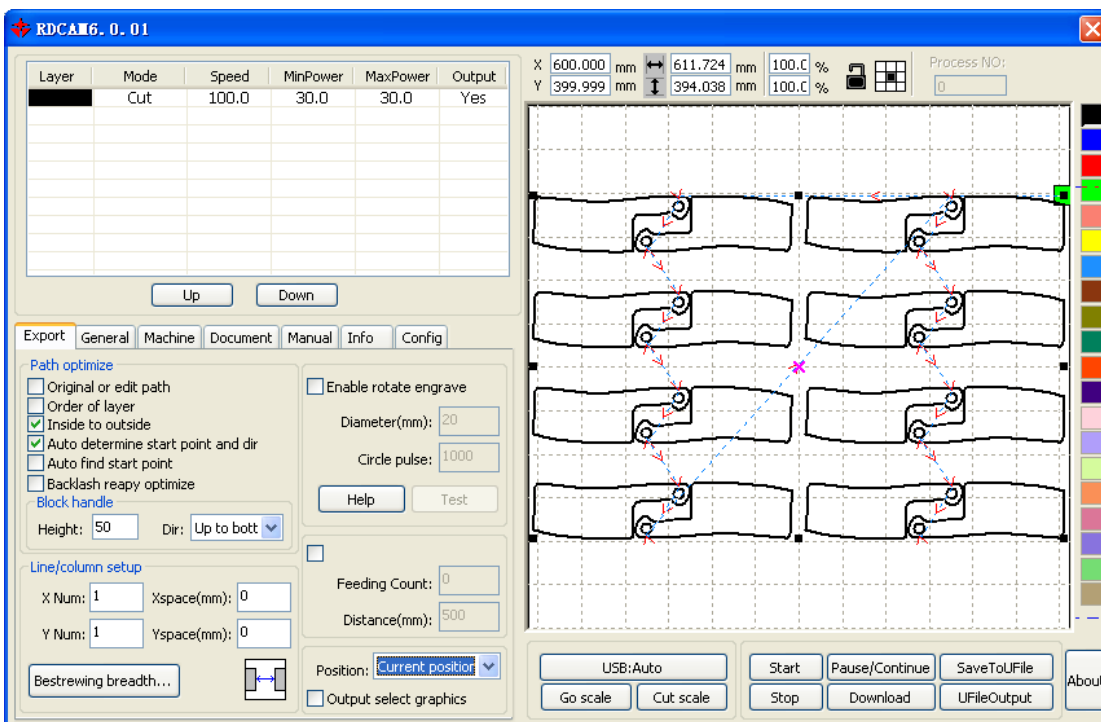

1> Manual sort

Choose the primitive that should be changed the cutting order, then the cutting serial number of the current primitive will display in the object properties bar.

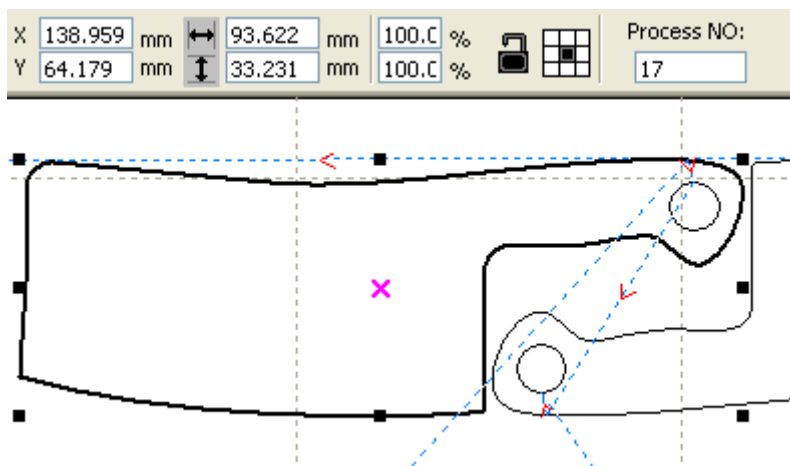

Enter the serial number directly in the processing number, then press the keyboard “Enter” key, or click the plot area, the cutting order will be changed.

2> Change the processing direction

Click **【Cut property】** -> **【Set Cut Direction】** , to enter the edit mode of the cutting direction. Then you can double-click on any position on the selected graphic.


3> Change the cutting point

Click **【Cut property】** -> **【Set Cut Point】** , to enter the edit mode of the cutting point. Then select the curve that should be edited, you can double-click on the node that you want to set the cutting point to complete the change of the cutting point.

II.3.12.2 Setting And Editing The Cut In/Cut Out Lines

Drawing or importing curves, the curve is default not have any cut in/cut out lines.


If want to add cut in/cut out lines,select the objects, then click **【Cut property】** -> **【Edit cut in property】** .The following dialog box is appearing.

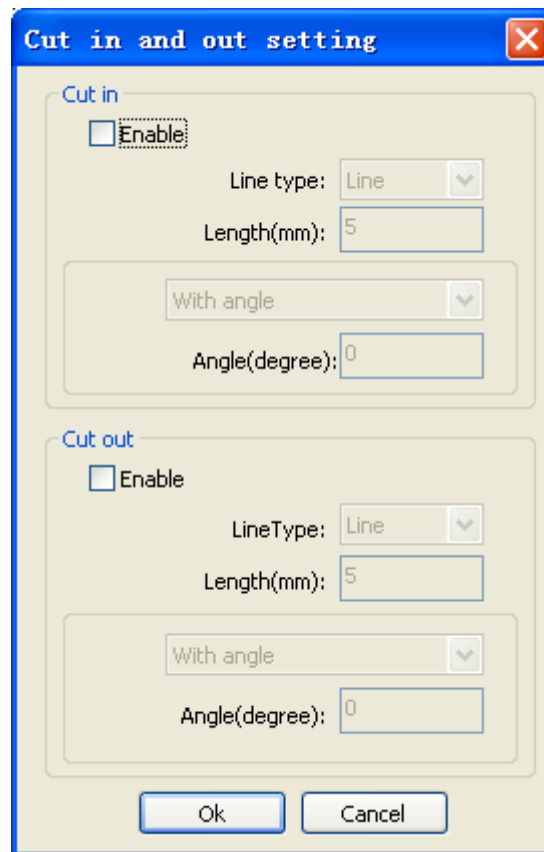

To make cut in/cut out lines, first of all need to enable the cut-in/cut out function. There are two types of the cut in/cut out lines: straight line and arc


Straight line cut in achieve through three ways:

- a) Cut in with angle: cut in line and starting segment into a certain angle, counterclockwise angle is positive
- b) Cut in at center, the starting point of the cut in line is at center.
- c) Cut in from center, the direction of the cut in line is from center to starting point, and length is as setting.

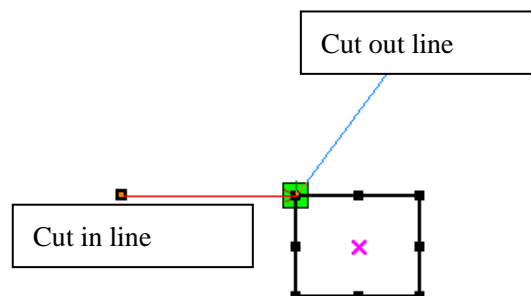

The arc length of cut in arc is as setting.

There are two types of cut in/cut out arc, as shown in the following figure

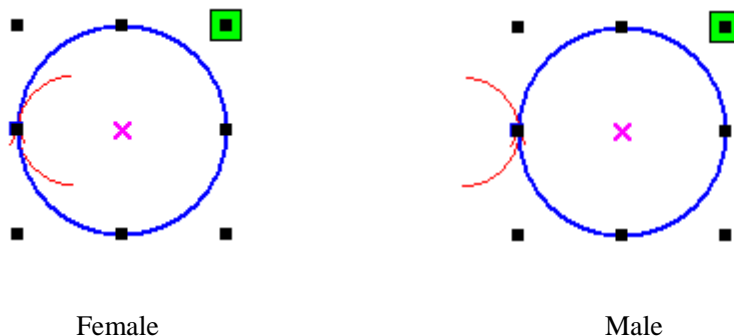


The processing of setting cut out lines is same as cut in lines.

II.3.12.3 Curve Smooth


For some less accuracy curves, this function can make curves more smoothness, and processing smoother.

Click menu **【Tool】** -> **【Curve Smooth】**, the following dialog box appears。

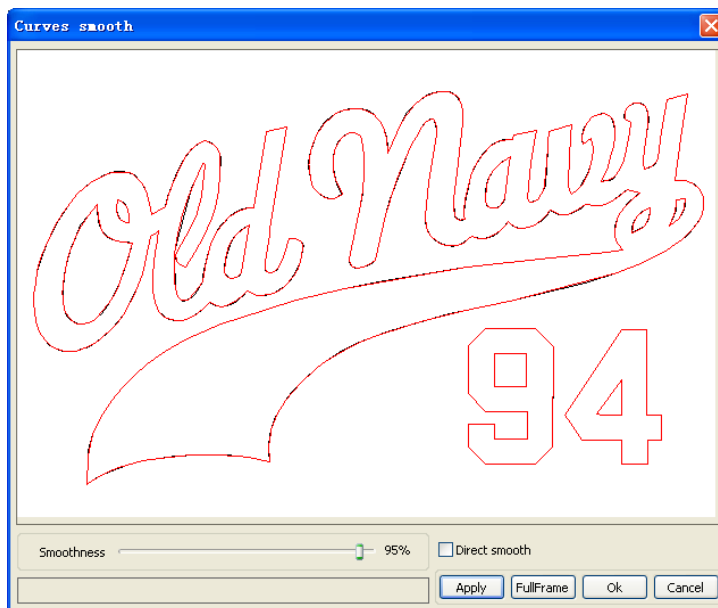

Drag the smooth slider, and click button **【Apply】**, before smooth and after smooth curves will all show in the dialog。

The black curves represent the original curves, and the red curves represent after smooth curves.

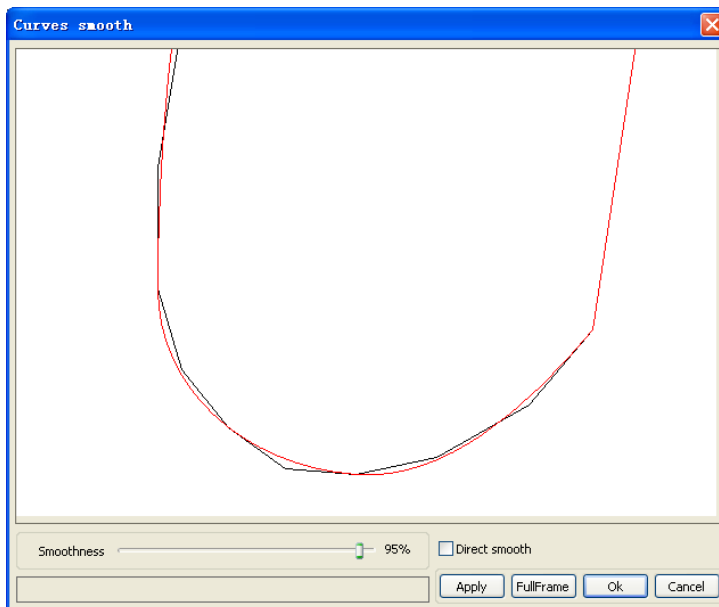

You can view the graphics with drag mouse.

You can zoom in/zoom out the graphics with scroll wheel.

Click button **【FullFrame】** , graphics will shown in the dialog box for largest.


After get satisfied smoothing effect, click button**【Apply】**, curves will processing smooth according to smoothness settings.

Select “Direct smooth” , you can use another smoothing method.

The choice of smoothing method should be changed with the needs of the actual graphic.

II.3.12.4 Check Closure

Click menu **【Tool】** -> **【Curve auto close】** , the following dialog box appears.

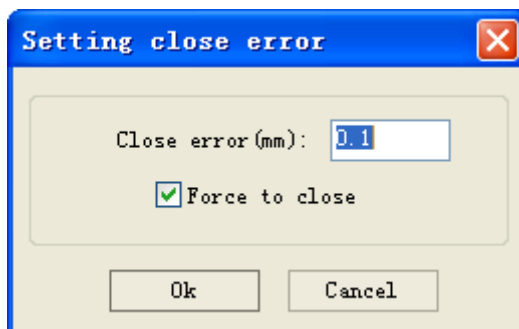


Close error: When distance from the starting point to ending point less than close tolerance, automatic closing of the curve.

Force to close: Mandatory closure of all selected curves.

II.3.12.5 Remove The Overlap


Click menu **【Tool】** -> **【Delete overlap】** , the dialog box appear.

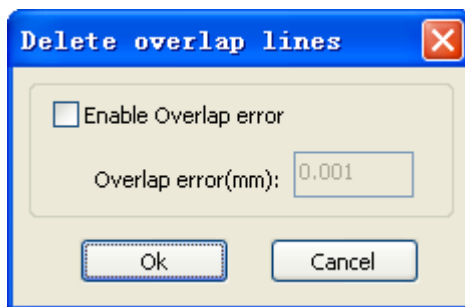

Under normal circumstances do not select the “Enable Overlap error”. Removing the overlapping lines when two lines are compared to a good degree of coincidence. If you need to delete overlapping lines, you should select “Enable Overlap error”, and set overlap error. Generally do not overlap error set too large, so as to avoid accidental deletion.

II.3.12.6 Combine Curve

Click menu **【Tool】 / 【Combine Curve】** , the following dialog box appears.

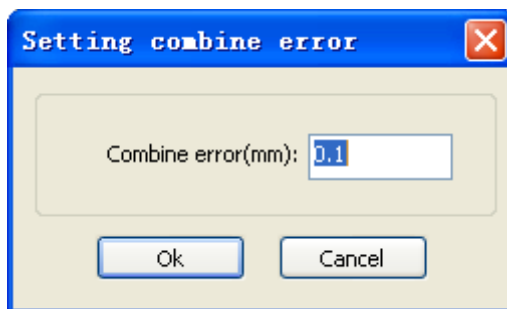

The software automatically merge curves in the selected curves, when these curves merge tolerance is less than the setting of combine error.

II.3.12.7 Bitmap Handle

Select a bitmap, then click menu **【Tool】 -> 【Bitmap handle】** ,



In the top right of the dialog box displays the information of the current image.

Be noted that, the horizontal resolution and vertical resolution is changing with drag scaling.

【Apply to view】 : Current settings is only used for preview, without affecting to the original bitmap, press button **【Cancel】**, bitmap will returned to the state of original image. Therefore, only use for adjust effect. However, this approach requires more time and memory Space.

【Apply to source】 : Current sttings is use for original bitmap directly, so even finally click button **【Cancel】**, image will also unable to return to the original image. Therefore, it mainly used in multi-step operation, and the current operation of this step is necessary to do, such as general pictures must be transformed into grayscale. This can save the computing time of the follow-up operation.

【Save as】 : Retain the results of the previous operation, In addition to using **【Apply to view】** can also be exported. On this basic, to facilitate subsequent processing.

【Gray scale】 Generally, other image processing is based on the grayscale, so before handling, you can do a grayscale processing, then click button **【Apply to source】**. For the grayscale than the color image occupied smaller memory, for large image step by step handle, to a certain extent to avoid the lack of memory.

For color image, adjust contrast and brightness, have some auxiliary effect to following dither processing.

Adjust contrast:



Before processing



After processing

Invert:



Before processing



After processing

Sharp:



Before processing



After processing

There are three method for dither processing: Net graphic、Dot graphic、Black and white

1> Net graphic

Net graphic need adjust net size, better suited to material which is not high resolution, or the laser is relatively slow to respond.


To get the appropriate net size, you can adjust resolution and net frequency of the image. The higher resolution, the more delicate.

The higher net frequency, the smaller net size. The lower net frequency, the bigger net size. Generally, resolution of image is 500 - 1000, and net frequency is 30-40lines.



2> Dot graphic

Dot graphic performance of good grayscale, better suited to material which is high resolution, and the laser responds fast.

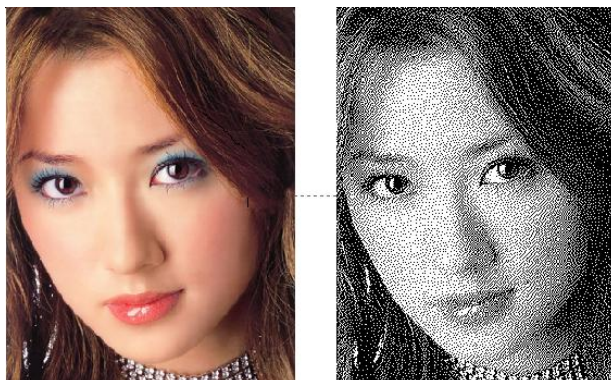


3> Black and white


In most cases, the effects of color image into black and white image is poor, however, for some clear outline image, is very easy to use.



Get outline:

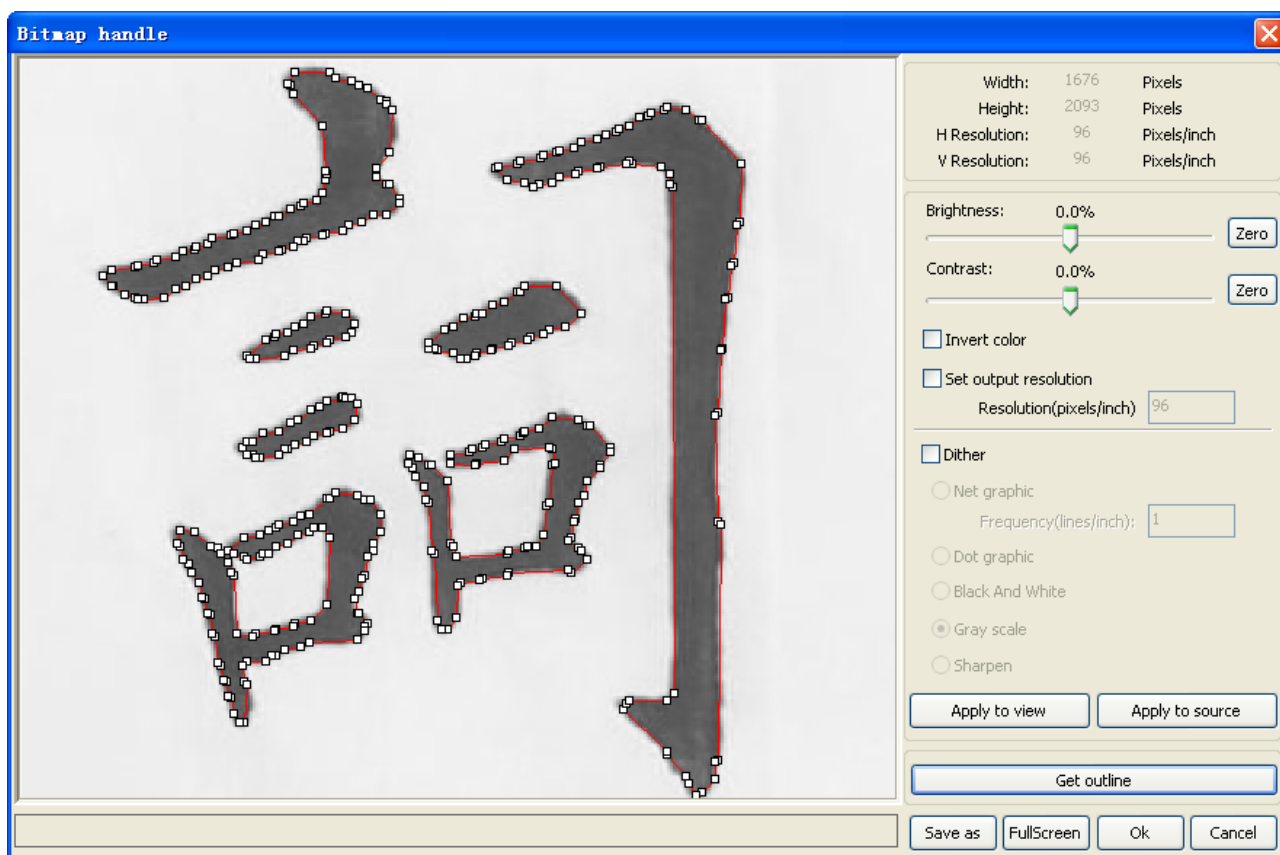


Click “Get outline” button to extract the contour graph. As following picture

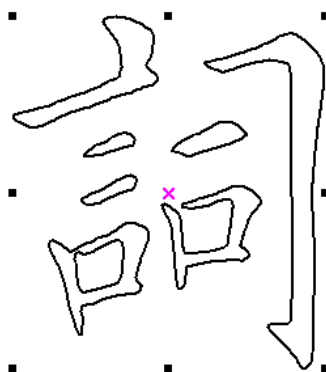

II.3.12.9 Processing preview、

Click menu **【Preview】**

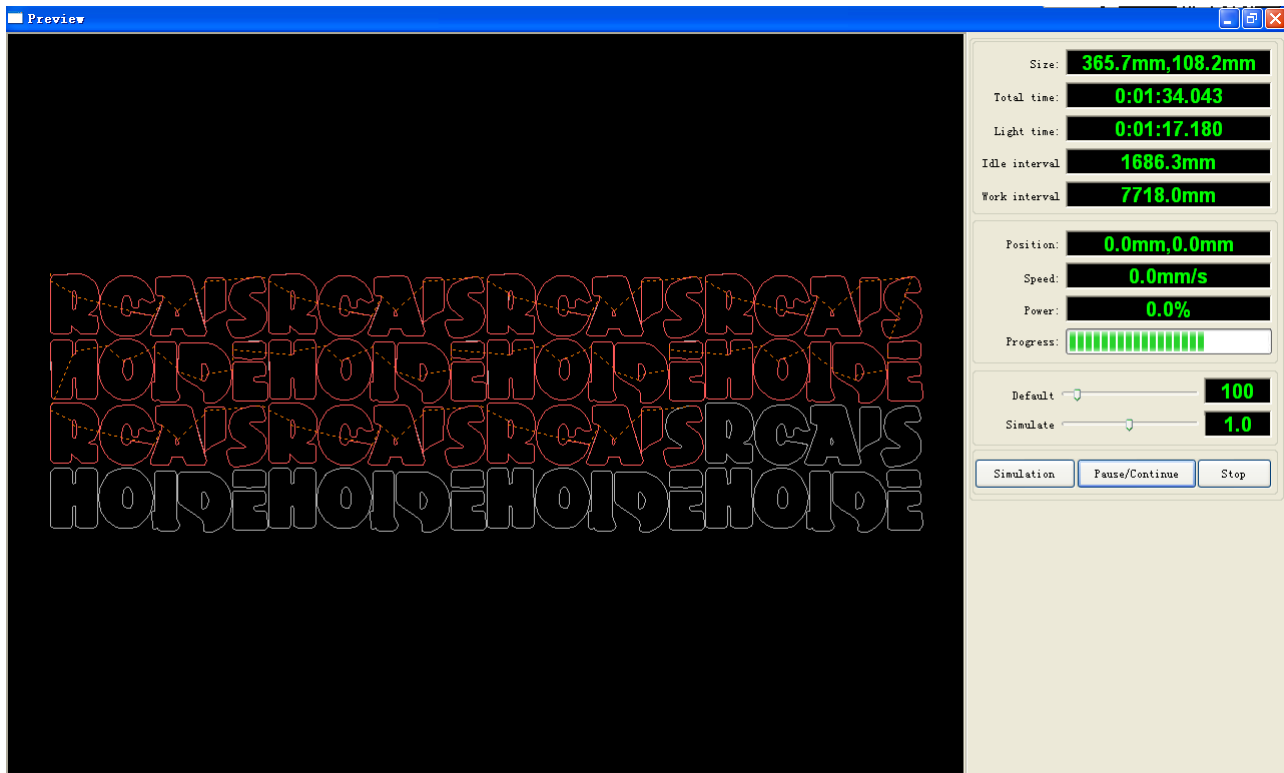


Software supports the preview of the documents to be processed, and you can get some basic information through the preview. For example, the path of the actual output of the processing, general processing time, processing the distance. The machining process can be simulated.

In addition to the current edited file preview, you can also preview the files have been saved as rd.



1> Preview rd file:

Double-click in the graphics display area. Choose the graphic you want to preview in the pop-up dialog box. And then open

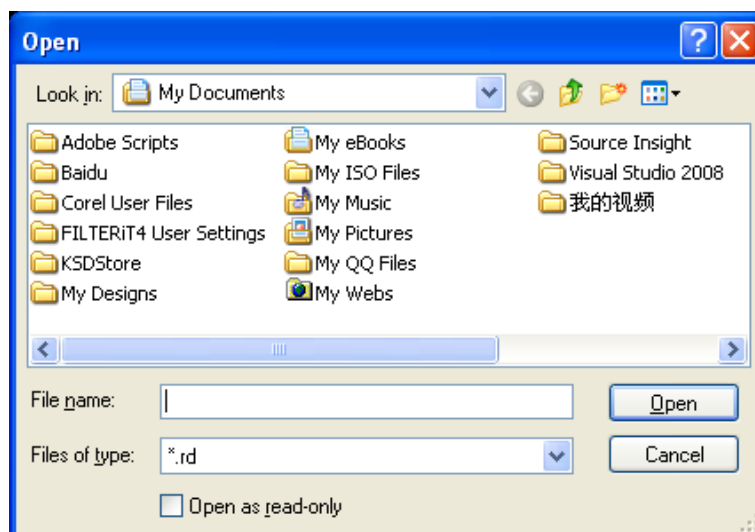

2> Software also supports to set the parameters of preview

Right-click Anywhere in the graphics display area, the configuration menu will appears. Select "Config", pop-up following dialog box

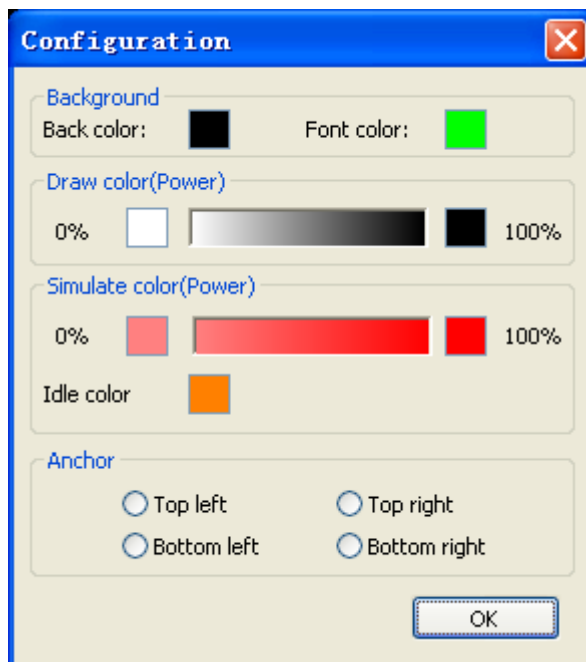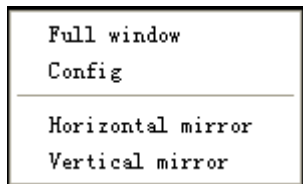


You can preview the color of graphics to match the actual output of energy. Users can easily view whether the layer energy is true.

II Chapter 4 System Settings

Before output graphics, required to determine whether the system settings are correct.

II.4.1 Output Setting

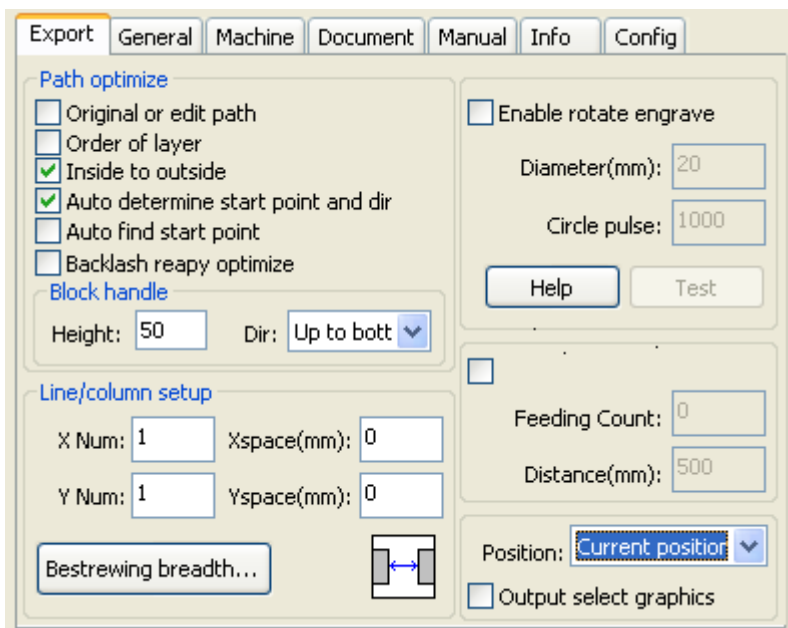

II.4.1.1 Path optimize

1> Original or edit path

Selected by the original path or edit the path, press the original drawing graphics output to the machine processing the order.

If the order by layer, from inside to outside and other optimization methods are useless.

Generally do not choose the property; in a very large number of graphics output, the choice of this property without having to wait for the software algorithm processing time.

2> **order of layer**

The list from top to bottom layer by layer order, followed by the output layer to the machine processing.

Generally do not choose to (not in front of check) by order of the output layer.

3> **Inside to outside**

If there are other graphics within the closed graph, then the first cut and then finished cutting all the graphics inside the closed graph.

4> **Auto determine start point and dir**

If not checked, then do path optimization, only adjust the order of graphics processing, cutting starting point and the cutting direction to remain at the original graphics processing

5> **Auto find start point**

Using the change function, the graph from the closure point to find a more ideal start cutting. For special processes, such as cut glass, choose this, in general, do not choose.

6> **Backlash repay optimize**

When the machine there is space (such as dislocation of the seal cutting graphics), can be checked, in general, do not choose.

7> **Block handle**

Block height for the different graphics to set a different height values, there is no rule for the arrangement of the graphics, height generally between 10-20mm set.

Block processing needs can choose the direction from top to bottom, from bottom to top, from left to right or right to left.

For a regular arrangement of graphics, if you want to achieve the desired cutting sequence, you must set the appropriate height. Generally high altitude take a single line graph, as the block height.

II.4.1.2 Array Setting

Array processing setting is facilitate used to treatment array processing of graphics.

X Num and **Y Num**, correspond to the rows and columns of the array

X Space and **Y Space**, correspond to the rows spacing and column spacing of the array.



represent the distance of the graphic edge.




represent the distance of the two graphic center.

Adjust the X space, Y space more closely the graphical layout, click the plot area, so that graphics are not selected, then the arrow keys on the keyboard to adjust, and roll the mouse to display the zoom, so the adjustment interval process more accurate.

Bestrewing Breadth Setting :

According to the size of frame and current array settings, to determine the maximum number of columns(**X Num**) and rows(**Y Num**).

Click button **Bestrewing breadth**, the following dialog box appears:

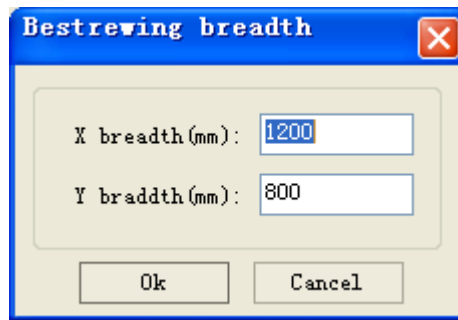

Click **OK**, software can automatically calculate the appropriate numbers of rows and columns.

II.4.1.3 Rotate Engraving

【Enable rotate engrave】 : After enable engraving, the actual precision of Y-axis will be based on diameter and step per rotate to auto match the setting of pulse precision of Y-axis. In addition, the work area in the main interface will also change.

【Diameter】 : The diameter size of the parts.

【Step per rotate】 : The number of pulse corresponds to the workpiece rotate one week.

The function is to facilitate the users to replace parts, and different size of the workpiece when the workpiece is not very different before use. When the relatively large difference in size of the workpiece, it is recommended to use directly modify the motor step approach to implementation.

Rotary engraving is only when using the rotation axis to replace the Y-axis use.

II.4.1.4 Feed Setting

To use the feed, must first enable the feed.

After set feeding parameters, the shaft will be feeding a feeding length, and repeat the process, until the times of processing reach to number of feeding.

If the machine is not equipped with feeding devices, in general, enable the feed ban.

II.4.1.5 Position

Setting the laser head back location after processing completed.(Current position、Original anchor、Machine Zero.

Current Position : Laser head back to the position before processing.


Original anchor : Laser head back to the last anchor, the anchor may set at panel.

Machine zero : Laser head back to the zero of the machine.

II.4.1.6 Output select graphics

After check **Output select graphics**, then only output the selected part, rather than not output the part not selected.

II.4.2 General settings

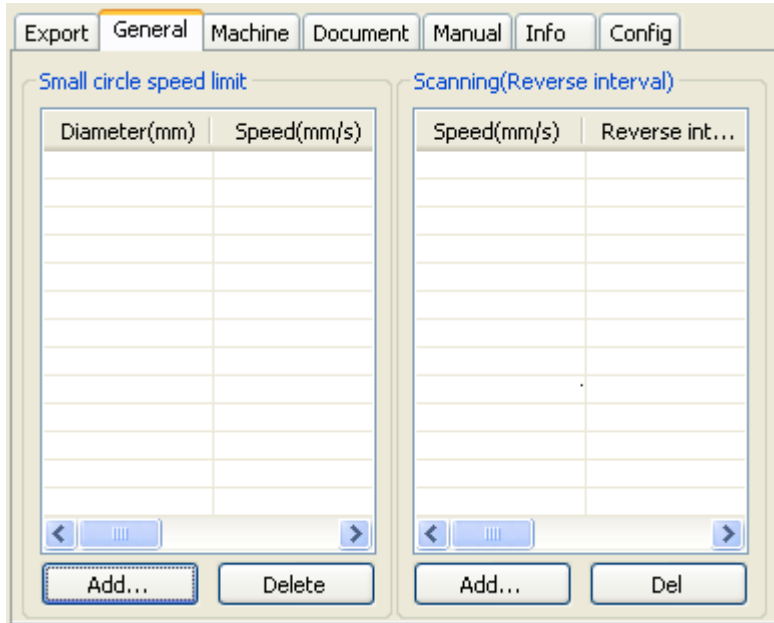

II.4.2.1 Small Circle Speed Limit

On processing work, the software automatically determine whether the current round need to limit speed ,then according to the diameter size of the circle to determine the speed. If parameter configuration appropriate ,will greatly enhance the quality of small round. Click button **【Add】**, **【Delete】** , **【Modify】** to configuration.

Small circle is less than speed of the rules limiting the list of small round circle of minimum radius, minimum radius circle at the speed of the output of the corresponding.

If the speed greater than maximum speed limit list the speed round, the speed only associated with the speed of the layer.

If the speed is in the list, set the output speed by list.


If the request received by limiting layer parameters faster than the speed set in the layer, press the speed of the output layer.

II.4.2.2 Scan backlash

Laser scanning graphic way, because the relationship between the machine belt tension may cause the edge of the scanned graphics uneven. Therefore, increasing backlash to fix. It has the specific backlash for the certain speed. General, the greater the speed, the greater the backlash.

① Add backlash


Click the Add button, the screen will pop up as shown in Figure

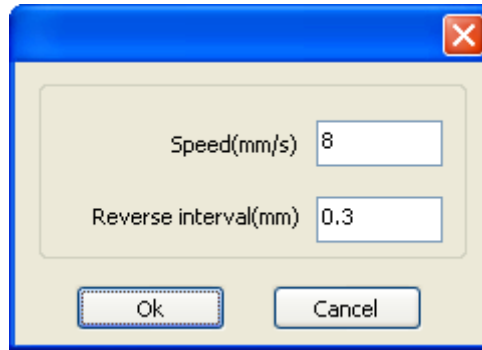

Set speed and backlash, click OK, the value to be inserted into the list of backlash.

② Modify backlash

Double-click the left mouse button scanning (reverse gap) need to modify the reverse block entry clearance, then the pop-up screen shown in Figure.

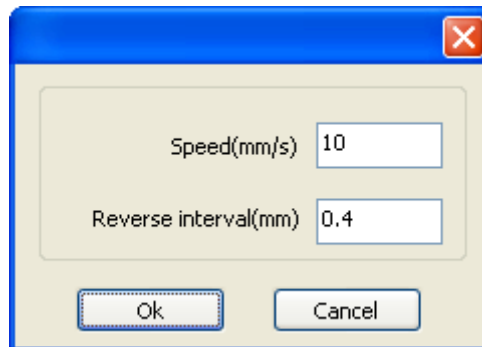


In the interface can modify the current speed of the corresponding backlash.

③ Remove backlash

Right-click scanning (reverse gap) block in the backlash to delete the item, then click the **【Delete】** button.

II.4.3 Machine parameters

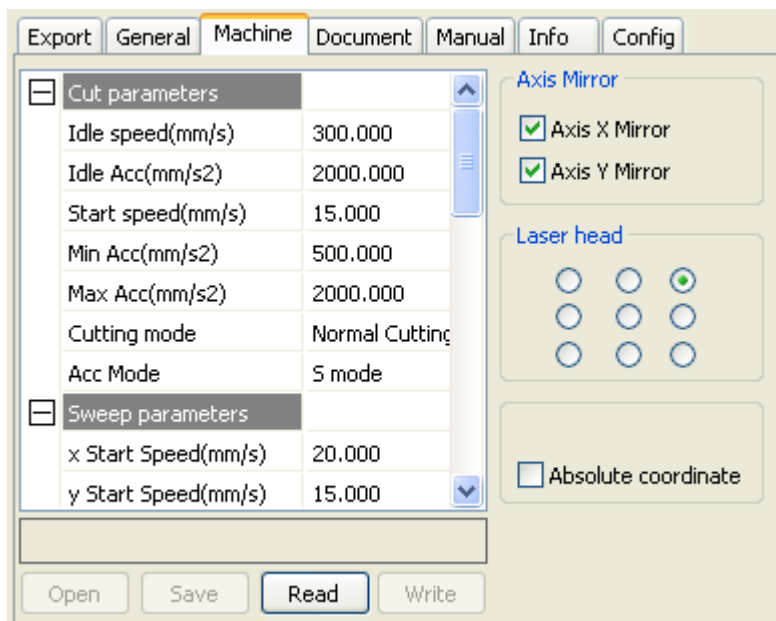

II.4.3.1 Cut parameters

☐ Cut parameters	
Idle speed(mm/s)	300.000
Idle Acc(mm/s ²)	2000.000
Start speed(mm/s)	15.000
Min Acc(mm/s ²)	500.000
Max Acc(mm/s ²)	2000.000
Cutting mode	Normal Cutting
Acc Mode	S mode

Idle speed: this parameter decides the max. speed of all lines not emitting beams during the operation of the machine. This parameter should not be lower than the lower of the jump-off speed of the X-axis and that of the Y-axis and not exceed the higher of the max. speed of the X-axis and that of the Y-axis, if the setting is illegal, the controller will automatically set this parameter within the range above; a comparatively high idling speed can shorten the operation time of the entire figure while excessively high idling speed may cause dithering of the tracks, therefore, you should take all relevant factors into consideration when setting.

Idle Acc: Corresponds to the acceleration of the speed of air travel time, air and air-way-way speed of acceleration to match, if you set too slow the actual speed may not reach the air-way set value, if set too fast, they may not withstand the mechanical structure, resulting jitter. Slightly higher than the general acceleration of air-way cut acceleration.

Cutting Acc: Corresponding to the acceleration of the speed of cutting (cutting speed is the speed of the layer parameters of the layers).

Turning speed: Turning the corresponding deceleration in the cutting process, the minimum speed of the drop, when processing a lot of teeth when the graphics may be appropriate to reduce the turning speed.

Turning Acc: Should match with the turning velocity.

Cutting mode: Split precision cutting, fast cutting, ultra-fast cutting, the user can choose according to the actual applications. Such as the emphasis on accuracy, select the precision cutting, such as emphasizing speed, select the fast cutting.

Acce. mode: this parameter decides the acceleration and deceleration mode (S mode or T mode) of the motor during operation, the motor accelerates and decelerates slowly and smoothly in the S mode and fast and relatively unsmooth in the T mode; the default mode is the S mode.

II.4.3.2 Sweep parameters

☐ Sweep parameters	
x Start Speed(mm/s)	20.000
y Start Speed(mm/s)	15.000
x Acc(mm/s ²)	8000.000
y Acc(mm/s ²)	2000.000
Line Shift Speed (mm)	150.000
Scan Mode	Common Mode
Facula Size(50~99%)	98.000

x Start Speed, y Start Speed: Off scanning speed in the use of stepper motor drag, do not began to accelerate from 0, but can start work directly from a speed to shorten the overall

processing time, but the speed is not too high, and because the X, Y axial load is different from the rate, general the initial speed of X-axis slightly higher than the initial speed of Y-axis

x Acc, y Acc: With the scanning speed (the speed of layers in the layer parameters) to match, if set too small, the scan speed to a longer distance, the scanning efficiency. The machine can be set according to the actual structure, load conditions vary. Since X, Y axis load, generally much higher than the X-axis Y-axis accelerometer.

Line shift speed of scanning: this parameter is specially used to control the max. speed of the scanning to shift vertically from one line to the next line below it. If during the scanning, the line space is too large or the block space is too large when scanning block figures while precise positioning for each line or block is required, you can set the line shirt speed of scanning to a comparatively low value. This parameter cannot be less than the jump-off speed of the corresponding axis during the line shift and cannot be higher than the max. speed of the corresponding axis during the line shift, if the setting is illegal, the controller will automatically set this parameter within the range above.

Scan mode: There are two modes for your selection: the general mode and the special mode, in the general mode, there's no any treatment during the scan, in the special mode, light spots will be treated. If the special mode is activated, the power of the laser should be increased and correspondingly, the light spot percentage will be lower and the laser power attenuation will be higher, to achieve the same depth of scanning, the laser power should be higher. The purpose to select the special mode is to make the laser to emit beams at high power and in short period, during deep scanning, the effect of flat bottom can be achieved, however, if the light spots are improperly adjusted, this effect may not be achieved and the working mode of high power and short period may influence the service life of the laser. The default mode is the general mode.

Facula Size: When scanning the general pattern of selection, the argument is invalid, when you select a special mode, the onset of the parameters. Control the parameters of control in 50% to 99%, respectively.

II.4.3.3 Home parameters

<input type="checkbox"/> Home para	
Home speed(mm/s)	80.000
Auto home X	Yes
Auto home Y	Yes
Auto home z	No
Auto home U	No

Home speed: This parameter determines the machine is turned back to the origin when the speed of a larger format if the machine can be set to reset the speed is too large, but not too much.

X, Y, Z, U Auto home: The axis can be set whether should reset at boot time.

II.4.3.4 Go Scale parameters

<input type="checkbox"/> Go Scale para	
Go scale mode	Close laser
Go scale blank(mm)	0.000

Go scale mode: Points of light to go off the border, the opening cut borders, corners three modes.

Go scale blank: Walking frame can be based on the actual image size up and down again about the direction of some of the white left side of the border in order to ensure complete contains the actual graphics.

This setting is on the control panel to go with the border-related functions, while walking on the border with the independent software.

II.4.3.5 Other parameters

☐ Other parameters	
Array processing	Bi-dir Array
Return position	Absolute Origin
Delay before feed(s)	0.000
Dealy after feed(ms)	0.000
Focus depth(mm)	0.000
Backlash X(mm)	0.000
Backlash Y(mm)	0.000

Array mode: you can choose the swing mode and the one-way mode. The Swing mode: cutting the array back and forth in order; the One-way mode: always cutting the array from one direction to another. If One-way mode is selected, all array units have the same movement modes and the same liquidity of movement, however, this mode will take more time than the swing mode. The default mode is the Swing mode.

Return position: You can select the locating point and the machine origin. This parameter decides the position, the locating point or the machine origin, where the laser head stops upon completion of each operation.


Delay before feed: Using the feeding device, the delay before a single feed, users can arrange the time and the like, such as picking process.

Delay after feed: Refers to the material sent to the feed device in place, the need for stability after a period of time for processing.

Focus depth: Auto focus operation to find the corresponding panel.

Backlash X, Y: Used to compensate the backlash caused by the machine drive problems.

II.4.3.6 Axis Mirror

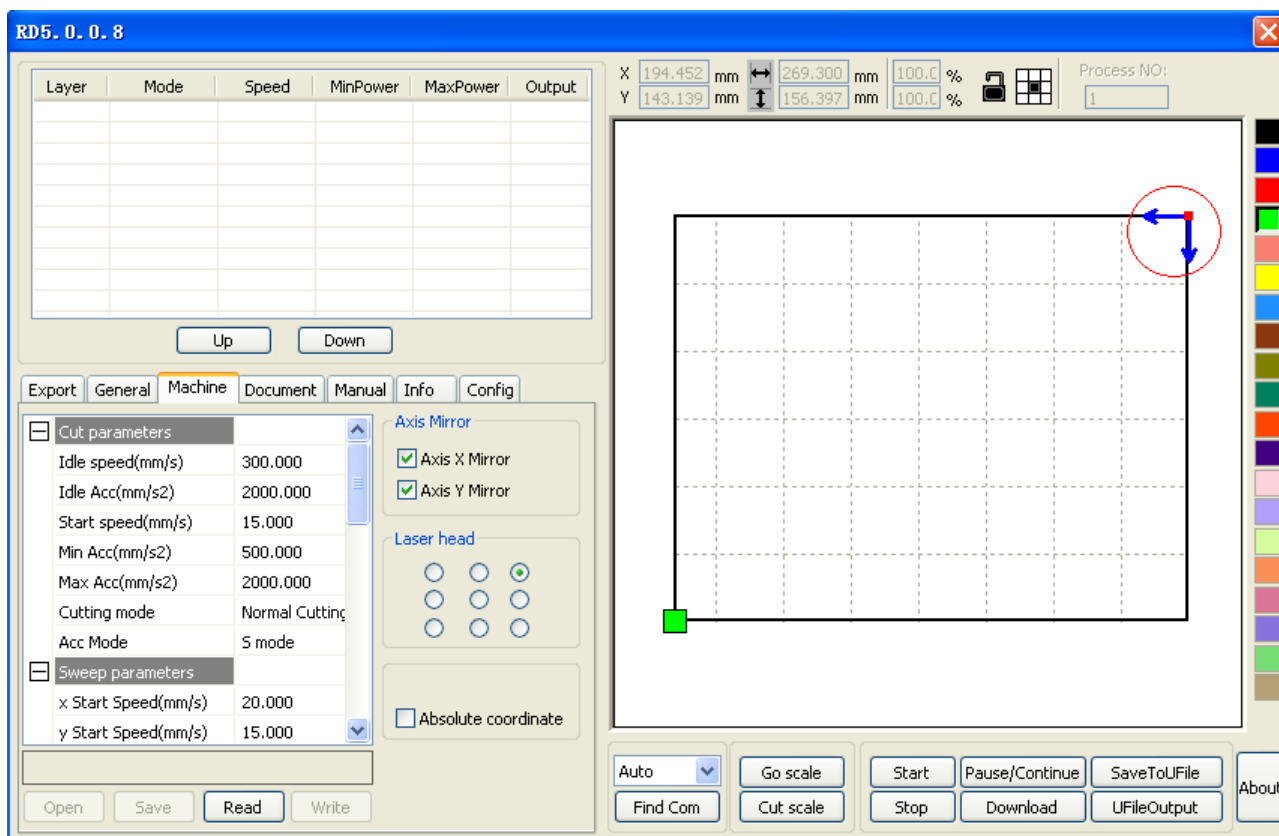


Generally, Axis direction of mirror is based on the actual location of the limit or home of machine.


The default coordinate system is Descartes coordinate system, and zero is in the bottom left. If the zero point of the machine is top left, then X-Axis do not need to mirror, but Y-Axis need to mirror. If the zero point of the machine is top right, then both X-Axis and Y-Axis are all need to mirror.

More convenient way is to view the graphical display area if the location coordinates and arrow on your machine the actual position of the same origin. If not, then modify the direction of the mirror. If the arrow appears in the upper left corner coordinates, and the origin in the upper right corner of your machine, you just need to check both the X mirror.


II.4.3.7 Position of Laser Head

Position of Laser head means the location laser head relative to the graphic.

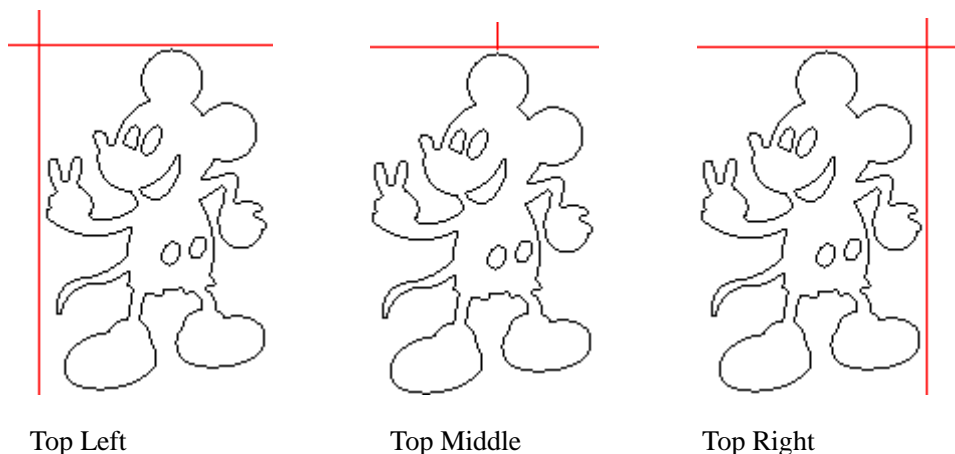

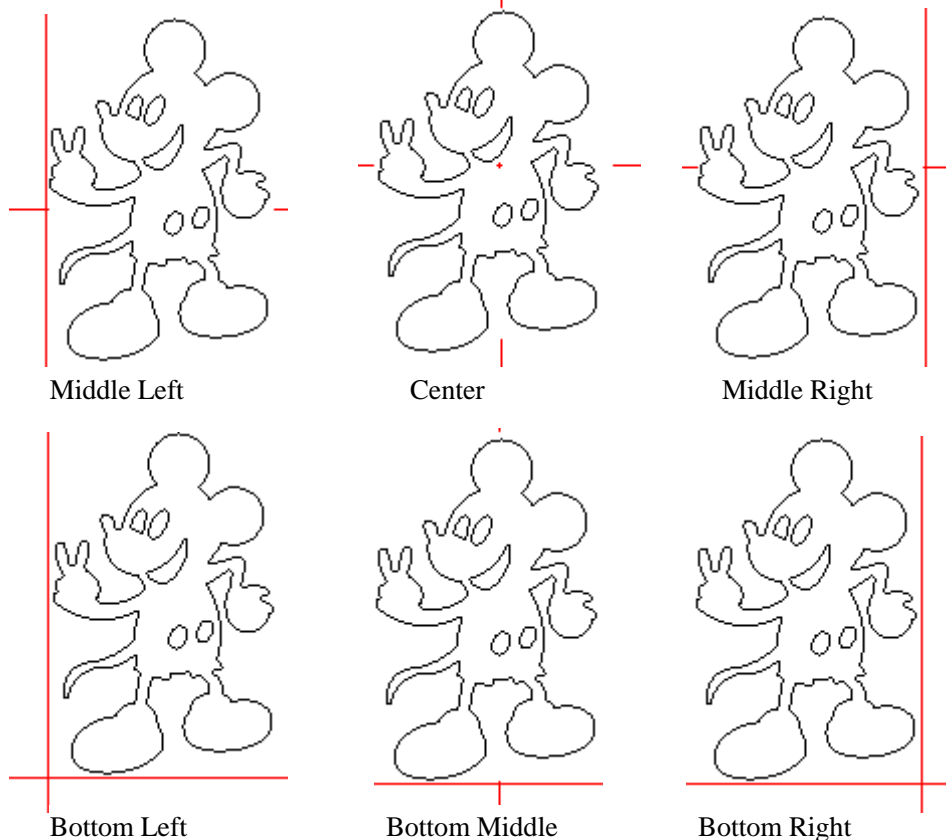

when you intuitive view, just look at the zone where the green point appears.

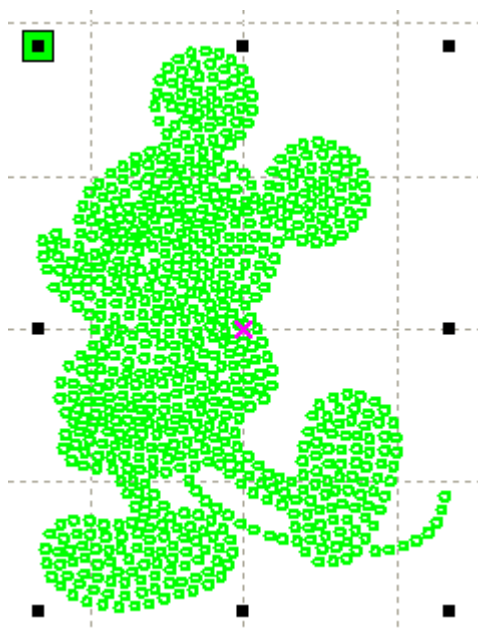


II.4.3.8 Absolute Coordinate

You can directly check this option when you want the graphics location in the graphics display area correspond to the actual work location of processing. Then the graph position will no longer relate with the actual output position of the laser head and orientation point, but always regard mechanical origin as the anchor point.

II.4.4 Document Management

II.4.5 Manual

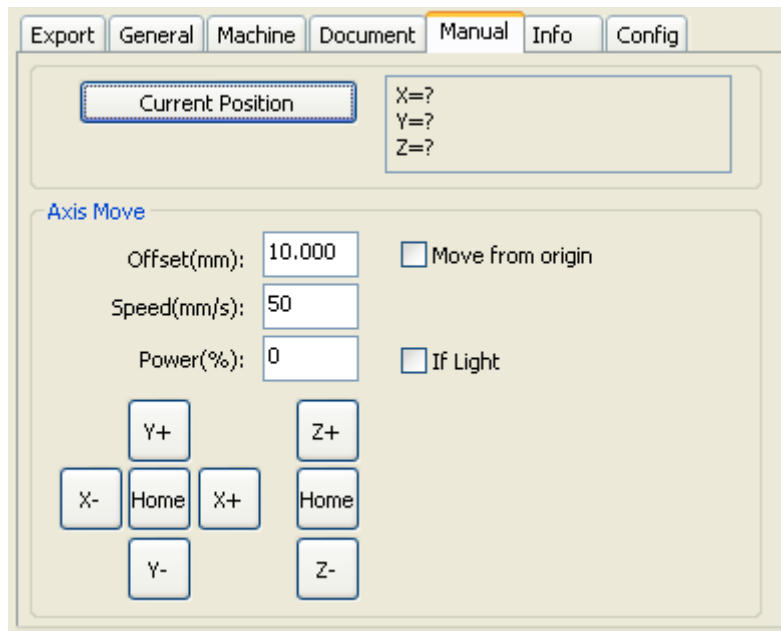

Axis control, can only control one axis each time. You can set the information for axis move, including move length、 speed、 laser on-off and laser power.

If you check “Move from origin”, then the offset you set means the offset to machine zero.

If you not check move from origin, then the offset means the offset to the current position.

The X-axis, for example, assuming the current position is 100mm, such as the step distance is set to 10mm, then the exercise once, the new location will be 110mm, such as the check moves from the origin, movement time, the new location will be 10mm, and repeated Movement, location will no longer change.

Note: According to the provisions of the controller, the absolute position is no negative in the whole breadth. If you check the Move From Origin, and set the offset value negative, then the machine will hit limiter.

II.4.6 Info

Information on the operation of the motherboard manufacturers need to enter password to view parameters.

Export General Machine Document Manual Info Config

Total on time(hour:min:s):

Total processing time(hour:min:s):

Previous processing time(hour:min:s:ms):

Total laser on time(hour:min:s):

Total processing times:

X Total travel(m):

Y Total travel(m):

Mainboard version:

- 1> **Total on time:** The total time of motherboard working
 - 2> **Total processing time:** The total time of processing ,including the time of jump moving.
 - 3> **Previous processing time:** The time of the last processing
 - 4> **Total laser on time:** The time of the laser processing
 - 5> **Total processing times:** The number of completed processing, not include the processing forcing to end.
 - 6> **X total travel:** The total travel of motor X.
 - 7> **Y total travel:** The total travel of motor Y.
- Motherboard version:** The version of the current controller.

The function of upgrades:

If the board has additional features, the manufacturers will provide the update file (*.bin format), the user can load the upgrade file to upgrade the motherboard. After the upgrade, you need to click on the control panel "Reset" button reset the motherboard before normal use.

Export General Machine Document Manual Info Config

Vendor password:

Mainboard version:


II Chapter 5 Processing Output



II.5.1 Device port

Software supported two ways to link motherboard: USB and Earthnet.

Users click the Device port button, and set link type and port in the pop-up dialog.

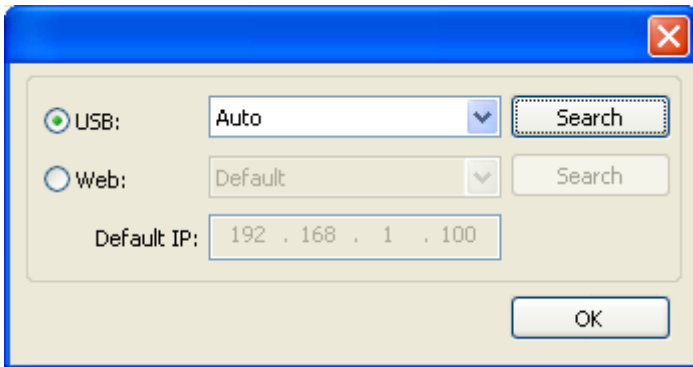

USB:

If the computer only connected one device, you can set to Auto. The software will automatically search the device. If the computer connected many devices, then first of all you need to click **【Search】**. After search, the connected devices will all add to the drop-down list.


What you need to do is select the specified device.

Earthnet:

If the computer only connected one device, you can set to default. If the computer connected many devices, all you need to click **【Search】**. After search, the connected devices will all add to the drop-down list.

II.5.2 Go Scale, Cut Scale

For Example **Go Scale**, As the following figure shown, the actual graphic is round, and the red rectangle outside the circle is the smallest rectangle, click button **Go Scale**, laser head will run once along the rectangular path.

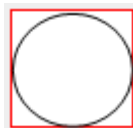

For Example **Cut Scale**, As the following figure shown, the actual graphic is round, and the red rectangle outside the circle is the smallest rectangle, click button **Cut Scale**, laser head will be cut along the rectangle.

II.5.3 Start, Pause, Stop, SaveToUFile, UfileOutput, Download

Start: Output the current graphic to the machine for processing.

Pause\Continue: Click **Pause**, will stop the processing work, click the button again to **Continue**

Stop: Stop the current processing work

SaveToUFile:

Save current file as RD format, using for offline processing (Can be copied to other memory board for full offline operation).

UfileOutput:

Output the offline file (RD format)

After save offline file, click **UfileOutput** to select rd file to processing.

Download:


Download the file to the memory of the controller , then user can start the file through the machine panel.

II.5.4 Layer Setting


Layer	Mode	Speed	MinPower	MaxPower	Output
	Cut	100.0	30.0	30.0	Yes
	Cut	100.0	30.0	30.0	Yes
	Cut	100.0	30.0	30.0	Yes
	Cut	100.0	30.0	30.0	Yes

Up Down

Double-click the layer that you want to edit in the layer list, layer parameters dialog box will pop up. Layer parameters in two parts, part of the common layer parameters, namely, how both types of processing layers, the layer parameter are valid. The other part is the proprietary layer parameters. Namely, when change the layer type of processing, the corresponding parameters will change.

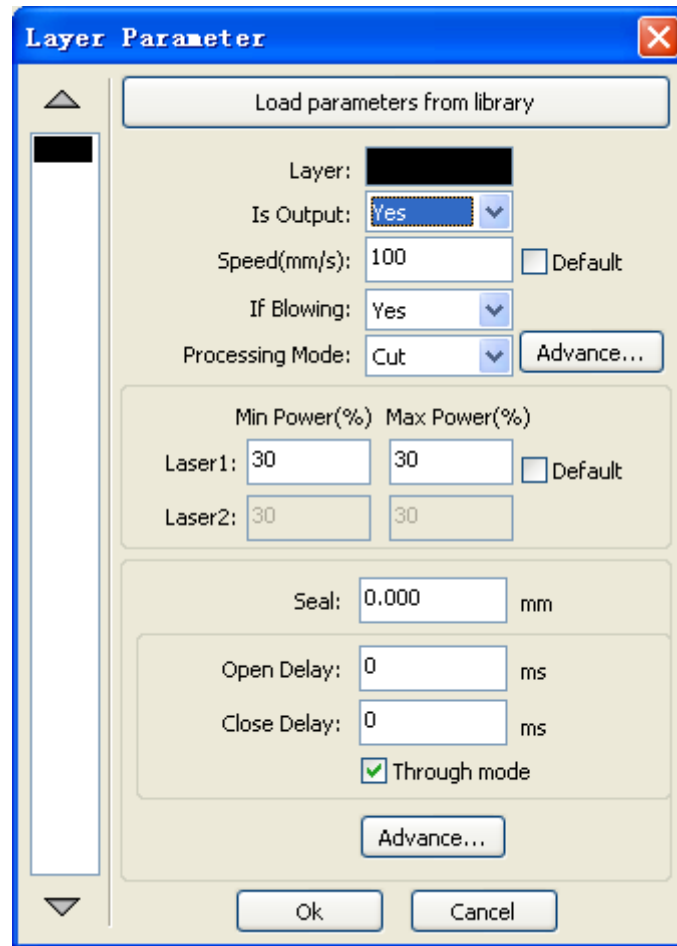

II.5.4.1 Common Layer Parameters Setting

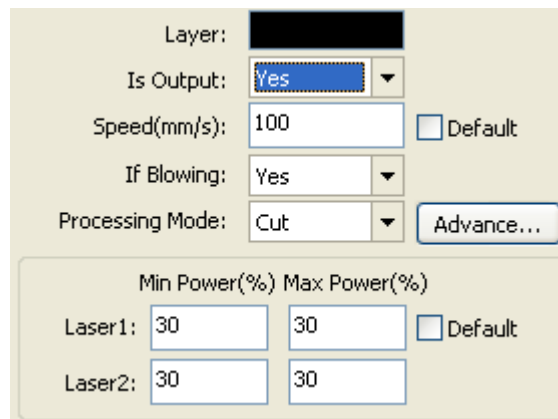

Layer: Software use layer to distinguish processing graphics parameters of different layers. The scan processing methods, a number of the bitmap in the same layer, the overall output as a picture, if you want to separate out all the bitmap, the bitmap can be placed into different layers.

Is Output: There are two options: Yes and No. Select Yes, the corresponding layer will be exported for processing; Select No, the corresponding layer will be not exported for processing.

Speed: The speed of laser processing.

In terms of cutting speed, the better the processing effect is and the smoother the track is; the faster the speed is, the worse the processing effect is;

On the scanning process, the more slowly, the same energy the deeper the next scan, scan traces thickening, scanning resolution accordingly reduced. Faster to scan the same energy the more shallow depth, detail distortion increases.

On the dot process, the main change is the speed of moving air.

If you check the "default", the actual speed of the speed set by the panel to decide.

Is blowing: If the machine add a fan, and fan has been enabled, then if the selection is "Yes", then when processing the layer, it will open the fan, otherwise, will not open fan. If the fan is not enabled, you either select "yes" or "No", are meaningless.

Processing mode: Processing mode, meaning the mode to process corresponding layer.

If you select vector layer (color layer) currently, there are three options: Laser scanning, Laser cutting and Laser dotting;

If you select bitmap layer (BMP layer) currently, there is only one option: Laser scanning.

Laser1, Laser2: Laser signal corresponding to the board 1 channel and 2-way laser output. If a single head machine, the first 2-way laser meaningless.

Min power, Max power: The range of power value is 0~100, it means the intensity of laser during the process; the higher the value is, the stronger the laser is, and the lower the value is, the weaker the laser is.

Processing for different types have different meaning.

The cutting process, the actual power is compared with the cutting speed to follow, the speed of low energy is also low, high-speed energy is high, so as to ensure the energy evenly throughout the cutting process. Therefore, the speed of minimum power corresponding to the lowest energy, the minimum speed is usually 0, but if you set a minimum speed of take-off speed of the take-off speed; maximum power corresponds to the layer speed.

How to set proper Min power and Max power:

If the laser is too strong during the whole process, you should set the minimum and maximal power lower, otherwise, set them higher;

If the laser is too weak in some places during the process, you should set the maximal power higher;


If the laser is too strong in some places during the process, you should set the minimum power lower.

If it is cut through, the minimum power and maximum power was no significant difference can be set to the same.

On the scanning process, general scanning, minimum power and maximum power must be consistent. Carving slope, the minimum power corresponds to the top of the slope of the power, maximum power corresponds to its base of power.

Minimum power is top of the partial width is too small, the details at the Resolution unclear.


Minimum power is too large then the slope is not obvious.

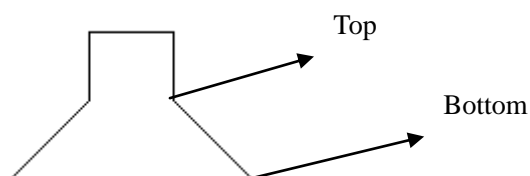

On the laser dot process, the minimum power and maximum power can be set to the same.

If you check the "default", the actual power to set the power from the panel to determine.

Click the button "Advanced", you can also set other layer parameters.

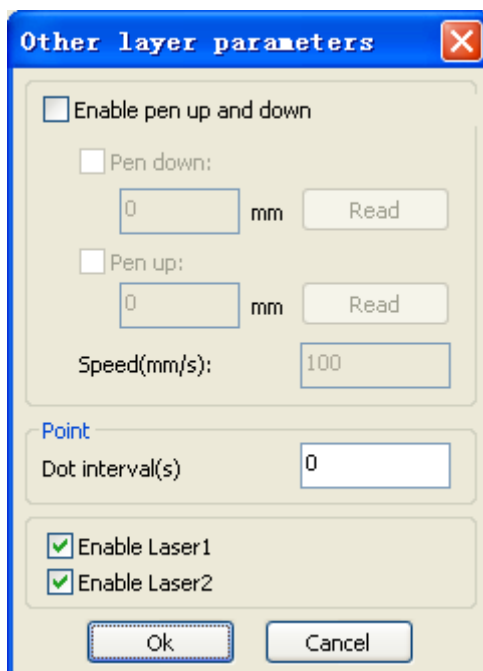

Pen Up and Down:

If the machine has been installed lift platform, and requires a high degree on different platforms for processing, you can the function of Pen up and down.

This position corresponds to pen up is the height at which the platform for processing, carrying the pen position is empty, take the corresponding before, the platform should be moved to the laser head height which then pan will not produce interference with the workpiece to be processed. If the pan does not confirm the laser head to produce interference with the workpiece to be processed, you can not lift the pen position set.

Method:

- 1> Enable pen up and down.
- 2> The position of pen down: Manual control panel key mobile platform to be graphic processing Graphics processing plane, adjusting the focus. Then the button "read", you can set the position of pen down.
- 3> The position of pen up: Manual control panel key mobile platform, move to the laser head does not interfere with the workpiece height and moving the laser head through the panel button to confirm no interference, click the button "read", you can set the position of pen up.

Dot:

Dot here is specifically for the point drawing tools to draw primitives, or imported from a dxf file, point primitives. And independent of the current way of processing layers, namely, whether the current layer is cut or a scan, pixel graphics of the dot to dot mode is always output.


The speed of dot is the speed of layer, and the energy of dot is the maximum energy of the layer.

Enable laser:

When the machine is equipped with two lasers, under normal circumstances, is two simultaneous output

However, users can also be enabled by setting the laser to make them all the way is not output.

II.5.4.2 Laser Scan Parameters Setting

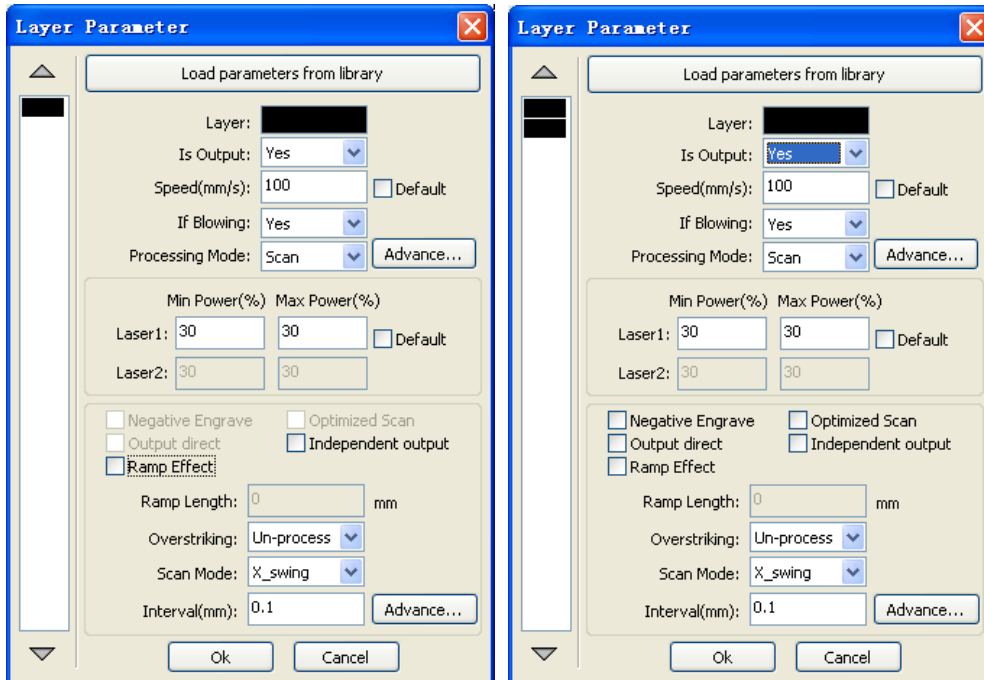

The left side of the dialog box to set the parameters for the vector scan, the right of the dialog box, a bitmap scan parameters.

Scan of the vector data do not support Negative Engrave, Optimized Scan, Output direct.

Negative engrave: If you do not select *Negative engraving*, the black dots which run across the bitmap will emit laser and the white dots which run across the bitmap will not. If you select Negative engraving, the white dots which run across the bitmap will emit laser and the black dots which run across the bitmap will not.

Optimized scan: If you select *Optimized scan*, it will adjust users' setup of *Scanning interval* automatically to the best values and optimize the scanning effect. Otherwise, we should select *Scanning interval* as set by the user for scanning. We generally select the Optimized scanning.

Output direct: On the grayscale bitmap, grayscale graphics for the actual output, where both the deep color of the laser energy, laser energy where light color small.

Ramp effect: If you select Ramp effect, it can make the track edges of scanned figures presented as ramp in order to attain solid effect.

Overstriking: Includes Un-process, Intaglio and rilievo. General select Un-process.

Scan the font is the font that is part of the scan, which is the font intaglio.

Scan the bottom of the bottom part of the scan, which is the font rilievo.

Note: select the ramp effect, set the font bold choose not to deal with. Otherwise, it will affect the ramp effect.

Font intaglio: the text does not have the outline border. It is the text itself that is to be scanned, please see the figure below:

Welcome

Font rilievo: The text has the outline border, it is the figureal base to be scanned, please

see the figure below:

Welcome

Scan modes: including X_unilateralism, X_swing, Y_unilateralism and Y_swing.

X_unilateralism: The laser head scans figures back and forth at the level direction, but only emit laser toward one direction. For example, the laser head emits laser when scanning from right to left, but not emits laser when scanning from left to right.

X_swing: The laser head emits laser and scans figures back and forth horizontally.

Y_unilateralism: The laser head scans figures back and forth vertically, but only emit laser toward one direction. For example, the laser head emits laser when scanning from the top down, but not emits laser when scanning from the bottom up.


Y_swing: The laser head emits laser and scans figures back and forth vertically.

Note: We generally adopt the scanning mode of X_swing.

Interval: The interval between the current line and the next line to be scanned by the laser head. The smaller the interval is, the darker the scanned figures is; If reverse, the weaker.

Recommendation: ① The scanning interval is set below 0.1mm for vector layer (color layer) in general. ② The scanning interval is set above 0.1mm for bitmap layer (BMP layer) in general, and then the Minimum power and Maximum power should be changed to attain the perfect effect of the scanned figures.

II.5.4.3 Laser Cut Setting

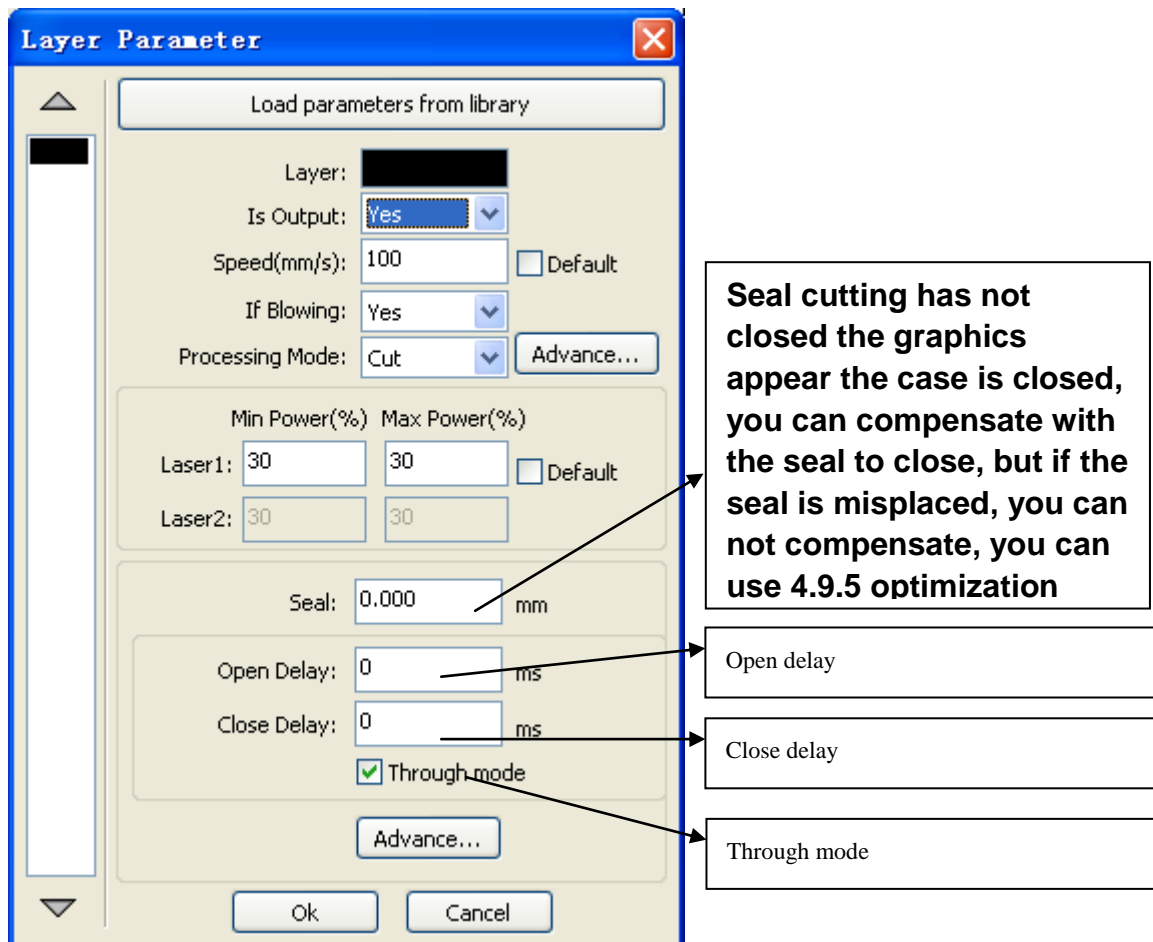

Using the slit width compensation can compensate for the offset between the graphics and the actual output graphics that caused by laser cutting.


It only has effective for the closed graph.

Direction: Compensation direction is set according to actual needs, such as cutting a circle, if you want to retain the cutting down of the circle, you should set out the direction of compensation; If you want to keep the hole should be set to compensate for the inward direction.

Sew width: it is the width of the laser.



II.5.4.4 Laser Dot Parameters Setting

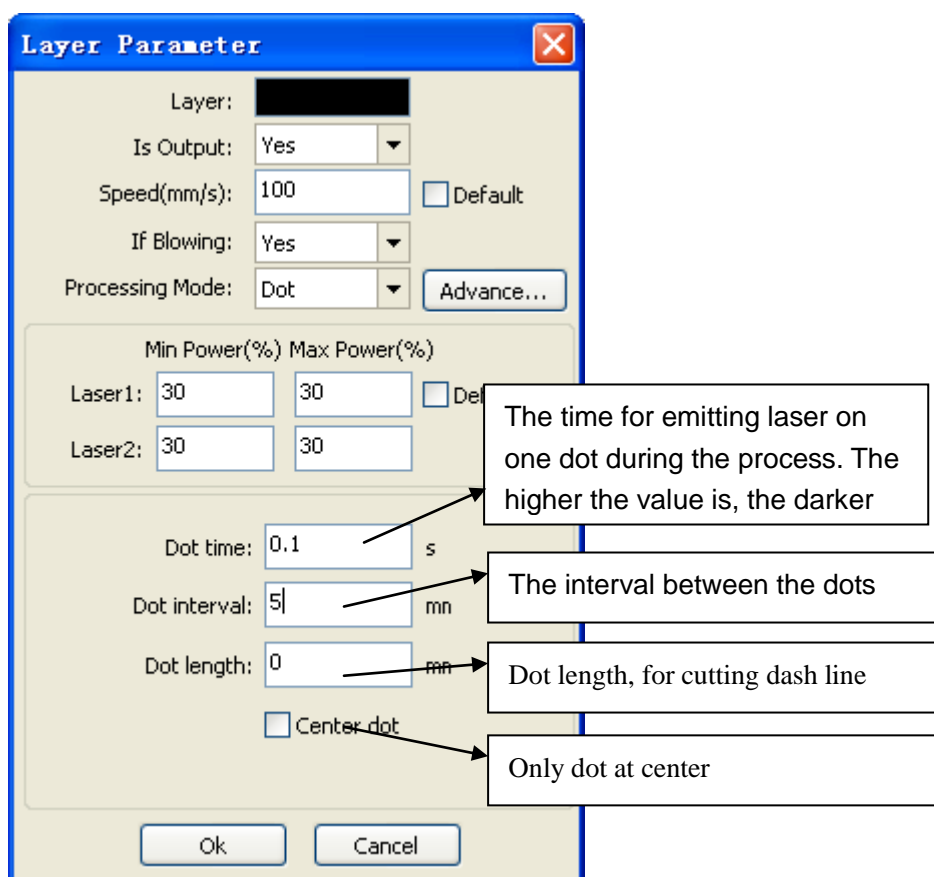

II Chapter 6 FAQ

II.6.1 After start processing, the machine does not move or disorder or loss part of graphics

◆ Check whether the graphic data is out of frame. The data beyond of the frame will not be cut.

◆ Check the setting of Laser head position.

II.6.2 Software automatically shut down when import file

If the operating system is XP, please check if the patch is installed.

II.6.3 Machine panel prompt 【Less buffer distance】

◆ Check the engraving speed in the machine parameter, generally, the engrave speed no 8000

◆ Ensure that graphics are not close to the border of the machine frame.

II.6.4 Processing graphics is mirror to the actual graphics

Check “**Axis Mirror**” in the **General settings** dialog (See: 4.2 **General settings**)

III User's Manual of Laser Engraving Cutting Software LASER__WORK RDCAM6.0

III Chapter 1 Overview

III.1.1 Laser engraving cutting system introduction

Laser engraving cutting system through a computer numerical control machine tools to achieve effective control, according to the user's different requirements of the completion of processing tasks。

The system including control board and control panel, and supporting software. This manual describes how to use the software to complete the task of laser processing.(Motherboard wiring and control panel operations, see the accompanying manual and control panel wiring board operating instructions)

III. 1.2 Software supported file formats

Vector format: dxf, ai, plt, dst, dsb...etc.

Bitmap format: bmp,jpg,gif,png,mng,...etc.


III. 1.3 Environmental requirements

- (1) WindowsXP operating system and above, XP recommended。
- (2) Above CPU586,above PIII or PV recommended。
- (3) Memory, above 1G recommended

III Chapter 2 Software Basic Operation

III.2.1 The main interface operation

After start the software, you can see the interface shown in the following figure.

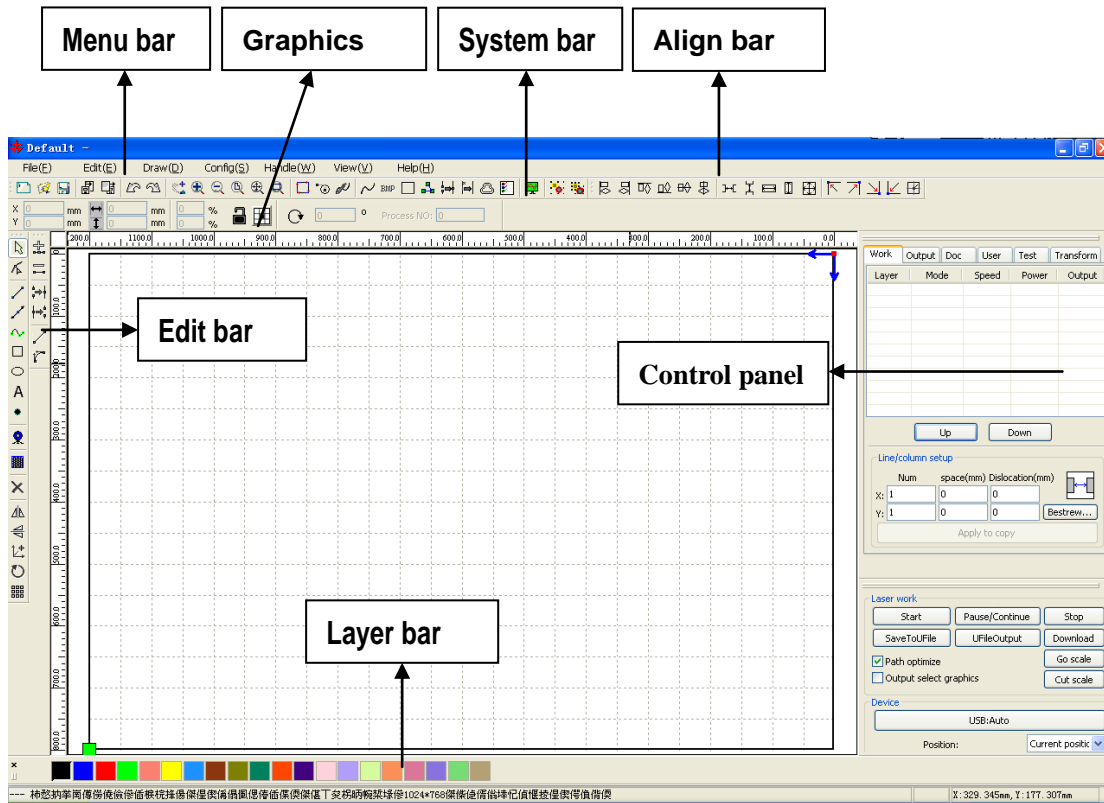

Menu Bar: The main function of this software are available through the implementation of the Menu Bar. Execute the menu command is the most basic mode of operation. Menu Bar including: Document、Edit、Draw、Setting、Processing、View and Help.

System Bar: On the System Bar, placed some most commonly command buttons which is chosen from the menu.

Graphics Bar: Graphics property bar is the basic attributes of graphics operations, including graphic location, size, scale, number processing.

Edit Bar: The Edit Bar default on the left of the work area. In the Edit Bar placed frequently used tools to make the operation more flexible and convenient.

Align Bar: Alignment of the selected objects。


Layer Bar: Change the layer of the selected objects。

Control Panel: Using the Control Panel to complete laser processing of multiple tasks, Layer parameter settings, axis control, processing ...etc.


III. 2.2 Language settings and manufactures information

In addition to installation process can set the software language type, you can easily switch in different language.

Click Menu Bar【Help】->【语言/Language】expand menu, select the required language types.

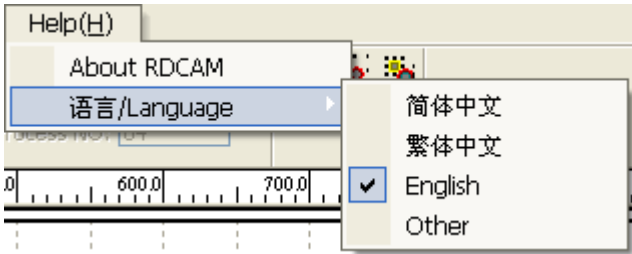


To obtain manufacturers information,so that we can provide you with better service. Click Menu Bar 【Help】 -> 【About RDCAM】

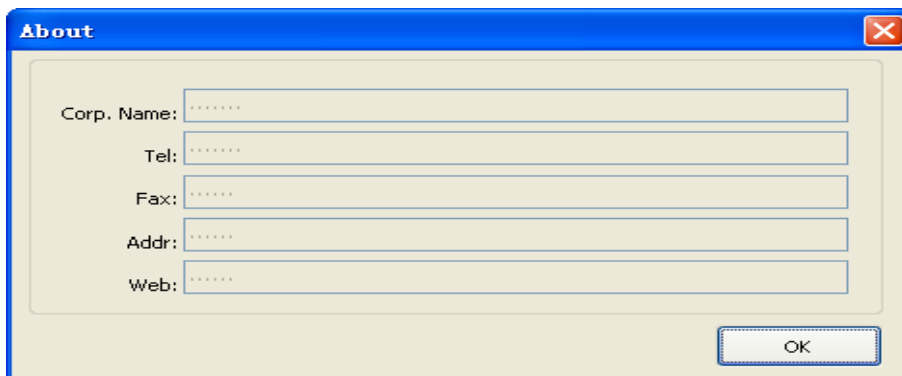

The bottom of the dialog box shows the current software version number. As different versions of software may have some differences on the functions and interfaces, you can easily contact and communicate with manufacturers through software version number.

III.2.3 Page Setting

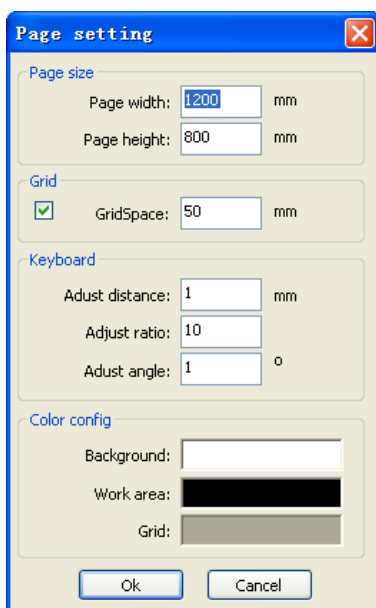

Click Menu Bar 【Config】 -> 【Page setting】 the following dialog box appears:

【Page width】: Software page width, usually associated with machine X breadth.

【Page height】: Software page height, usually associated with machine Y breadth.

Under normal circumstances, if you have connected to the motherboard, software will automatically format for the

current work of the machine, as a page size.

If the board is not connected, or need their own custom page size (such as to set the page size by material), you can use the page setting to reconfigure the page size.

【Grid】

Setting grid space and whether enable grid.

【Keyboard】

User can use arrow key to moving or rotating the selected graphics.

【Color config】


Setting the color of the work area.

III. 2.4 File Open and Save

The software uses rld file format to save graphic information、 layer parameters of various layers and processing sequence of the graphic elements.

III.2.4.1 Open File


Click menu **【File】** -> **【Open】** ,or click icon, the following dialog box appears:

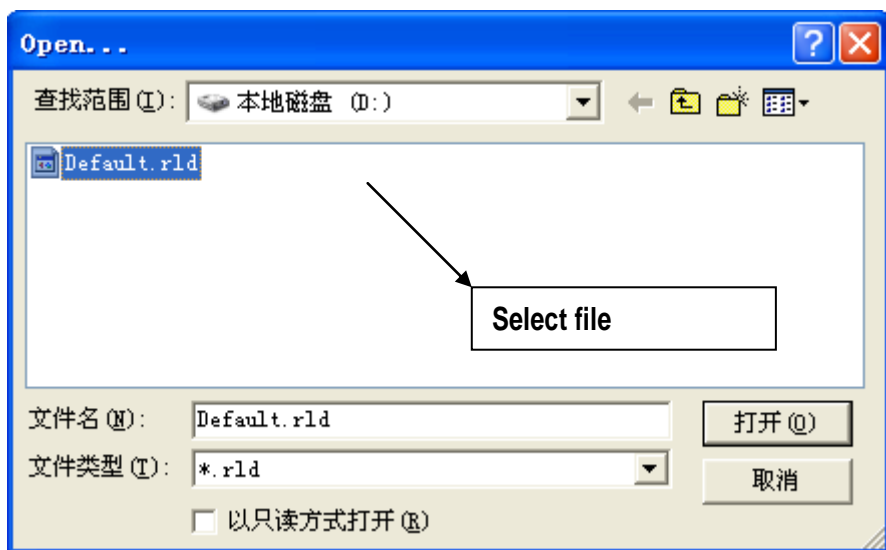

(2) Select file (e.g. Default.rld), click **【Open】**

III.2.4.2 Save File

(1) Click menu **【File】** -> **【Save】** ,or click icon,the following dialog box appears:

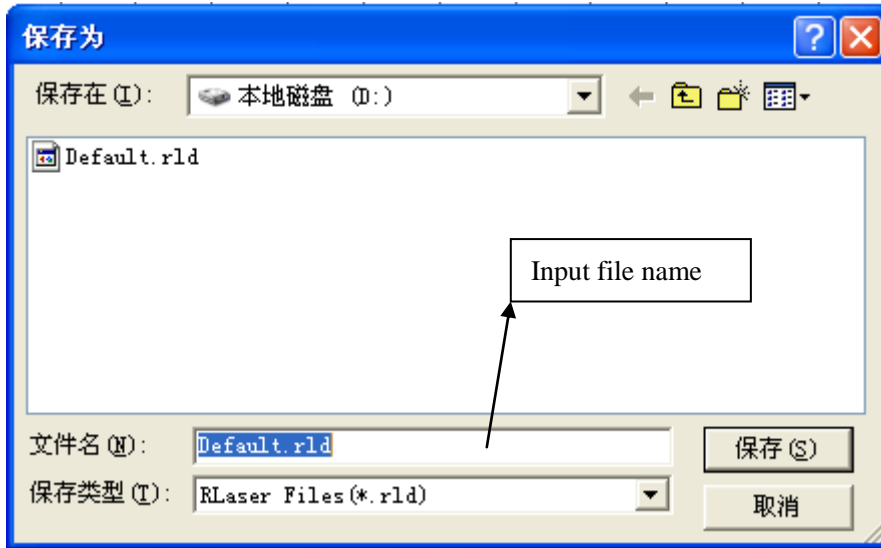

(2) Enter the file name in the edit box, then click **【Save】**.


III. 2.5 File Import and Export

Because this software is rld format, so to make or edit the use of other materials will be done by importing. After using the Export to graphic files for other software.
Supported file format for import : dxf, ai, plt, dst, dsb...etc
Supported file format for export: plt

III.2.5.1 File Import

Click menu **【File】** -> **【Import】**, or click icon . The following dialog box appears.


Select file, and click **【Open】**.

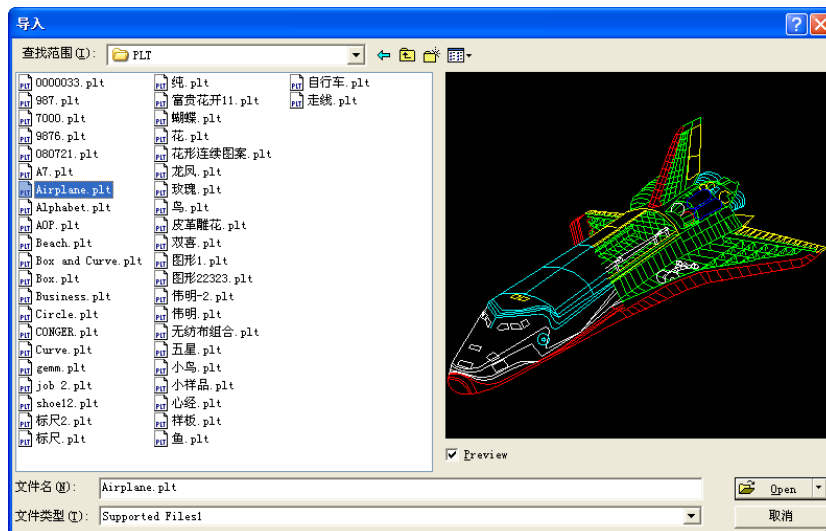

◆ Select **【Preview】**, the selected file can be shown.

For most vector file, data automatically imported into the corresponding layer of RDCAM software according to the layer description.


For some special documents such as DST/DSB, data will be imported into the current layer.

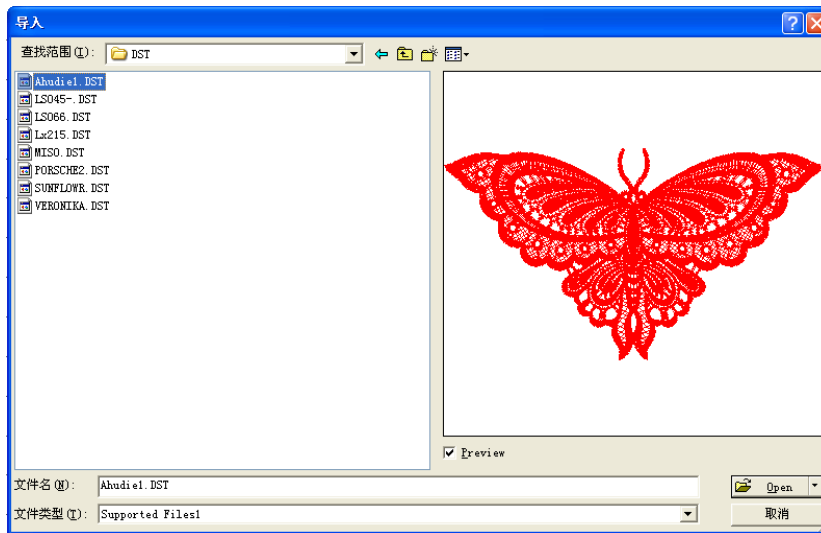

Current layer




III.2.5.2 File export

Click menu **【File】** -> **【Export】** or click icon . The Export dialog box appears.

Input file name, and click button **【Save】**.

III. 2.5.3 File parameters setting

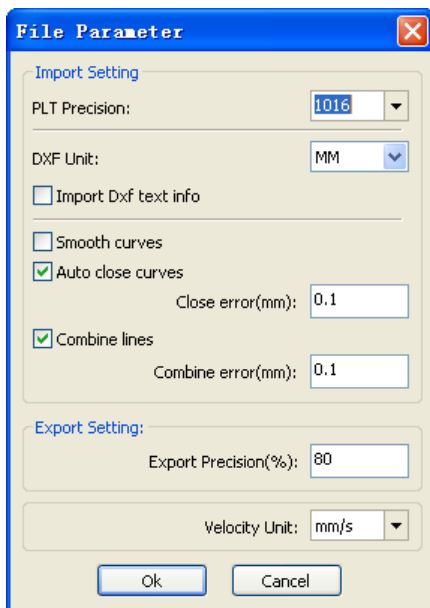

PLT Precision: According to the accuracy of the original plt file to select the appropriate import unit.

Smooth curves: When import vector file, automatically smoothing the original curves. For the original graphic is smooth or need to repeatedly adjust the beset smoothing effect, you can uncheck this button. Do not do smoothing curves may reduce time of import processing.

Auto close curves: According to close tolerance automatic check and closed curve

Combine lines: According to merger tolerance, auto-connecting curves.

Color map automatically switch to grayscale: Because under normal circumstances, graphics are based on grayscale. If the imported bitmap is a color image can be converted to grayscale.


Import Dxf text message: When the user need only Dxf the graphic information, not need the text information within the file, do not check this.

Export precision: The precision of export plt file or output file.

Velocity unit: Software supported two types of speed unit: mm/s、m/min. Selected according to usage. After it was selected, the speed of parameters on the interface unit will change with it.

III. 2.6 Basic graphics creation


◆ Line

Click menu **【Draw】** -> **【Line】**, or click Edit Bar , drag the mouse on the screen you can draw an arbitrary line。 Press the “Ctrl” key while dragging the mouse to draw horizontal or vertical line.


◆ Polyline

Click menu **【Draw】** -> **【Polyline】**, or click Edit Bar 。 Drag the mouse on the screen you can draw an arbitrary polyline.

◆ Rectangle

Click menu **【Draw】** -> **【Rectangle】**, or click Edit Bar 。 Drag the mouse on the screen you can draw an arbitrary size rectangle.
Press the “Ctrl” key while dragging the mouse to draw square.


◆ Ellipse


Click menu **【Draw】** -> **【Ellipse】**, or click Edit Bar 。 Drag the mouse on the screen you can draw an arbitrary size ellipse.
Press the “Ctrl” key while dragging the mouse to draw round.

◆ Point

Click menu **【Draw】** -> **【Point】**, or click Edit Bar 。 Click the mouse on the screen, you can draw a point.


◆ Text

Click menu **【Draw】** -> **【Text】**, or click Edit Bar 。 And then in a drawing area any position click, pop-up text input dialog box.

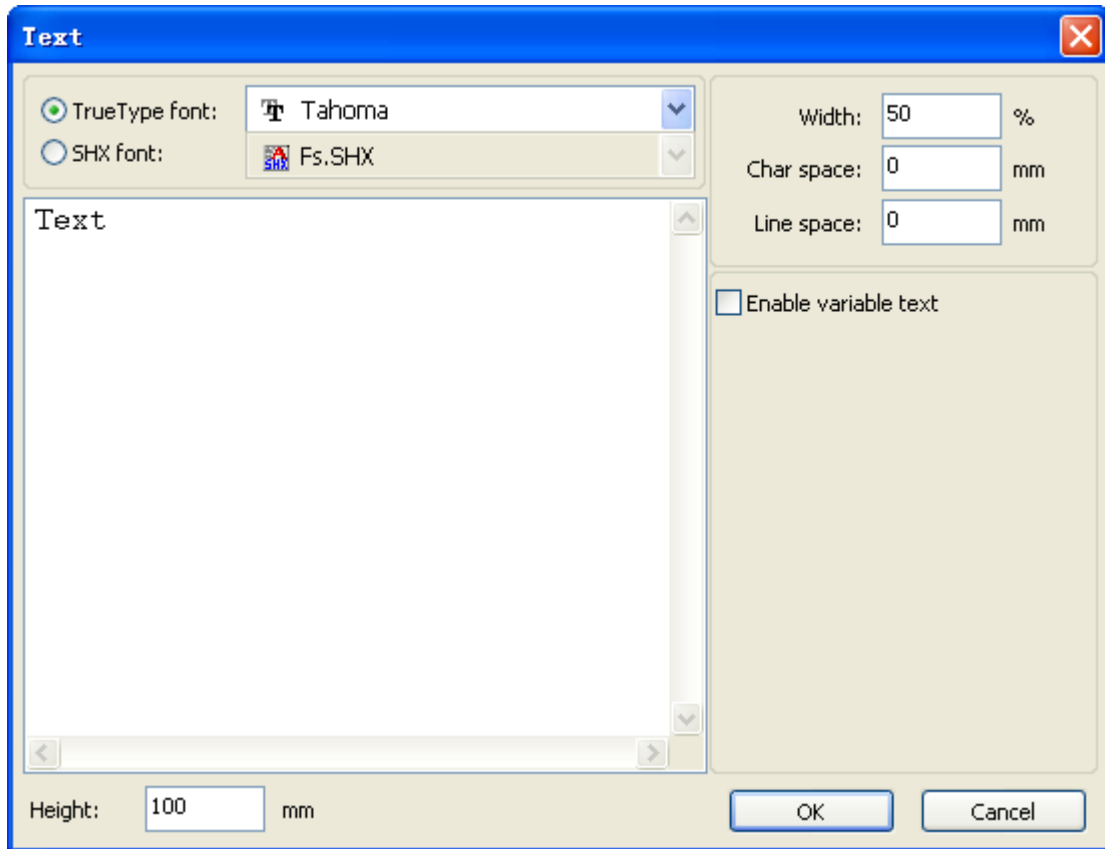

Choose font word, input text word, then set high , wide, word spacing, line spacing. Click again **【OK】** .


The software also supports variable text, the so-called variable text, the text is need according to certain rules change, every output processing time, text to be automatic change again. For the system variables have character type date variables and serial number

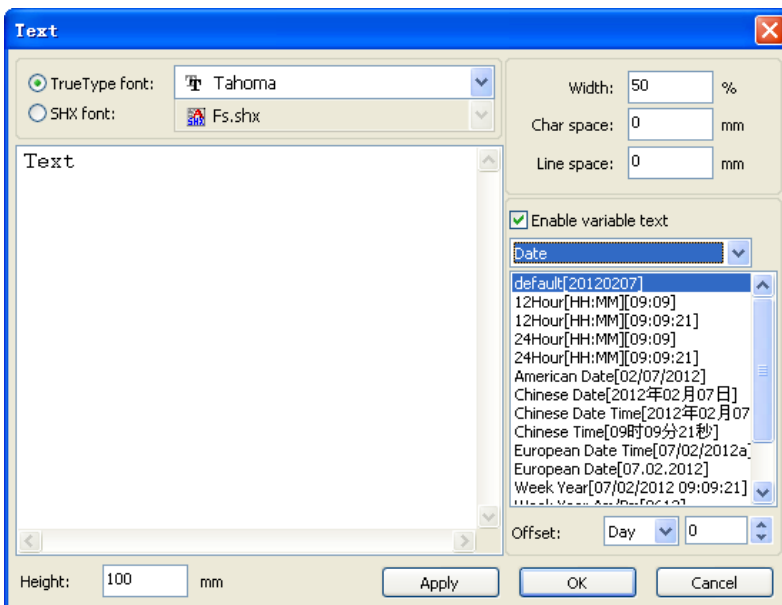

Variable is the date when the current every time processing take the current system of computer time output. Software offers a variety of date format for customers to choose.

Users can also set the date migration, have the day by the month according to the years 3 kinds.

As in packaging carved on the expiration period can use the product.

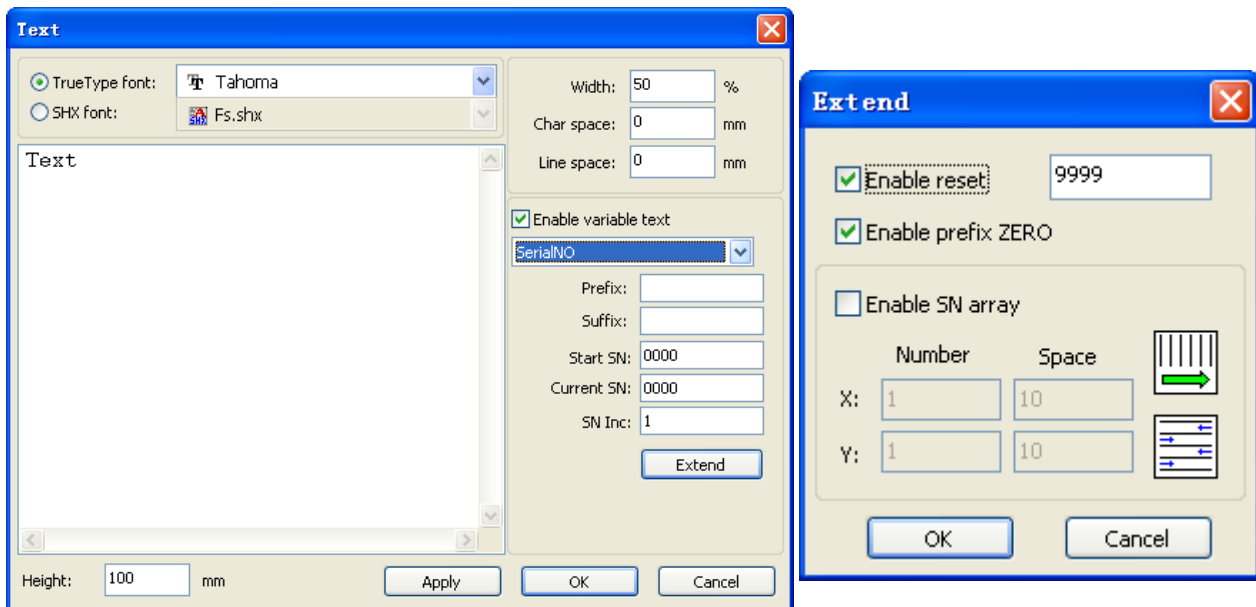

If ABC0001DEF processes repeatedly, ABC0002DEF, ABC003DEF until ABC9999DEF a group of serial number.

【Prefix】 : serial number prefix, example ABC is leading string.

【Suffix】 : the serial number of the suffix, example DEF is the string after.

【Start SN】 : from which a specified number start manufacturing, example is to start to 0001 serial number.

【Current SN】 : the current processing to which, serial Numbers, can also be used to specify the current to processing which serial number. As in the processing a group of serial number, leakage processing the one, but through the designated the current serial number to make processing, not set start, serial Numbers, because in some cases a group of serial number requires repeated processing, namely to a serial number, need to go back to the start serial number start manufacturing.

【SN Inc】 : the interval number can be prescribed sequence number. Example will in turn processing from 0001 to 9999 serial number, the increment is 1.

If only need to output even or odd number serial number, can set incremental is 2.

【 Enable reset】 : when serial number processing to reset the serial number, **【current SN】** will be automatically reset to **【start SN】** .

Example requires repeated processing from 0001 to 9999, serial Numbers, so can be designated 9999 as reset, serial Numbers, when processing the 9999 serial number, text will automatically change to 0001.

【 Enable prefix ZERO】 : if not lead to zero, the system will automatically remove the first in the serial number of zero digital before the zero. Such as the example, serial Numbers, if not the leader's zero can ABC0001DEF will become ABC1DEF. But it is worth noting that, if we want to output serial number is ABC1DEF, ABC2DEF until ABC9999DEF, we can't

through the will **【start SN】** set to 1 to achieve, but through the cancel **【 Enable prefix ZERO】** to achieve, this is because set in the specified number from the start the serial number which one, beginning outside, also specifies the number of significant digits, such as will begin to serial number set to 1, the change of the serial number order is:
1,2,3,4,5,6,7,8,9,0,1,2,3,4,5... Serial number won't change to 10, because the effective a serial number had 1.


【 Enable SN array 】 to the array of way, one-time processing more serial number.

for instance:

0001 0002 0003	after this batch processing serial number,	0015 0014 0013
0006 0005 0004	skip directly to the next group of	0007 0008 0009
0016 0017 0018		0016 0017 0018

◆ Capture

Click menu **【Draw】** -> **【Capture】**, or click Edit Bar 

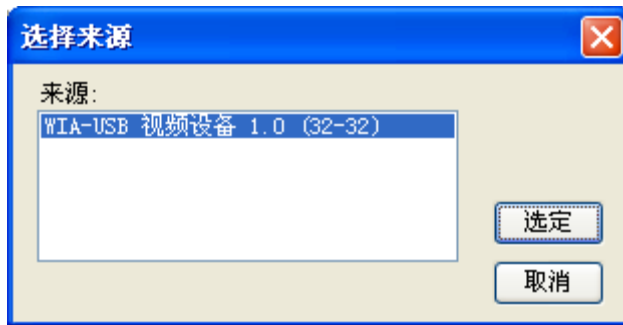


If the computer has been connected to the image device, the dialog box will appear. After it was selected, you can collect the pictures from the specified device.

2.7 Object Selection

In the process of drawing and edit graphics, first of all is to select the object.

When the object is being selected, in the center of this object will have a shaped mark "×", and surrounded by eight control points.

Click menu **【Draw】** -> **【Select】**, or click Edit Bar , switch to status "Select". Under this status, you can select object. The following are five kinds of method of selecting:

◆ Click menu **【Edit】** -> **【Select All】** (Shortcuts Ctrl+A), select all objects。



◆ Click mouse on the screen to select single object

◆ Select object using select box

Press the mouse and drag, as long as the box come into contact with the object will be selected.

◆ Increased select object/minus select object

Increase select: Press “Shift” key, click or box select to increase select object.

Minus select: Press “Shift” key, click or box selects the selected object.

◆ Select object according to layer



Right-click the selected layer, then the part of all objects in the layer will be selected.


III.2.8 Object Color

The color of object that is the color of the object contour. You can click the color button on the Layer Bar to change the color of the object has been selected. The color of the pressed button is the color of current layer.



III. 2.9 Object Transformation


Transformation of object mainly include: object location、 orientation and size. But does not change the basic shape of the object and its characteristics.

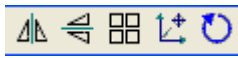Transformation of object for users, provides a convenient user interface. User can mirror and rotation through  within the draw toolbar.


You can also use the Object Properties toolbar




You can also use the right transformation tools to transform and copy the graphics.

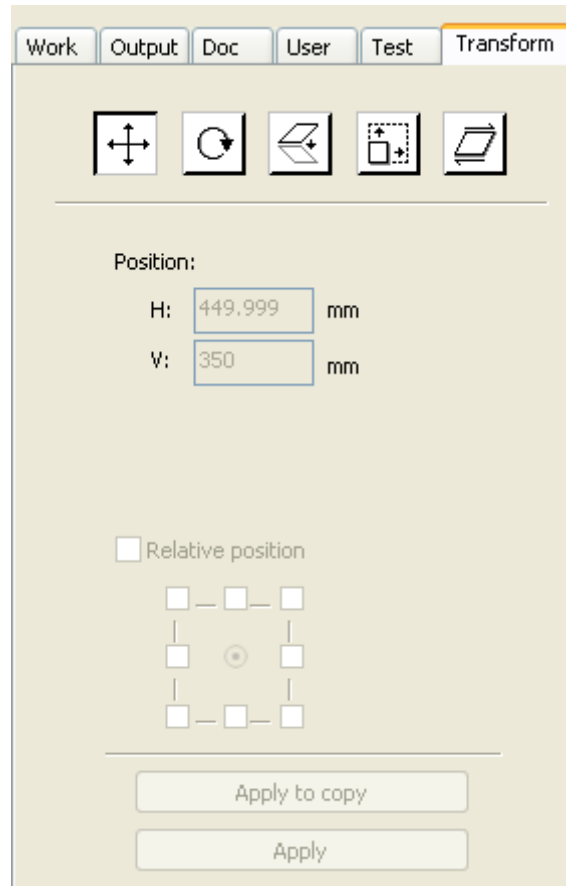


III.2.9.1 Object Image

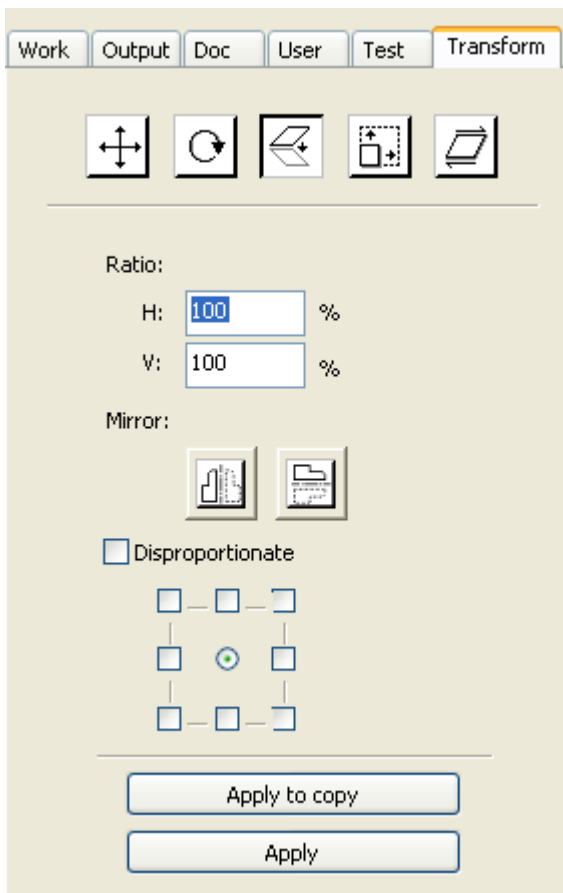


Object image is flip the selected object in the horizontal or vertical direction.

Click Edit Bar  , flip the selected object horizontal.


Click Edit Bar  , flip the selected object vertical.

Or through the mirror to the transformation tools, horizontal and vertical mirror, and copy.

III. 2.9.2 Object Rotate


Click Edit Bar , will pop up the dialog of rotate angel setting.

Set rotate angle and click the button **【OK】** .

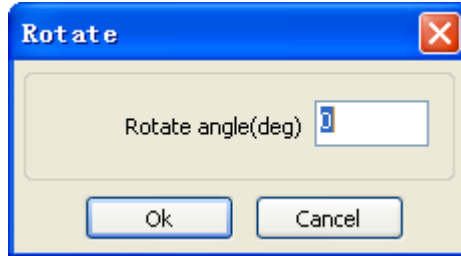


If you want to drag rotation, set rotate angle 0, and determine.

Dragging the mouse to adjust the rotate angle, in the dragging process, there will be followed by rotating wire-frame outline.

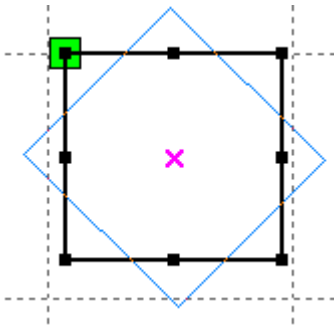

Or directly enter the rotation angle in the Object Properties toolbar.

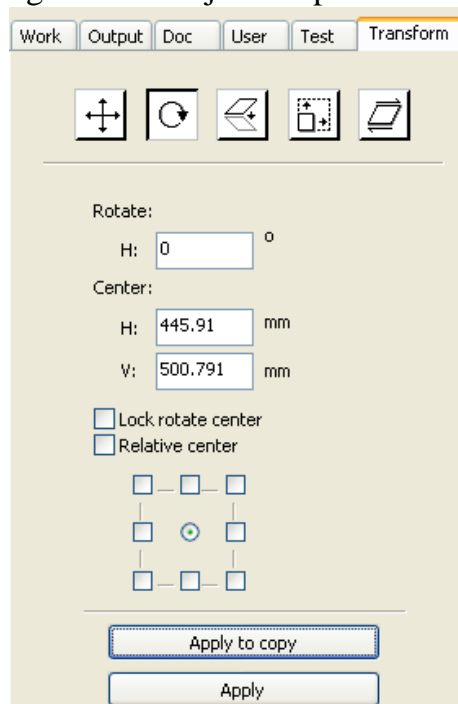

Or use the spin rotation transformation tools to transform. In the rotations transformation tool can be set to the center of rotation and locking center of rotation.

III. 2.9.3 Object Size

X	445.91	mm	↔	235.989	mm	100	%	🔒	📏	↻	0	°	Process NO:	1
Y	299.208	mm	↕	208.549	mm	100	%							

You can set size and center position of the selected object.

Work Output Doc User Test Transform


Size:
H: 235.989 mm
V: 208.549 mm

Disproportionate

Apply to copy
Apply

Or use the size transformation toolbar to change the size of object. Can modify the size, choose whether to lock the aspect ratio, and set the position relative to the object to transform.

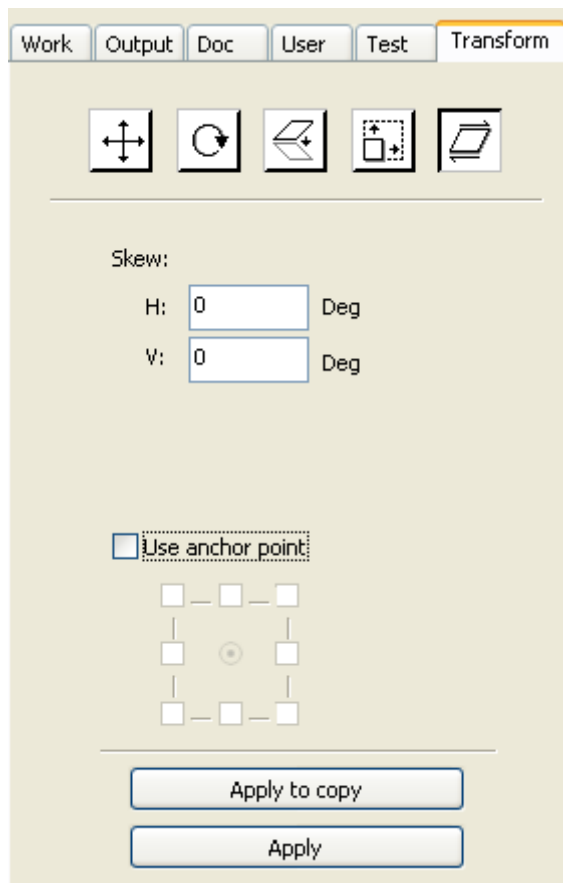

III. 2.9.4 Tilt




Object can be tilted by the tilting transformation tools. It can be set the tilt anchor and the tilt angle.

The tilt will cause distortion of the bitmap and the practical application of small, currently only supports the tilt vector graphics.

III. 2.9.5 Object Array Replication

Click Edit Bar , select object wants to copy. Then click , the following dialog box appears:

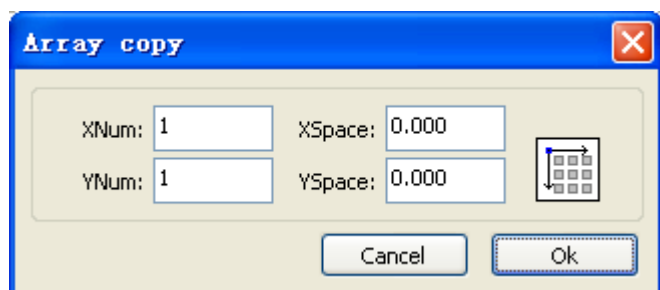

Width of a single graphic(mm)



Height of a single graphic(mm)

You can array replication object along different directions. The direction of copy is based on the original graphics. Such as choose the array direction lower right, then the original graphic

will appear on the upper left corner. whereas if it is to the upper left array, then the original graph appears in the lower right.

After setting the array number and array spacing, click button **【Apply】**, you can see the actual graphics array.

There are two forms of array spacing: center spacing and edge spacing.

Choose center spacing, then **【X Distance(mm)】**, **【Y Distance(mm)】** representing the distance of the two graphic center.

If not choose center spacing, then **【X Distance(mm)】**, **【Y Distance(mm)】** representing the distance of the graphic edge.

Center distance X = Edge distance X + width of object

Center distance Y = Edge distance Y + height of object

Switch between the two kinds of calculate method, **【X Distance(mm)】**, **【Y Distance(mm)】** will be calculated automatically.

Click **【Bestrewing breadth】**, The software will automatically calculate the array number according to the workpiece size, width, height, X distance and Y distance.

Adjust spacing can be directly input values, and click **【Apply】**

Can also press the direction keys to adjust objects spacing.

Check **【Center】**, then after object array replication, graphics will be centered on the work area. Scroll the mouse wheel to zoom view of the graphics.


Drag the mouse to pan view of the graphics.

III. 2.9.6 Place Object To The Origin

Place the object is to facilitate the view or orientation. The following tools are provided by software:



, selected object will be placed in the center of the page, that is the object center coincides with the center of the page.



, Selected object will be placed on the page left, upper right, lower right, lower left, upper left corner of the object, upper right, lower right, lower left and upper left corner, top right, bottom right, bottom left corner of coincidence.

III. 2.10 Object Align


Select objects, click tools on the Align Bar .

Which include:

    Left alignment、 Right alignment、 Top alignment、 Bottom alignment

   Vertical center alignment、 Horizontal center alignment、 center alignment

  Horizontal equidistance、 Vertical equidistance

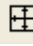   Same width、 Same height、 Same size.


Benchmark object:


If you press “Shift”key and select object one by one,then the benchmark object is the last object.


If you select object by select box,then zhe benchmark object is the object which curve number in the final.

III. 2.11 Object View


Move: Click menu **【Edit】** -> **【Move】**, or click . Then hold down the left mouse button in the drawing area, and drag pan.

Zoom Out: Click menu **【Edit】** -> **【ZoomOut】**, or click . Each click it, the drawing area zoom out once.Move mouse to the drawing area and click,each click,mouse position as center drawing area zoom out once.

Zoom In: Click menu **【Edit】** -> **【ZoomIn】**, or click . Each click it, the drawing area zoom in once.Move mouse to the drawing area and click,each click,mouse position as center drawing area zoom in once .

View Select: Click menu **【Edit】** -> **【View Select】**, or click . Move the mouse to the drawing area,hold down the left mouse button and drag, a dash border box will show in the drawing area,release mouse button, then the region in the dash border box will display in the drawing area with the largest proportion.

View Page Frame: Click menu **【Edit】** -> **【View Page Frame】**, or click . The page frame will full display.

View Data Frame: Click menu **【Edit】** -> **【View Data Frame】**, or click . The selected objects will full display

III. 2.12 Group and UnGroup

Edit graphics, and sometimes need to be a part of the operation as a whole (such as multi-line text layout).


to another list, to be processed as the first primitive. Primitives followed by repeated operations, to complete sequencing of all graphics.

Change the direction of graphic processing

Mouse select the graphic in the graphics display area or in the list. And then click


Reverse

Change the cutting point

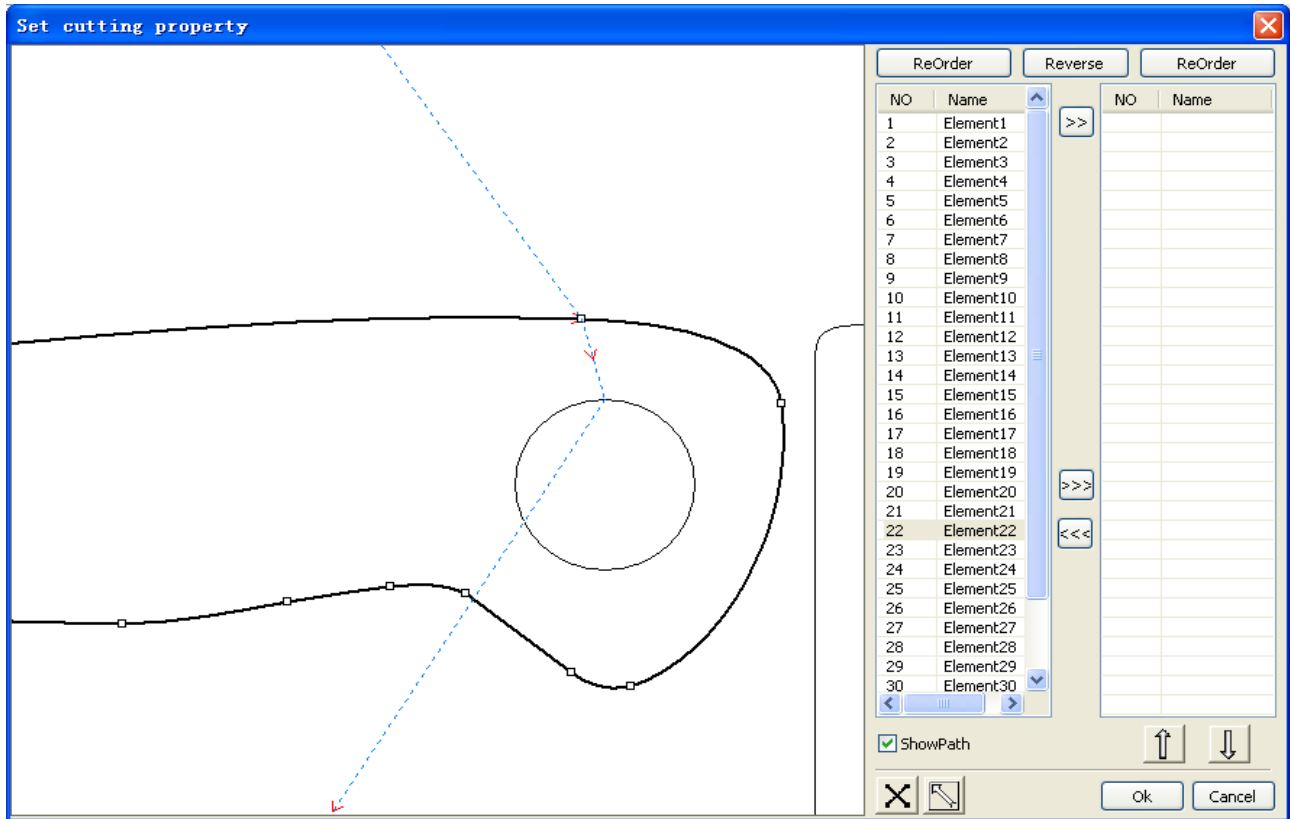


Select the graphics that should be changed the cutting point, it will show all the nodes in the current graphics. Select the starting point, double-click the mouse, it will change the starting point of the current graphics. After the completion of all changes, click **确定**, the result of the changes can be saved.


In addition to cutting property features, the software also offers some tools to change the cutting order, cutting direction and cutting point.

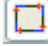Select  in the toolbar, or click the menu command **【Edit】** -> **【Show Path】** .

Manual sort

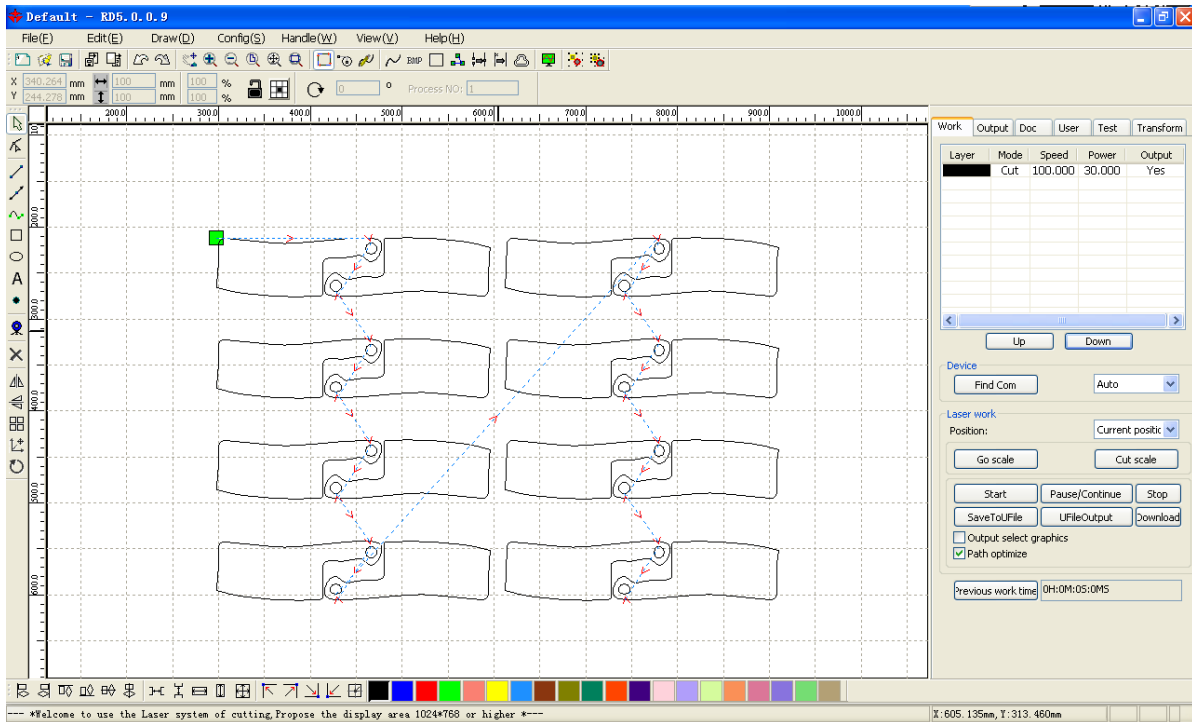

Choose the primitive that should be changed the cutting order, then the cutting serial number of the current primitive will display in the object properties bar.

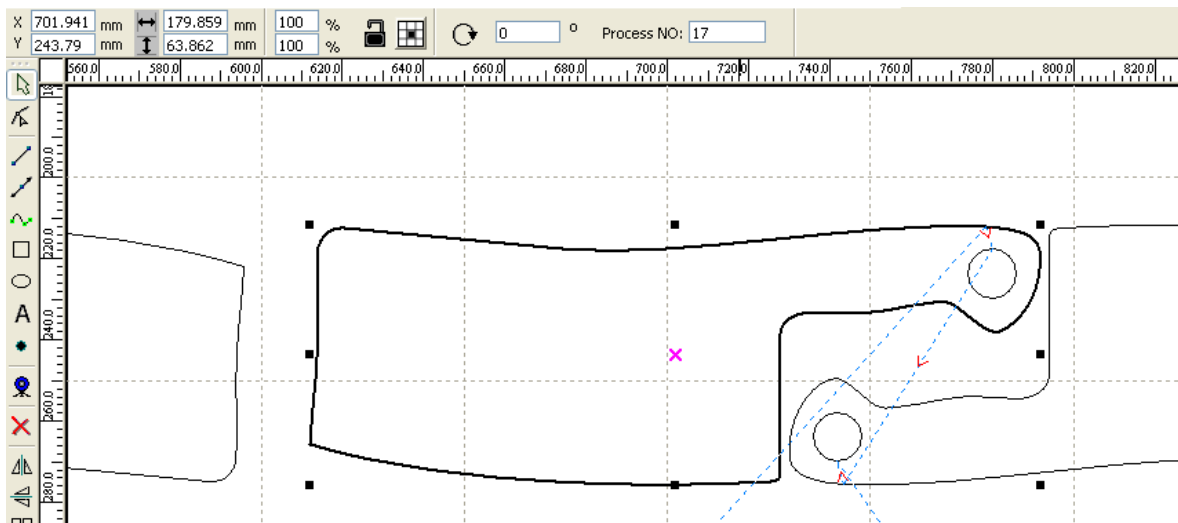

Enter the serial number directly in the processing number, then press the keyboard “Enter” key, or click the plot area, the cutting order will be changed.

Change the processing direction


Click **【Edit】** -> **【Set cut direction】**, to enter the edit mode of the cutting direction. Then you can double-click on any position on the selected graphic.


Change the cutting point

Click **【Edit】** -> **【Set cut point】**, to enter the edit mode of the cutting point. Then select the curve that should be edited, you can double-click on the node that you want to set the cutting point to complete the change of the cutting point.

III. 2.13.2 Setting And Editing The Cut In/Cut Out Lines

Drawing or importing curves, the curve is default not have any cut in/cut out lines.

If want to add cut in/cut out lines,select the objects, then click **【Edit】** -> **【Edit cut in property】**, or click .The following dialog box is appear.

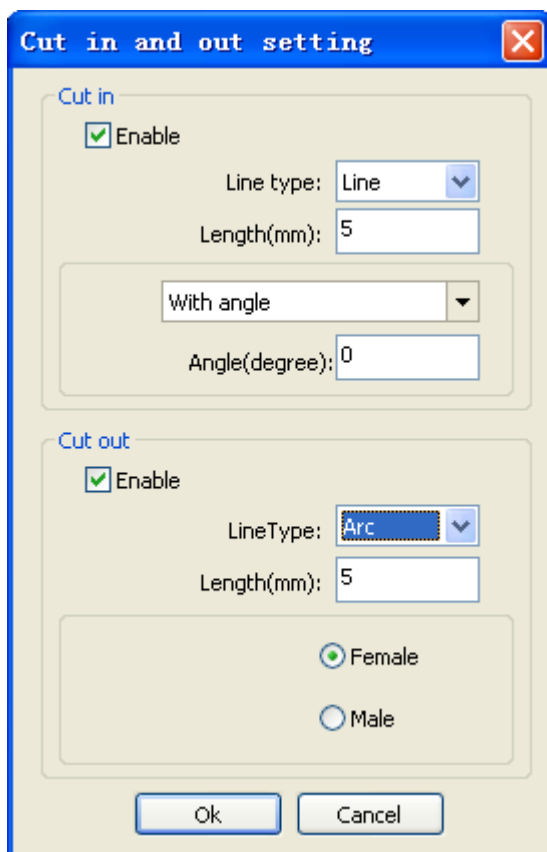

To make cut in/cut out lines, first of all need to enable the cut-in/cut out function.


There are two types of the cut in/cut out lines: straight line and arc

Straight line cut in achieve through three ways:

Cut in with angle: cut in line and starting segment into a certain angle, counterclockwise angle is positive


Cut in at center, the starting point of the cut in line is at center.

Cut in from center, the direction of the cut in line is from center to starting point, and length is as setting.

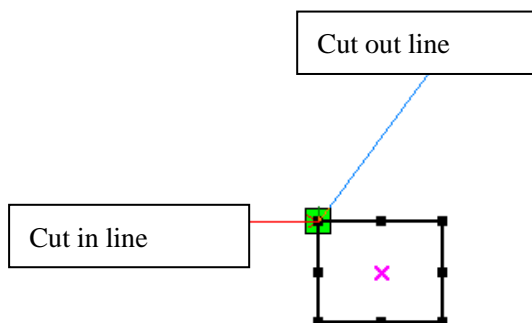

The arc length of cut in arc is as setting.


There are two types of cut in/cut out arc, as shown in the following figure

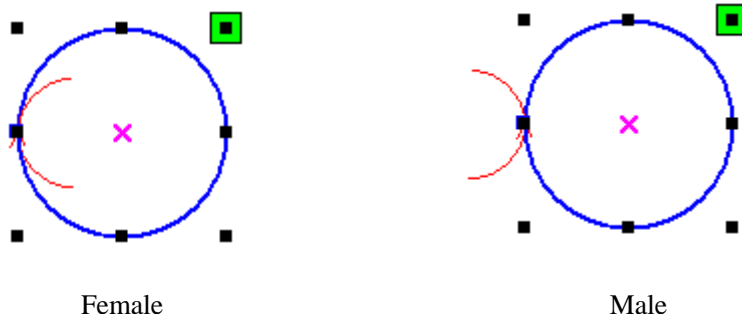


The processing of setting cut out lines is same as cut in lines.


III. 2.13.3 Path Optimization

Path optimization is primarily to re-order the vector graphics.

Click menu **【Handle】** -> **【Cut optimize】**, or click , the following dialog box is appears.

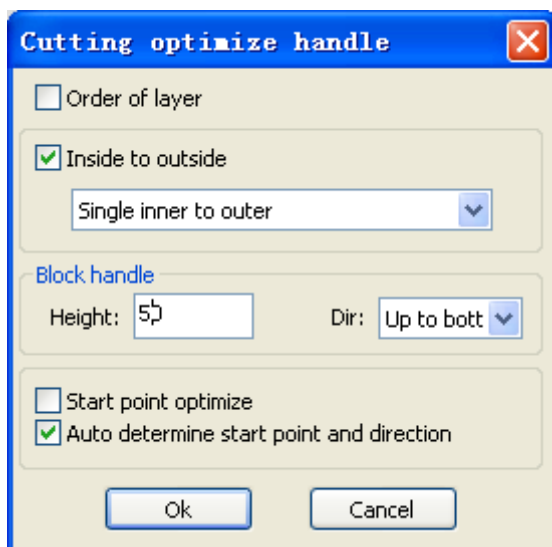


Click menu **【Edit】** -> **【Show Path】**, or click , can see the cutting path before and after processing.

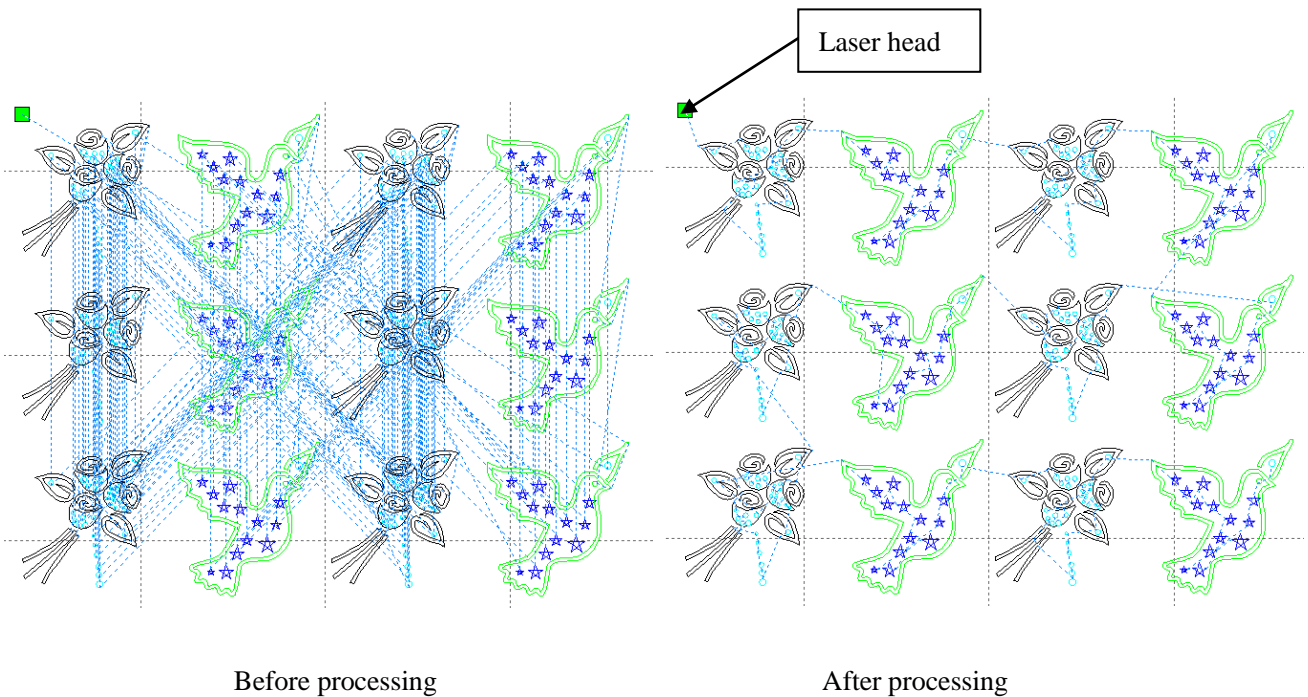


Graphics cutting path is always starting from the laser head.

III. 2.13.4 Curve Smooth


For some less accuracy curves, this function can make curves more smoothness, and processing smoother.

Click menu **【Handle】** -> **【Curve Smooth】**, or click , the following dialog box appears.

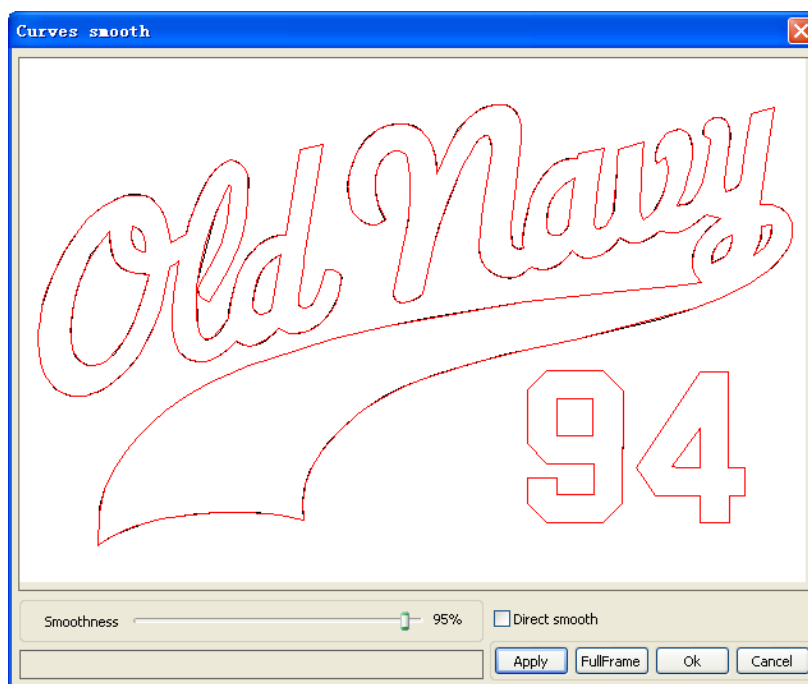

Drag the smooth slider, and click button【Apply】, before smooth and after smooth curves will all show in the dialog。

The black curves represent the original curves, and the red curves represent after smooth curves.

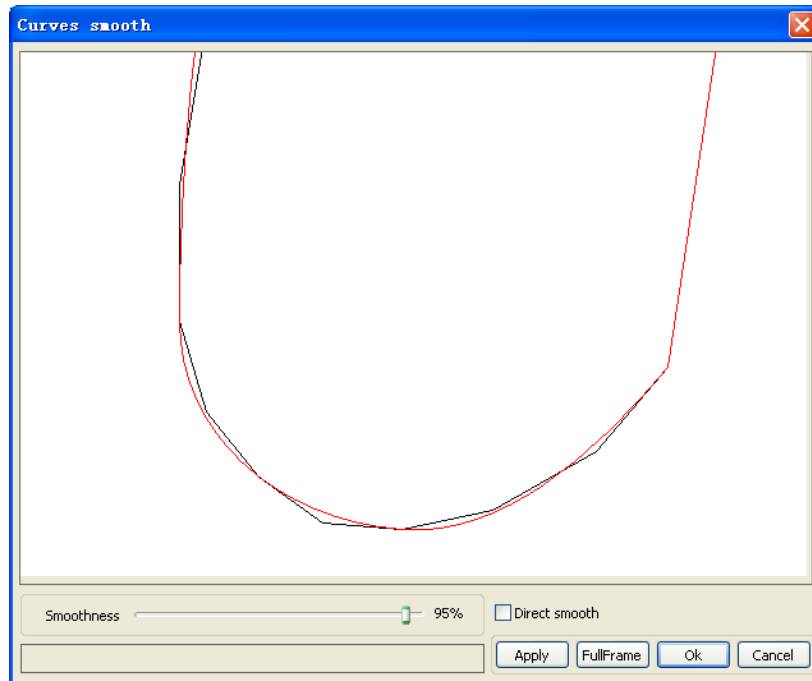

You can view the graphics with drag mouse.

You can zoom in/zoom out the graphics with scroll wheel.


Click button 【FullFrame】, graphics will shown in the dialog box for largest.


After get satisfied smoothing effect, click button【Apply】, curves will processing smooth according to smoothness settings.

Select “Direct smooth”, you can use another smoothing method.

The choice of smoothing method should be changed with the needs of the actual graphic.

III. 2.13.5 Check Closure

Click menu【Handle】->【Curve auto close】, or click System Bar , the following dialog box appears.

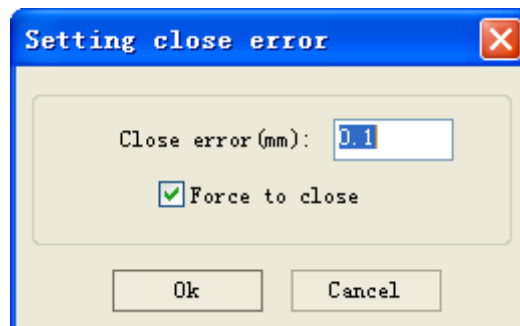


Close error: When distance from the starting point to ending point less than close tolerance, automatic closing of the curve.

Force to close: Mandatory closure of all selected curves.


III. 2.13.6 Remove The Overlap


Click menu **【Handle】** -> **【Delete overlap】**, or click , the dialog box appear.

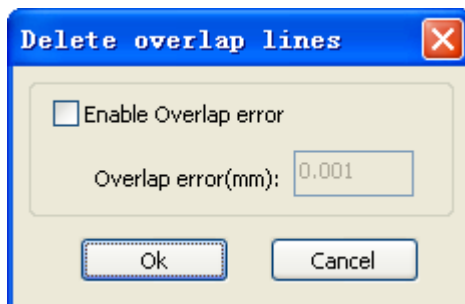

Under normal circumstances do not select the “Enable Overlap error”. Removing the overlapping lines when two lines are compared to a good degree of coincidence. If you need to delete overlapping lines, you should select “Enable Overlap error”, and set overlap error. Generally do not overlap error set too large, so as to avoid accidental deletion.


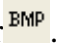
III. 2.13.7 Combine Curve

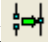
Click menu **【Handle】** / **【Combine Curve】**, or click , the following dialog box appears.

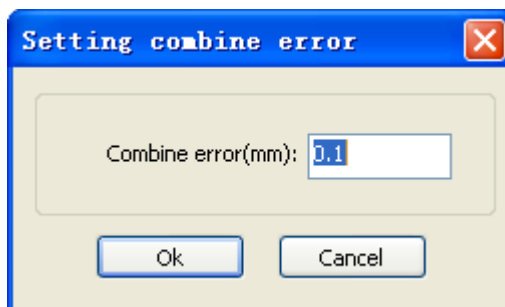

The software automatically merge curves in the selected curves, when these curves merge tolerance is less than the setting of combine error.

III. 2.13.8 Bitmap Handle

Click , and select a bitmap, then click menu **【Handle】** -> **【Bitmap handle】**, or click System Bar .

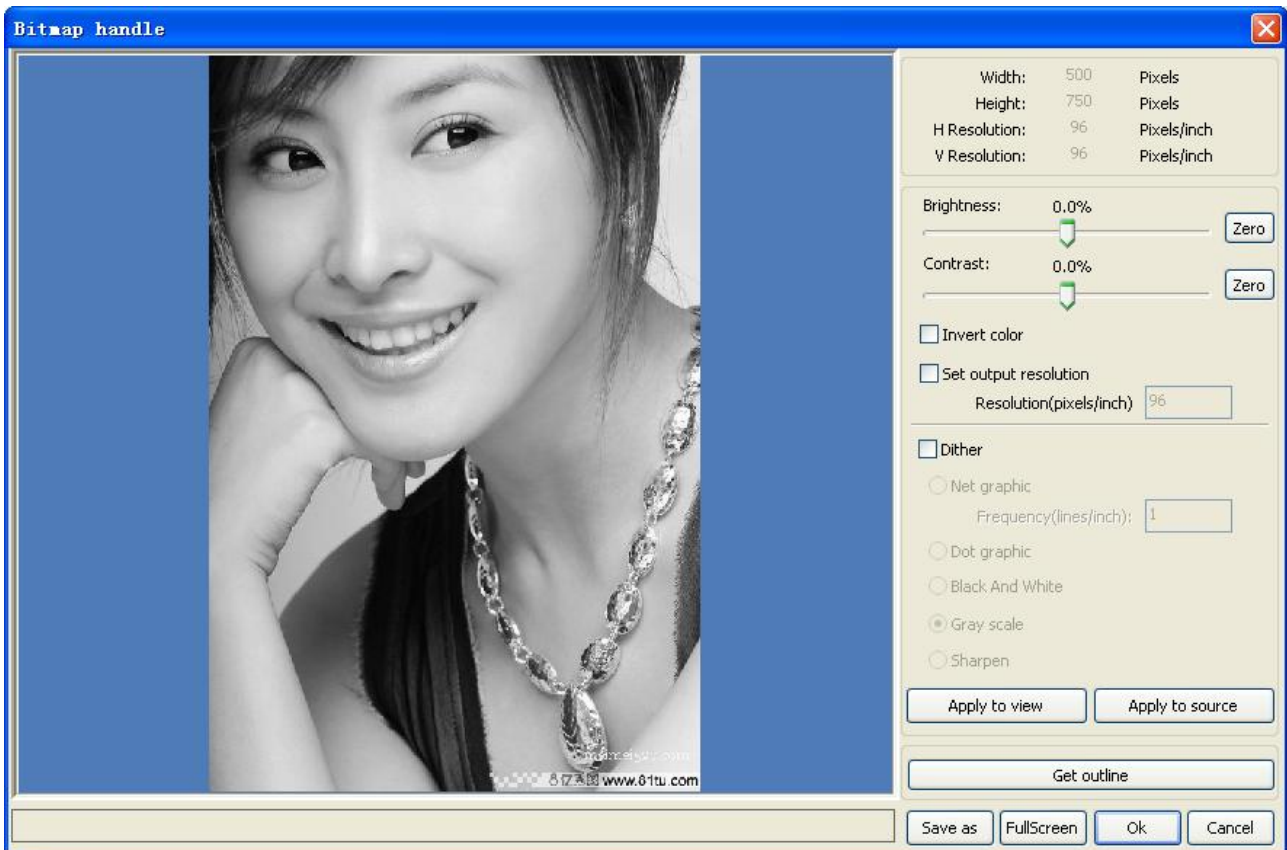

In the top right of the dialog box displays the information of the current image.

Be noted that, the horizontal resolution and vertical resolution is changing with drag scaling.

【Apply to view】: Current settings is only used for preview, without affecting to the original bitmap, press button **【Cancel】**, bitmap will returned to the state of original image. Therefore, only use for adjust effect. However, this approach requires more time and memory Space.

【Apply to source】: Current sttings is use for orignal bitmap directly, so even finally click button **【Cancel】**, image will also unable to return to the original image. Therefore, it mainly used in multi-step operation, and the current operation of this step is necessary to do, such as general pictures must be transformed into grayscale. This can save the computing time of the follow-up operation.

【Save as】: Retain the results of the previous operation, In addition to using **【Apply to view】** can also be exported. On this basic, to facilitate subsequent processing.

【Gray scale】 Generally, other image processing is based on the grayscale, so before handling, you can do a grayscale processing, then click button **【Apply to source】**. For the grayscale than the color image occupied smaller memory, for large image step by step handle, to a certain extent to avoid the lack of memory.

For color image, adjust contrast and brightness, have some auxiliary effect to following dither processing.

Adjust contrast:



Before processing



After processing

Invert:



Before processing



After processing

Sharp:



Before processing



After processing

There are three method for dither processing: Net graphic、Dot graphic、Black and white

Net graphic

Net graphic need adjust net size, better suited to material which is not high resolution, or the laser is relatively slow to respond.

To get the appropriate net size, you can adjust resolution and net frequency of the image. The higher resolution, the more delicate.

The higher net frequency, the smaller net size. The lower net frequency, the bigger net size. Generally, resolution of image is 500 - 1000, and net frequency is 30-40lines.



Dot graphic

Dot graphic performance of good grayscale, better suited to material which is high resolution, and the laser responds fast.




Black and white


In most cases, the effects of color image into black and white image is poor, however, for some clear outline image, is very easy to use.



Get outline:

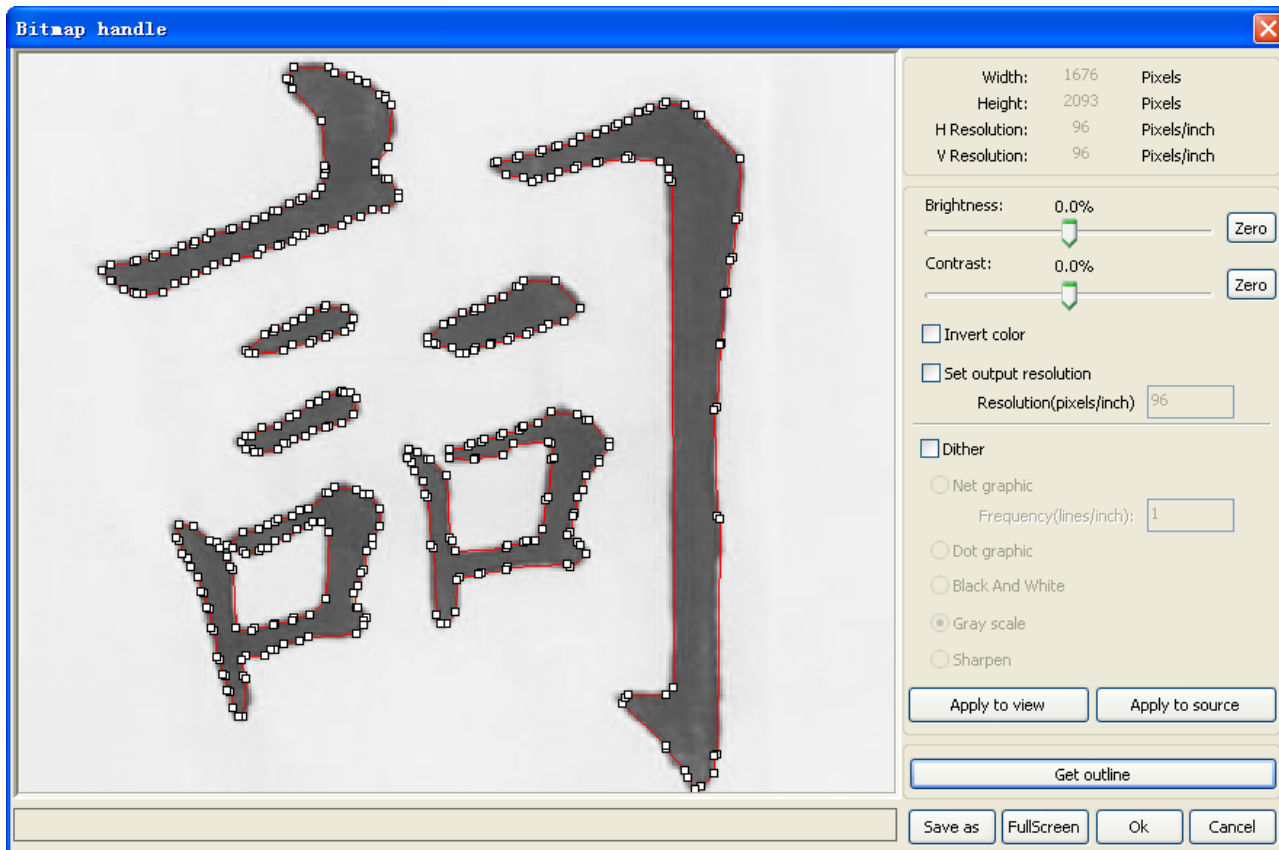


Click “Get outline” button to extract the contour graph. As following picture

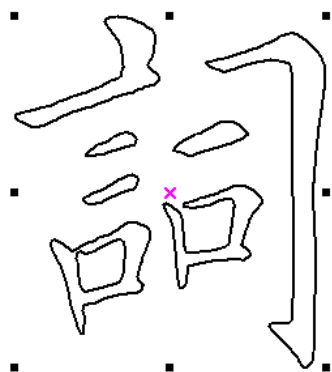

III. 2.13.9 Processing preview

Click menu **【Edit】** -> **【Preview】** , or click System Bar .

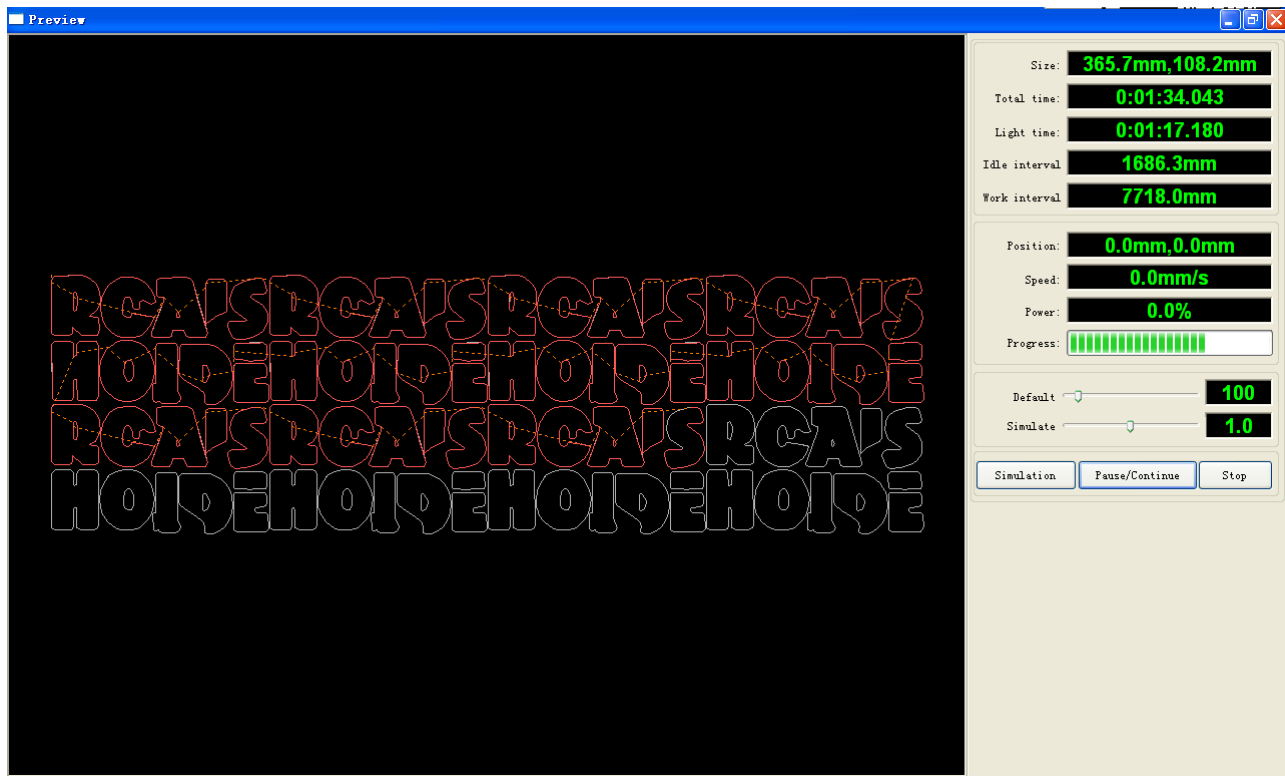


Software supports the preview of the documents to be processed, and you can get some basic information through the preview. For example, the path of the actual output of the processing, general processing time, processing the distance. The machining process can be simulated.

In addition to the current edited file preview, you can also preview the files have been saved as rd.


Preview rd file:

Double-click in the graphics display area. Choose the graphic you want to preview in the pop-up dialog box. And then open

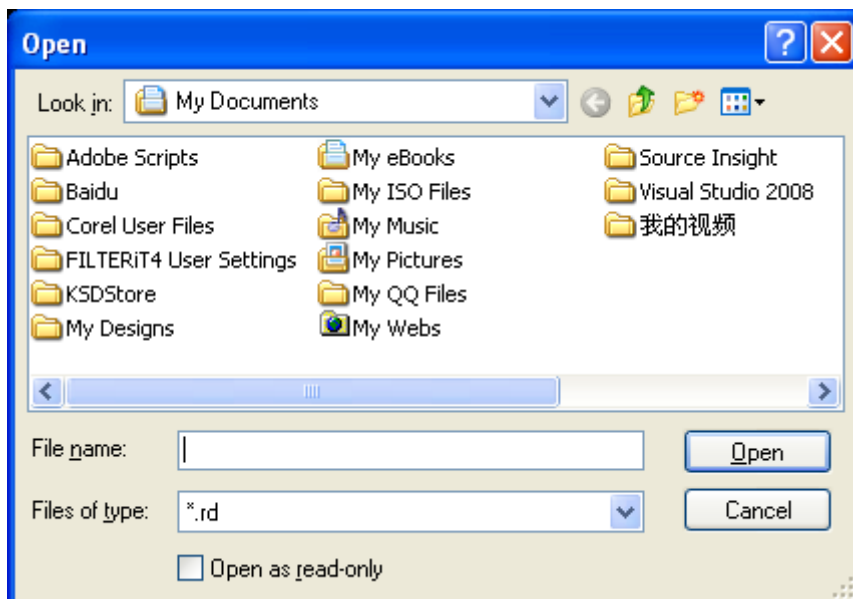


Software also supports to set the parameters of preview


Right-click Anywhere in the graphics display area, the configuration menu will appears. Select “Config”, pop-up following dialog box

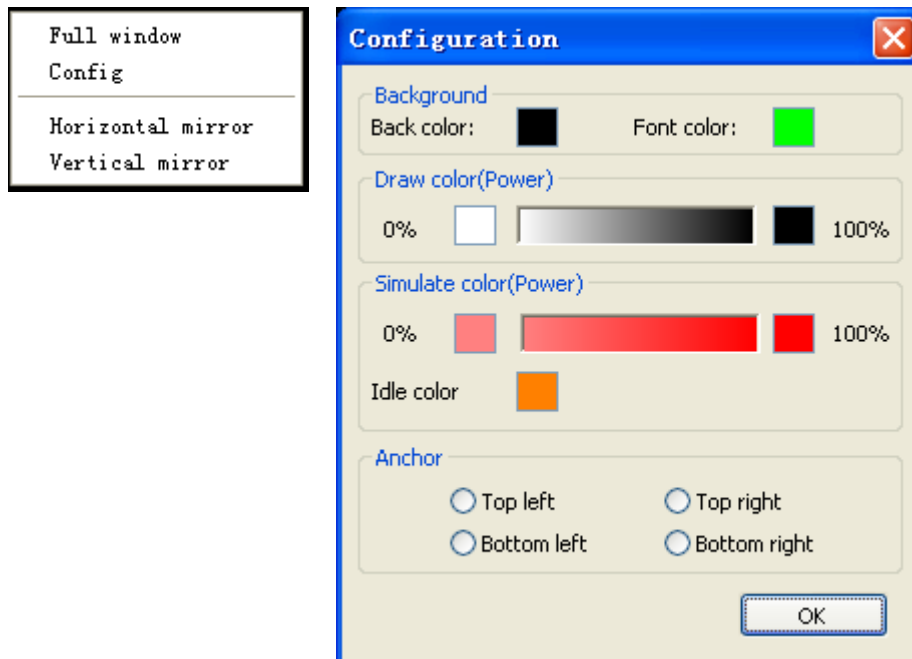

You can preview the color of graphics to match the actual output of energy. Users can easily view whether the layer energy is true.


III. 2.13.10 Data check


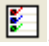
Selected to check after the graphics, click on the menu commands **【Handle】 / 【data check】**, or click system toolbar .

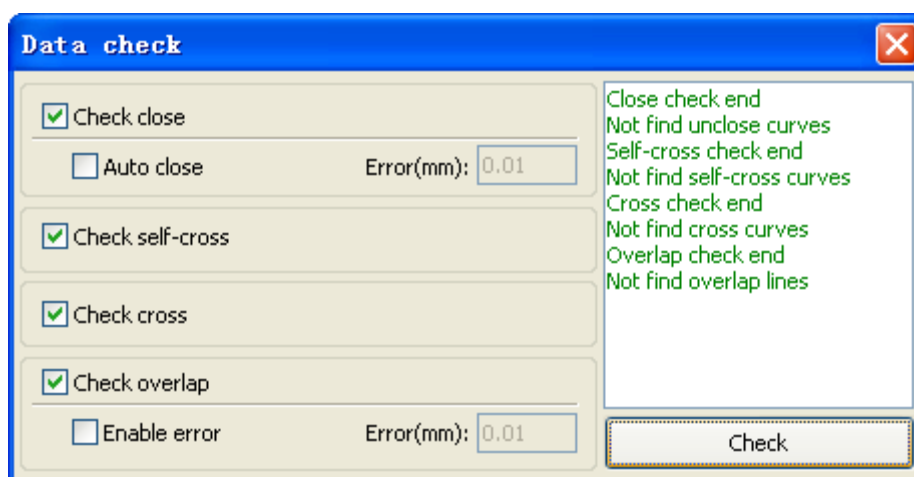

Data check, integration of the closed inspection, the inspection, the inspection, the intersection of the fellowship data overlap a check. The user can select a check, inspection to the problem after data, will be in the dialog box right tip have been found and, at the same time, the problem in selected state graphics. Check-> ruled out repeatedly error-> inspection process until all the data are conform to the requirements of the processing.

III. 2.13.11 Generation parallel lines

Selected to create parallel lines after the data, click on the menu commands the **【Handle】** / **【Offset poly】** , or click system toolbar .

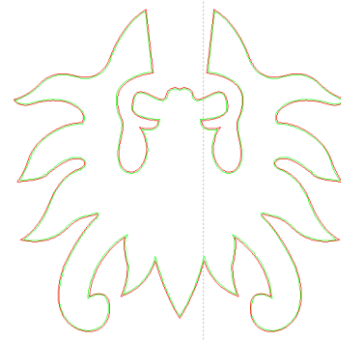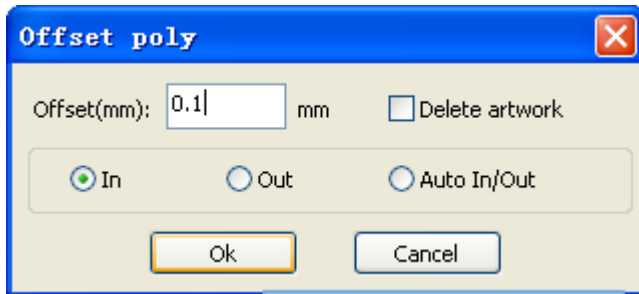


Red line in the figure for the original graphics, green line is inside shrink graphics.

III. 2.13.12 LGP design


Click the menu commands the **【edit】** / **【LGP design】** , or click drawing toolbar, already can start reflex block design tools, the tools are specific to block the sun processing, is an independent functions, such as the user is not involved in the sun block can be ignored this section processing content.

Play channel tabula rasa design tools, we first need to design a reflex guide the outline. Play channel tabula rasa design tools, we first need to design a reflex guide the outlin


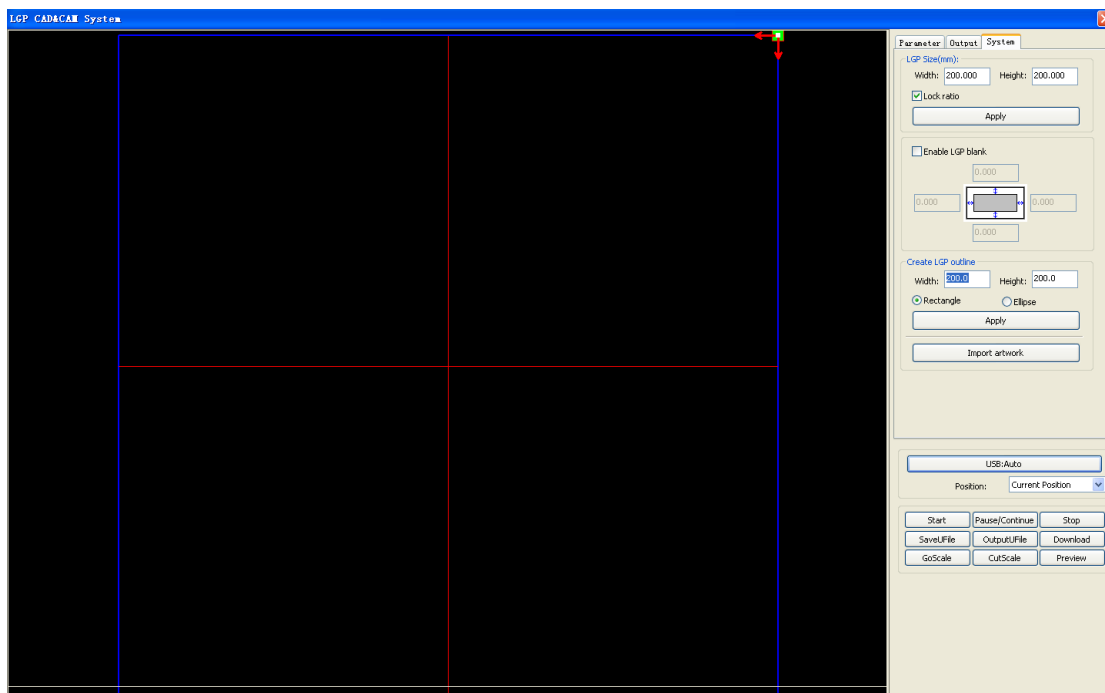


Play channel tabula rasa design tools, we first need to design a reflex guide the outline. In the tool, the default created a 200 X200 rectangular guide tabula rasa outline. The user can in the tools of "system" page manually create a standard to the shape of the guide tabula rasa outline.

Create standard setting the outline can use rectangular or oval.

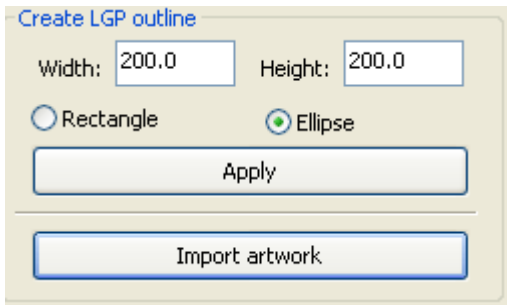

The user can also import a has good graphic design, as the outline of the sun. Click on the "introduction to guide tabula rasa contour" button, can choose to have the outline of the document as the sun. Need to point out that outline file must be closed graphics, otherwise, the system will automatically deleted.

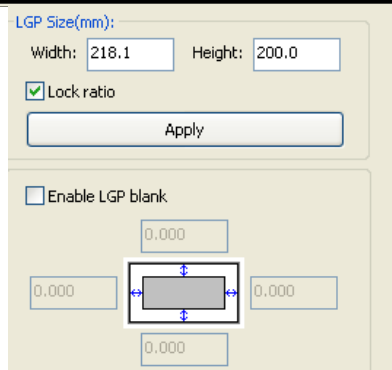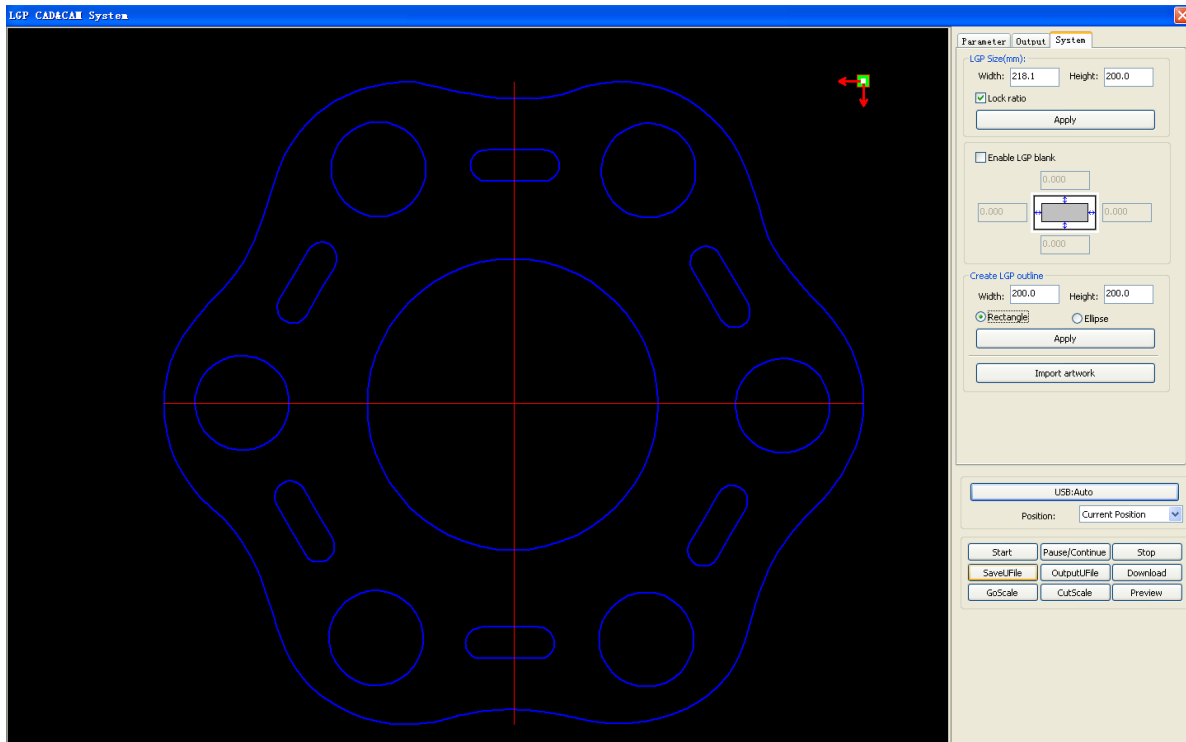

If the outline of import size requirements, users can also change size outline, and can set up if stay white edge.

Outline graphics ready, they can start on the tabula rasa increase network.

LGP Point(mm)

LGP type:

Width: Height:

UpGrad: UpGrad:

DownGrad: DownGrad:

LeftGrad: LeftGrad:

RightGrad: RightGrad:

Space(mm)

Up: Grad:

Down: Grad:

Left: Grad:

Right: Grad:

Base line

X: Y:

Enable row and colown

EnRow EnColumn

Light source

Left Right

Top Bottom

Network is divided into four ways: straight line, elliptical, rectangle and the grid.

Network is divided into four ways: straight line, elliptical, rectangle and the grid.

Baseline related with light source, the user can adjust the baseline position according to time light source. In the figure above red graticule marker is the baseline, users can move the mouse to baseline, press the mouse, and then drag the baseline to want to position.


The entire guide baseline reflex is divided into four regions, level above baseline definition for uplink and downlink below defined as; Vertical baseline definition for the left column on the left, the right to define right column.

Set respectively size and spacing network respectively in up, down, left column, the right column initial value and the gradient of the change, can form users want to conducting tabula rasa effect.


For grid way, must set exercise can/column that can, can appear the grid.

For the convenience of application, the system to provide the light setup, if the light source is a standard, can choose the light source, then set the network parameters can be, do not need to adjust the baseline. At this time, baseline shows hides also.


Grid way

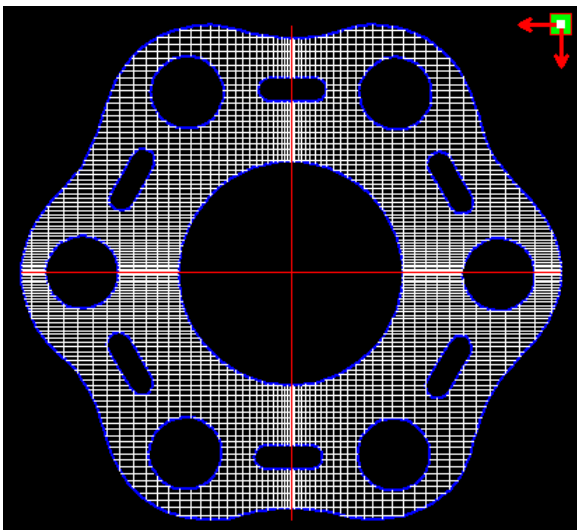


Elliptic way

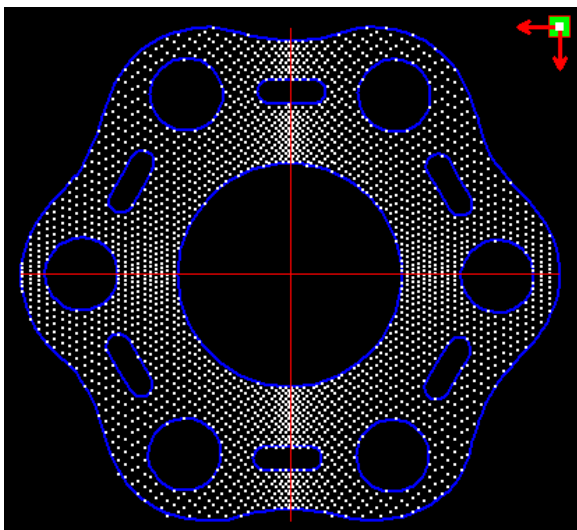


Left light source

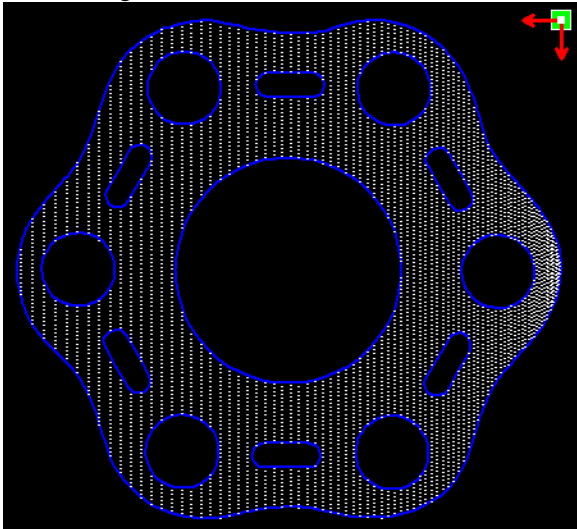


Right light source

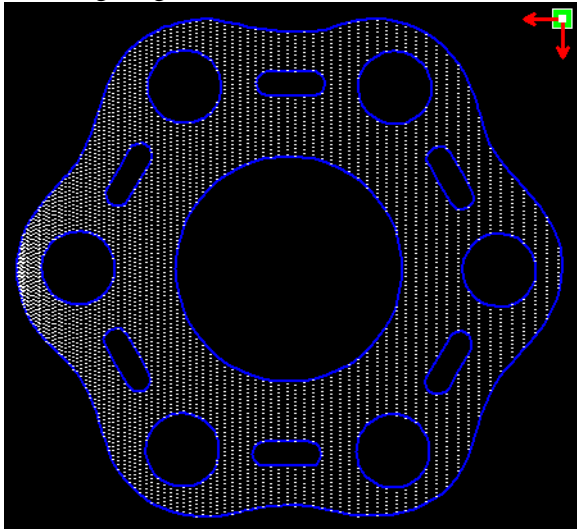

Top Light source

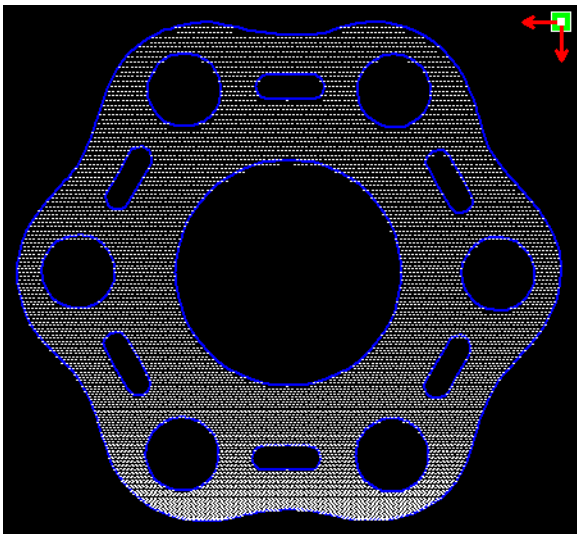

Bottom light source

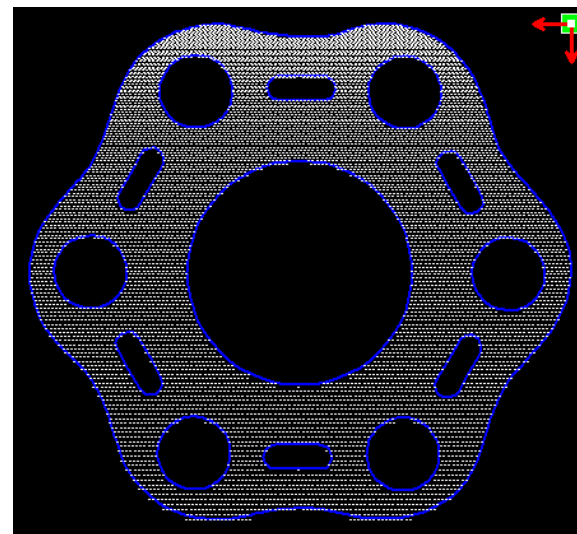

LGP cut/Engrave

Speed(mm/s): Default

MinPower(%): Default

MaxPower(%):

Is blower on

Scan precision: dpi

OnDelay: ms

OffDelay: ms

Outline cut

Enable outline cutting

Speed(mm/s): Default

MinPower(%): Default

MaxPower(%):

Is blower on

OnDelay: ms

OffDelay: ms

Array parameters

X Num: X Space:

Y Num: Y Space:

USB:Auto

Position: ▼

Start Pause/Continue Stop

SaveUFile OutputUFile Download

GoScale CutScale Preview

Line, elliptical, rectangular way is the network scanning mode of output.

Scanning mode, the minimum energy, maximum energy general is same, and dedication of the delay is 0. By adjusting the scanning system precision, to adjust the scanning of the density, the more accurately the scanning scan line secret, scanning the lower accuracy the scan lines sparse.


The grid processing methods is cutting, and scanning not precision, and can be adjusted according to the actual effect, the maximum and minimum energy energy light switch delay, generally speaking, the least energy slightly lower than the maximum energy.

If need to cut the reflex the outline, make can contour cutting. About cutting parameters and common cutting Settings identical, in hereby here.


If need to press array in the way processing more panels, can be set to array parameters; Array direction along the machine is always the origin in the opposite direction.

III. Chpater 3 System Settings

Before output graphics, required to determine whether the system settings are correct. Click menu **【Config】** -> **【System Setting】**

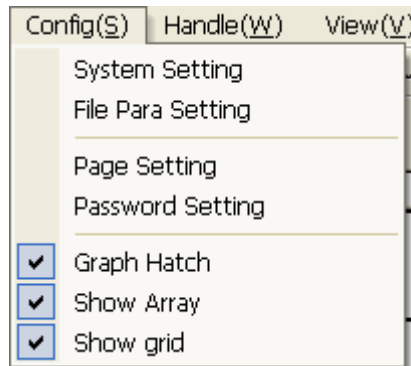

III. 3.1 General settings

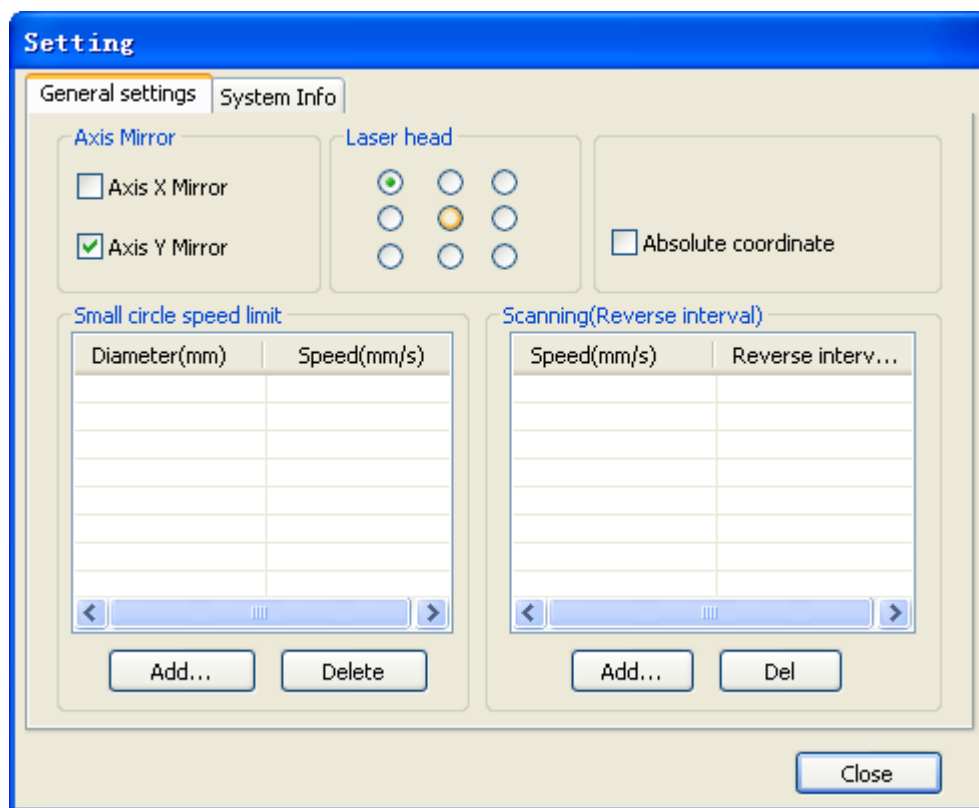

Axis Mirror


Generally, Axis direction of mirror is based on the actual location of the limit or home of machine.

The default coordinate system is Descartes coordinate system, and zero is at the bottom left.

If the zero point of the machine is top left, then X-Axis does not need to mirror, but Y-Axis needs to mirror.


If the zero point of the machine is top right, then both X-Axis and Y-Axis are all needed to mirror.


In addition, this function can also use to other application for mirror.

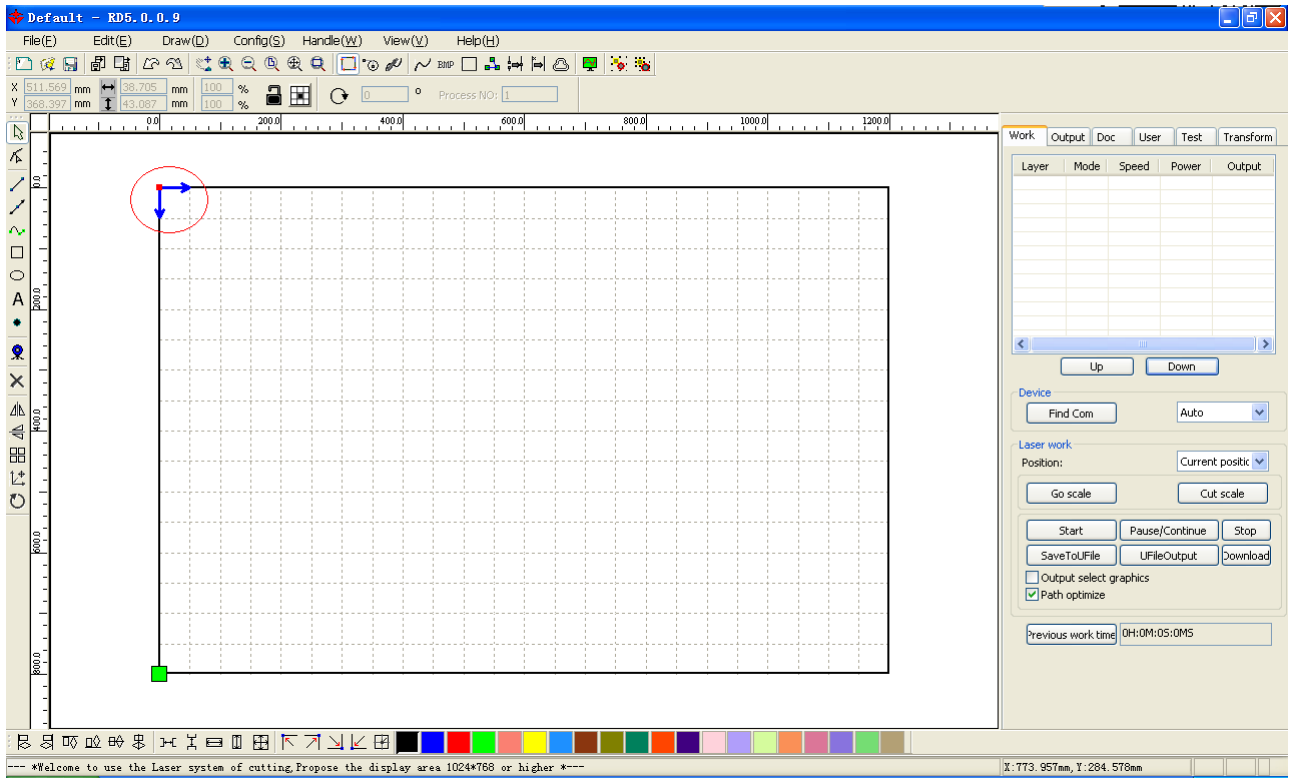


Laser head

Position of Laser head means the location laser head relative to the graphic.

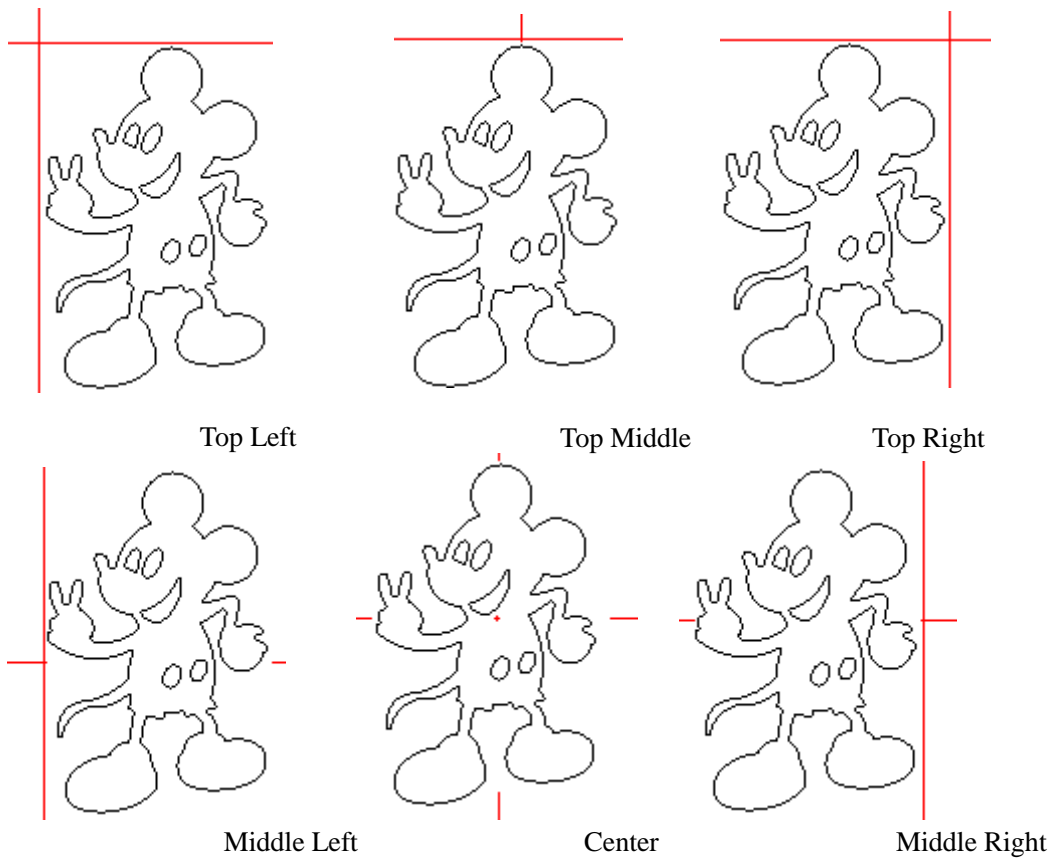

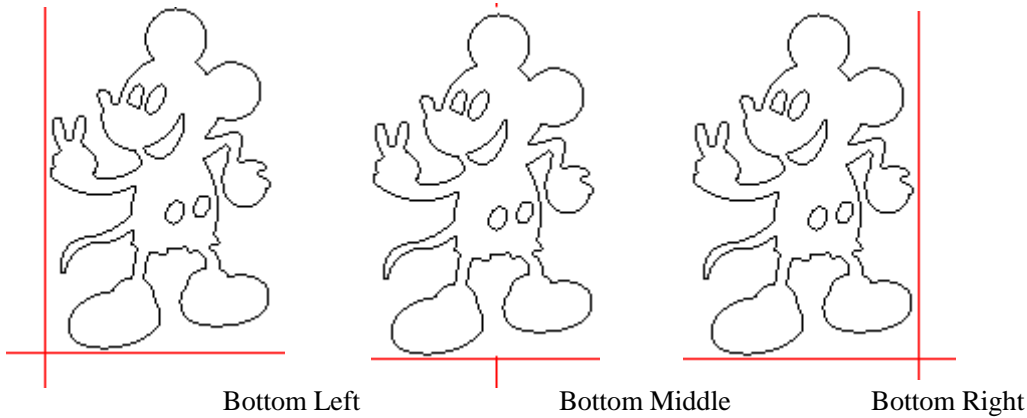

when you intuitive view, just look at the zone where the green point appears.

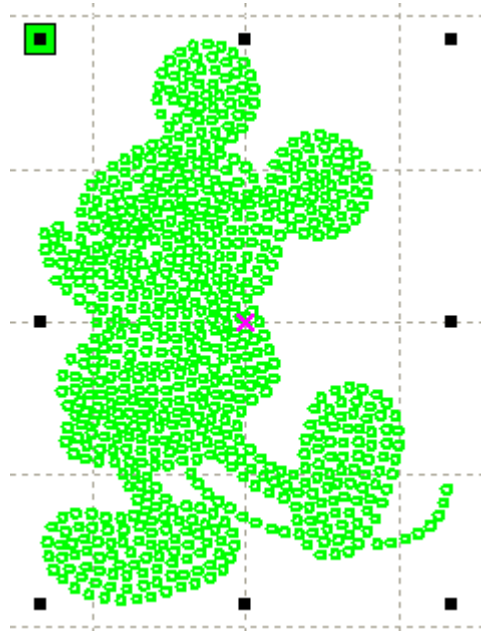

Absolute Coordinate

You can directly check this option when you want the graphics location in the graphics display area correspond to the actual work location of processing. Then the graph position will no longer relate with the actual output position of the laser head and orientation point, but always regard mechanical origin as the anchor point.

Small Circle Speed Limit

On processing work, the software automatically determine whether the current round need to limit speed, then according to the diameter size of the circle to determine the speed. If parameter configuration appropriate, will greatly enhance the quality of small round. Click button **【Add】**, **【Delete】**, **【Modify】** to configuration.

Small circle is less than speed of the rules limiting the list of small round circle of minimum radius, minimum radius circle at the speed of the output of the corresponding.

If the speed greater than maximum speed limit list the speed round, the speed only associated with the speed of the layer.

If the speed is in the list, set the output speed by list.


If the request received by limiting layer parameters faster than the speed set in the layer, press the speed of the output layer.

Scan backlash

Laser scanning graphic way, because the relationship between the machine belt tension may cause the edge of the scanned graphics uneven. Therefore, increasing backlash to fix. It has the specific backlash for the certain speed. General, the greater the speed, the greater the backlash.

① Add backlash

Click the Add button, the screen will pop up as shown in Figure

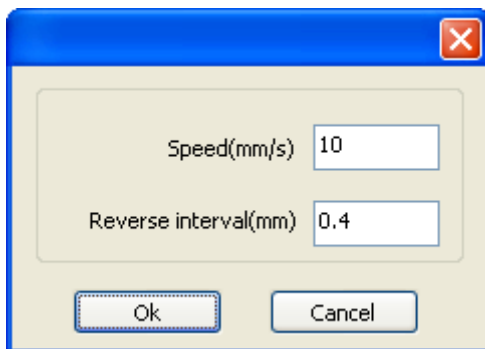


In the interface can modify the current speed of the corresponding backlash.


③ Remove backlash

Right-click scanning (reverse gap) block in the backlash to delete the item, then click the **【Delete】** button.

III. 3.2 System info

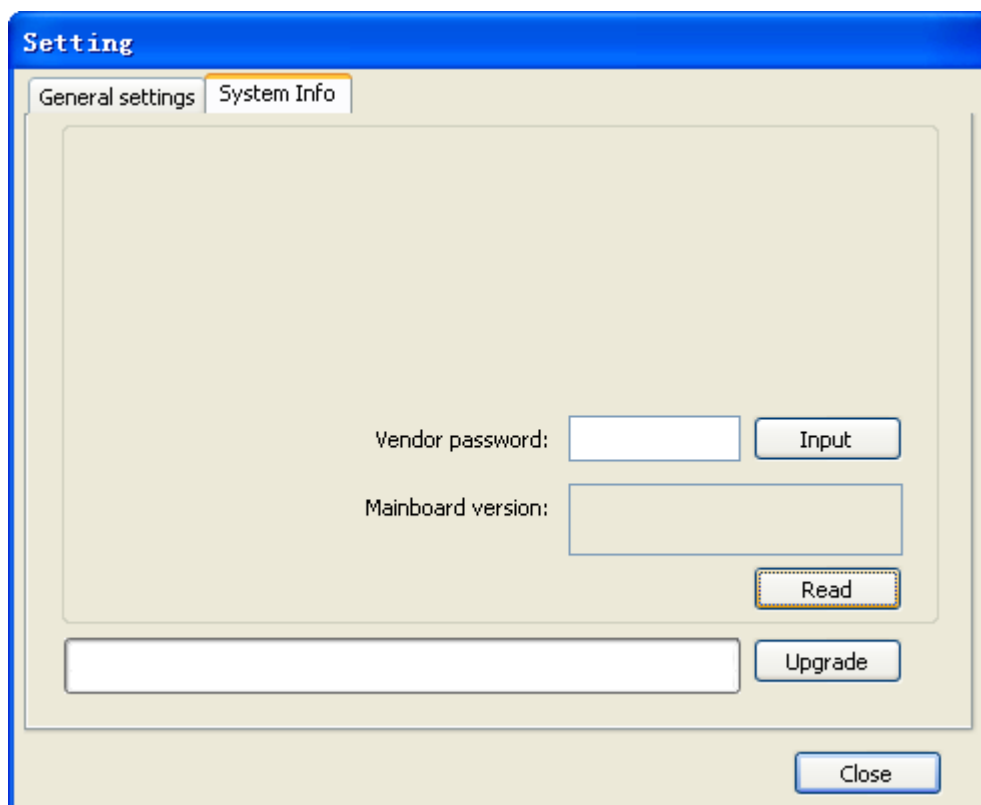

Information on the operation of the motherboard manufacturers need to enter password to view parameters.

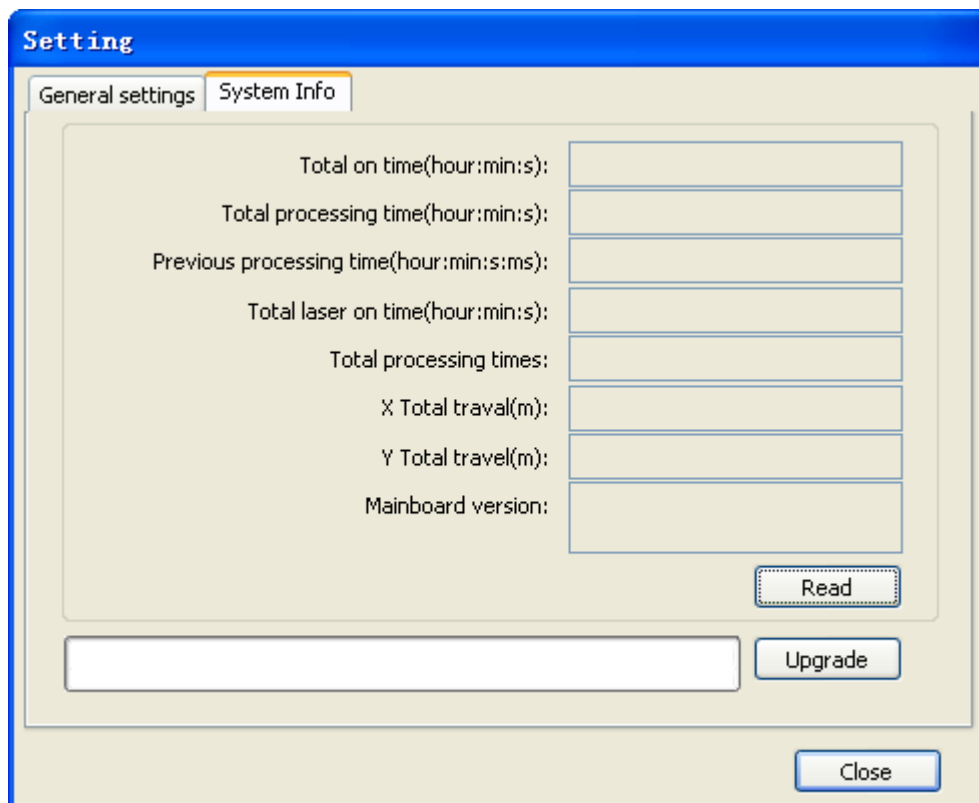

Total on time: The total time of motherboard working

Total processing time: The total time of processing ,including the time of jump moving.

Previous processing time: The time of the last processing

Total laser on time: The time of the laser processing

Total processing times: The number of completed processing, not include the processing forcing to end.

X total travel: The total travel of motor X.


Y total travel: The total travel of motor Y.

Motherboard version: The version of the current controller.

The function of upgrades:

If the board has additional features, the manufacturers will provide the update file (*.bin format), the user can load the upgrade file to upgrade the motherboard. After the upgrade, you need to click on the control panel "Reset" button reset the motherboard before normal use.

III. 3.3 User parameters

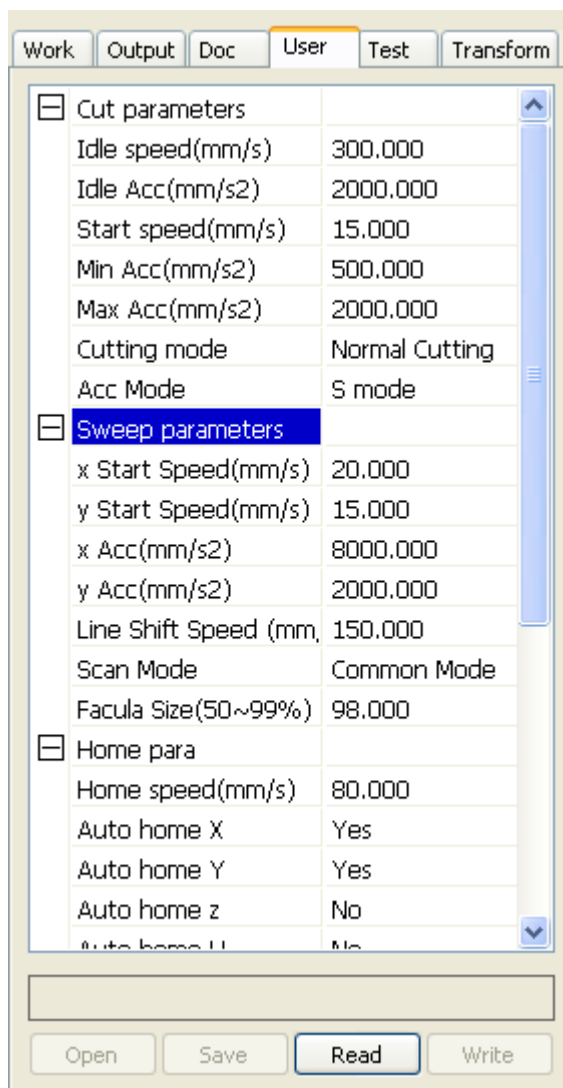

Reading the board parameters must before operating the user parameters.

III. 3.3.1 Cut parameters

Cut parameters	
Idle speed(mm/s)	300.000
Idle Acc(mm/s ²)	2000.000
Start speed(mm/s)	15.000
Min Acc(mm/s ²)	500.000
Max Acc(mm/s ²)	2000.000
Cutting mode	Normal Cutting
Acc Mode	S mode

Idle speed: this parameter decides the max. speed of all lines not emitting beams during the operation of the machine. This parameter should not be lower than the lower of the jump-off speed of the X-axis and that of the Y-axis and not exceed the higher of the max. speed of the X-axis and that of the Y-axis, if the setting is illegal, the controller will automatically set this parameter within the range above; a comparatively high idling speed can shorten the operation time of the entire figure while excessively high idling speed may cause dithering of the tracks, therefore, you should take all relevant factors into consideration when setting.

Idle Acc: Corresponds to the acceleration of the speed of air travel time, air and air-way-way speed of acceleration to match, if you set too slow the actual speed may not reach the air-way set value, if set too fast, they may not withstand the mechanical structure, resulting jitter . Slightly higher than the general acceleration of air-way cut acceleration.

Cutting Acc: Corresponding to the acceleration of the speed of cutting (cutting speed is the speed of the layer parameters of the layers).

Turning speed: Turning the corresponding deceleration in the cutting process, the minimum speed of the drop, when processing a lot of teeth when the graphics may be appropriate to reduce the turning speed.

Turning Acc: Should match with the turning velocity.

Cutting mode: Split precision cutting, fast cutting, ultra-fast cutting, the user can choose according to the actual applications. Such as the emphasis on accuracy, select the precision cutting, such as emphasizing speed, select the fast cutting.

Acce. mode: this parameter decides the acceleration and deceleration mode (S mode or T mode) of the motor during operation, the motor accelerates and decelerates slowly and smoothly in the S mode and fast and relatively unsmooth in the T mode; the default mode is the S mode.

III. 3.3.2 Sweep parameters

<input type="checkbox"/> Sweep parameters	
x Start Speed(mm/s)	20.000
y Start Speed(mm/s)	15.000
x Acc(mm/s ²)	8000.000
y Acc(mm/s ²)	2000.000
Line Shift Speed (mm)	150.000
Scan Mode	Common Mode
Facula Size(50~99%)	98.000

x Start Speed, y Start Speed: Off scanning speed in the use of stepper motor drag, do not began to accelerate from 0, but can start work directly from a speed to shorten the overall processing time, but the speed is not too high, and because the X, Y axial load is different from the rate, general the initial speed of X-axis slightly higher than the initial speed of Y-axis

x Acc, y Acc: With the scanning speed (the speed of layers in the layer parameters) to match, if set too small, the scan speed to a longer distance, the scanning efficiency. The machine can be set according to the actual structure, load conditions vary. Since X, Y axis load, generally much higher than the X-axis Y-axis accelerometer.

Line shift speed of scanning: this parameter is specially used to control the max. speed of the scanning to shift vertically from one line to the next line below it. If during the scanning, the line space is too large or the block space is too large when scanning block figures while precise positioning for each line or block is required, you can set the line shirt speed of scanning to a comparatively low value. This parameter cannot be less than the jump-off speed of the corresponding axis during the line shift and cannot be higher than the max. speed of the corresponding axis during the line shift, if the setting is illegal, the controller will automatically set this parameter within the range above.

Scan mode: There are two modes for your selection: the general mode and the special mode, in the general mode, there's no any treatment during the scan, in the special mode, light spots will be treated. If the special mode is activated, the power of the laser should be increased

and correspondingly, the light spot percentage will be lower and the laser power attenuation will be higher, to achieve the same depth of scanning, the laser power should be higher. The purpose to select the special mode is to make the laser to emit beams at high power and in short period, during deep scanning, the effect of flat

bottom can be achieved, however, if the light spots are improperly adjusted, this effect may not be achieved and the working mode of high power and short period may influence the service life of the laser. The default mode is the general mode.

Facula Size: When scanning the general pattern of selection, the argument is invalid, when you select a special mode, the onset of the parameters. Control the parameters of control in 50% to 99%, respectively.

III. 3.3.3 Home parameters

<input type="checkbox"/> Home para	
Home speed(mm/s)	80.000
Auto home X	Yes
Auto home Y	Yes
Auto home z	No
Auto home U	No

Home speed: This parameter determines the machine is turned back to the origin when the speed of a larger format if the machine can be set to reset the speed is too large, but not too much.

X, Y, Z, U Auto home: The axis can be set whether should reset at boot time.

III. 3.3.4 Go Scale parameters

<input type="checkbox"/> Go Scale para	
Go scale mode	Close laser
Go scale blank(mm)	0.000

Go scale mode: Points of light to go off the border, the opening cut borders, corners three modes.

Go scale blank: Walking frame can be based on the actual image size up and down again about the direction of some of the white left side of the border in order to ensure complete contains the actual graphics.

This setting is on the control panel to go with the border-related functions, while walking on the border with the independent software.

III. 3.3.5 Other parameters

<input type="checkbox"/> Other parameters	
Array processing	Bi-dir Array
Return position	Absolute Origin
Delay before feed(s)	0.000
Dealy after feed(ms)	0.000
Focus depth(mm)	0.000
Backlash X(mm)	0.000
Backlash Y(mm)	0.000

Array mode: you can choose the swing mode and the one-way mode. The **Swing mode:** cutting the array back and forth in order; the **One-way mode:** always cutting the array from one direction to another. If **One-way mode** is selected, all array units have the same movement modes and the same liquidity of movement, however, this mode will take more time than the swing mode. The default mode is the **Swing mode**.

Return position: You can select the locating point and the machine origin. This parameter decides the position, the locating point or the machine origin, where the laser head stops upon completion of each operation.

Delay before feed: Using the feeding device, the delay before a single feed, users can arrange the time and the like, such as picking process.

Delay after feed: Refers to the material sent to the feed device in place, the need for stability after a period of time for processing.

Focus depth: Auto focus operation to find the corresponding panel.

Backlash X, Y: Used to compensate the backlash caused by the machine drive problems.

Delete All

Automatically remove all file in the controller, and update the document list.

Cal time


Motherboard supports processing files towards hours worked. Select the file to calculate the work hours worked and click the button. Calculation to be completed, the control panel will be prompted to complete the calculation. And then point to read button shown in the list, calculated from the working hours.

In addition, when the document processing operation performed, the hours information will also be covered by the actual processing work.

Uploading


On the main board of the selected from read offline files, and saved to the computer.

III. Chapter 4 Processing Output

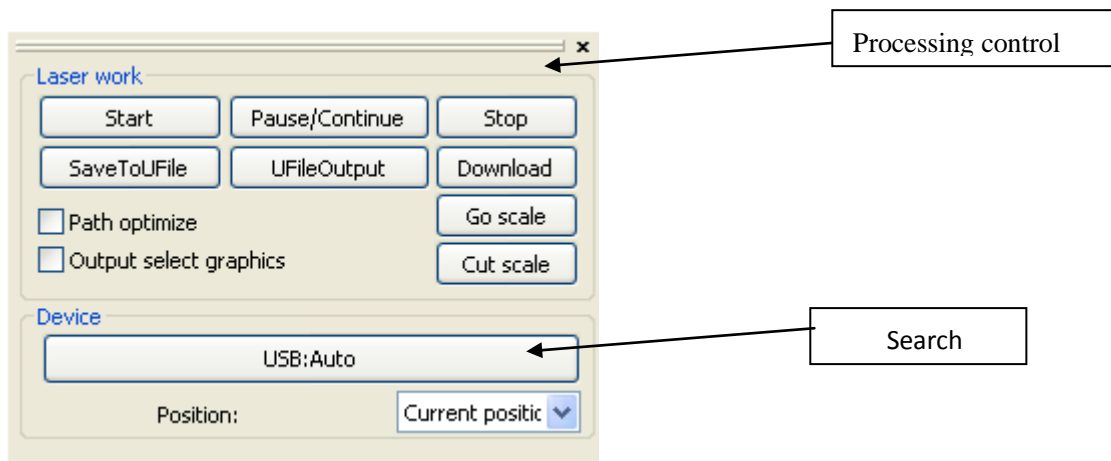

III. 4.1 Search Device

Link device in two different ways: USB and network. But through some equipment port button on the popup dialog box, set connection mode and choose connection port.

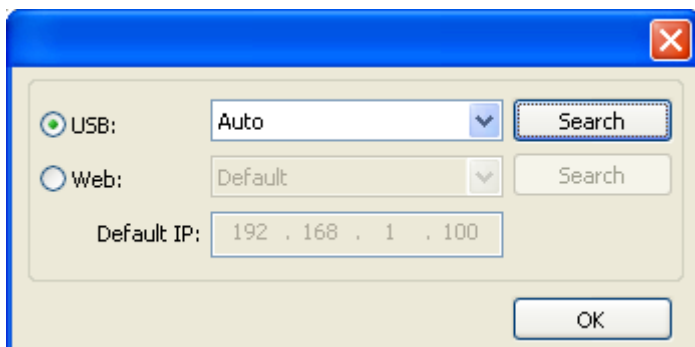

If the computer only connected one device, you can set to Auto. The software will automatically search the device.

If the computer connected many devices, then first of all you need to click **【Find com】**.

After search, the connected devices will all add to the drop-down list.

What you need to do is select the specified device.

Network: if the computer is connected only a laser equipment, which can be directly in the default IP address to enter in connected device IP.

When the computer connection has many sets of laser equipment, and USB operation is similar.

Search at present already connected device, and choose from the drop-down list corresponding IP address machine.

III. 4.2 Layer processing

First, in the menu **【Handle】** -> **【Path optimize】** check “according to layer order”, then click “OK” to exit.

Layer reorder: Click button Up, Down can change the order of layers, or direct the mouse to drag the layer to the specified location.

Here, you must check the “Path optimize” option.

III. 4.3 Position

Setting the laser head back location after processing completed.(Current position、Original anchor、Machine Zero.


Current Position : Laser head back to the position before processing.

Original anchor : Laser head back to the last anchor ,the anchor may set at panel.

Machine zero : Laser head back to the zero of the machine.

III. 4.4 Go Scale、Cut Scale

For Example Go Scale, As the following figure shown, the actual graphic is round, and the red rectangle outside the circle is the smallest rectangle, click button Go Scale, laser head will run once along the rectangular path.

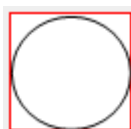

For Example Cut Scale, As the following figure shown, the actual graphic is round, and the red rectangle outside the circle is the smallest rectangle, click button Cut Scale, laser head will be cut along the rectangle.

III. 4.5 Start、Pause、Stop、SaveToFile、UFileOutput、Download

Start: Output the current graphic to the machine for processing.

Pause\Continue: Click Pause, will stop the processing work, click the button again to Continue

Stop: Stop the current processing work

SaveToUFile:

Save current file as RD format, using for offline processing (Can be copied to other memory board for full offline operation) .

UFileOutput:

Output the offline file (RD format)

After save offline file, click UfileOutput to select rd file to processing.

Download:

Download the file to the memory of the controller , then user can start the file through the machine panel.


III. 4.6 Output select graphics

After check Output select graphics, then only output the selected part, rather than not output the part not selected.

III. 4.7 Path optimize

After check Path Optimize, then automatically perform the path optimize before the output.

If has done the Path optimize or not need optimize, then not check Path Optimize can reduce waiting time.

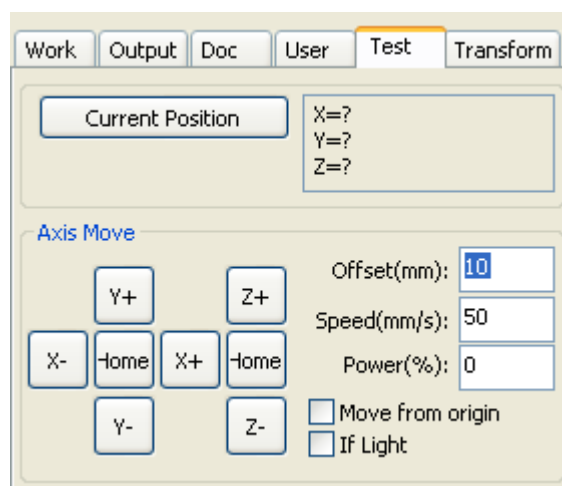III. 4.8 Test

Axis control, can only control one axis each time. You can set the information for axis move, including move length、 speed、 laser on-off and laser power.

If you check “Move from origin”, then the offset you set means the offset to machine zero.

If you not check move from origin, then the offset means the offset to the current position.

The X-axis, for example, assuming the current position is 100mm, such as the step distance is set to 10mm, then the exercise once, the new location will be 110mm, such as the check

moves from the origin, movement time, the new location will be 10mm, and repeated Movement, location will no longer change.

Note: According to the provisions of the controller, the absolute position is no negative in the whole breadth. If you check the Move From Origin, and set the offset value negative, then the machine will hit limiter.

III. 4.9 Output Setting

III. 4.9.1 Rotating sculpture

【Enable rotate engrave】: After enable engraving, the actual precision of Y-axis will be based on diameter and step per rotate to auto match the setting of pulse precision of Y-axis. In addition, the work area in the main interface will also change.

【Diameter】: The diameter size of the parts.

【Step per rotate】: The number of pulse corresponds to the workpiece rotate one week.

【 speed 】 : test the speed of work.

The function is to facilitate the users to replace parts, and different size of the workpiece when the workpiece is not very different before use. When the relatively large difference in size of the workpiece, it is recommended to use directly modify the motor step approach to implementation.

Rotary engraving is only when using the rotation axis to replace the Y-axis use.

III. 4.9.2 Feed Setting

To use the feed, must first enable the feed.

After set feeding parameters, the shaft will be feeding a feeding length, and repeat the process , until the times of processing reach to number of feeding.

If the machine is not equipped with feeding devices, in general, enable the feed ban.

III. 4.9.3 Optimization of Backlash Compensation

When the machine there is space (such as dislocation of the seal cutting graphics), can be checked.


III. 4.9.4 Optical 2 migration

In need laser collaborative work, complete the same graphics processing occasions, usually, to use the optical 1 to define the graphics location, then if the optical 2 can accurately with the optical 1, will need to specify the optical 2 relative to the optical 1 offset.

This generally used in two power different laser tubes of machine, because two of laser tube power different, cause different functions.

If some machines equipped with two different power of laser tube, a responsible for cutting, a responsible for sculpture.

III. 4.10 Layer Settings

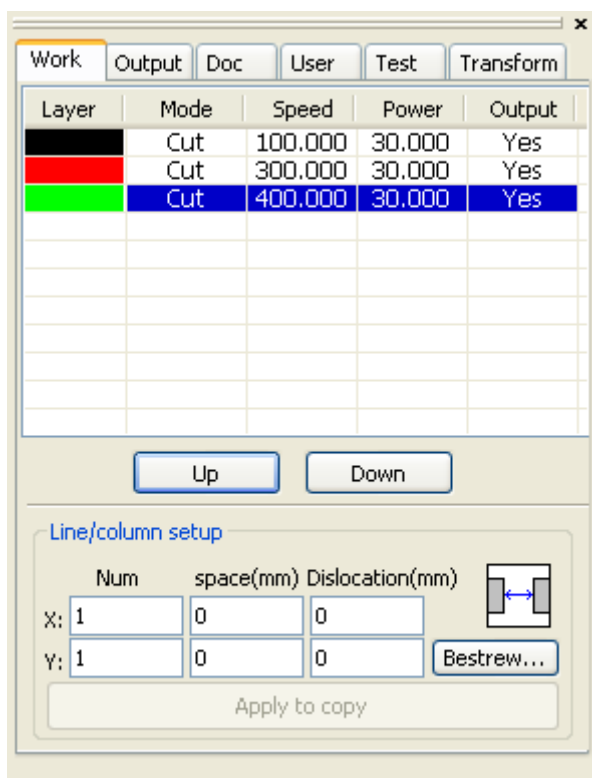

III. 4.10.1 Ranks se

For convenient to set in machining graphics processing on the array.

X numbers and Y numbers, which was the array of columns and rows.


X intervals and Y interval, respectively is array of the column spacing and line spacing.

Layer: Software use layer to distinguish processing graphics parameters of different layers.




.The X interval is said and Y representing between interval graphics margins.

If hope X interval and Y interval which between is representative of array center of the

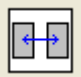graphics spacing can switch to .

Adjust the X, Y interval between enable graphic layout more closely, can click drawing area, make graphics in the selected state, and then through the keyboard of the up and down or so key to adjust, and rolling the mouse can be displayed scaling, make the spacing of the adjustment process more precise.


【Bestrewing breadth】:According to the size of the wide and the current user Settings ranks spacing, to determine how much can output the most listed (i.e. X number) how many lines (i.e., Y number). Click on the button

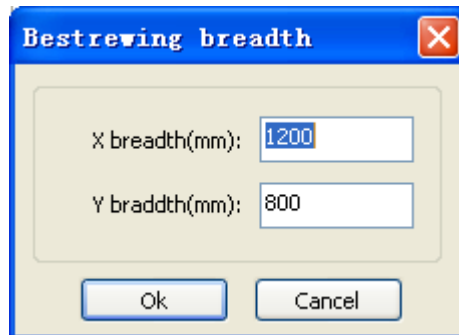

【Brestrewing breadth】, pop-up interface as shown in figure:

According to determine the button, the software can automatically calculate the entire width of the ranks of the arrangement number.

【 dislocation 】: for some graphics, in arrangement, the dislocation arrangement, can make the arrangement more compact.

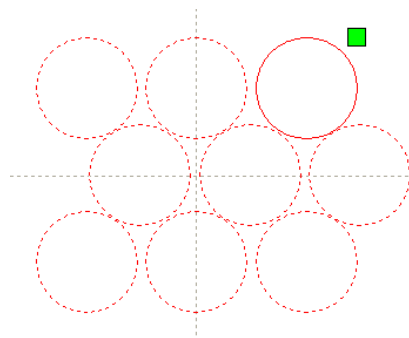


【The application to copy】 in good array, chosen to copy graphics, some application to copy, already can duplicate array graphics.

In the layer list to edit the double click inside layer, namely will pop up layer parameter dialog box.

The left article color, representatives of the current graphics layer, choose different color, can be in already switch between different layer, one-time modified multiple layers of parameters.

The layer parameters is divided into two parts: public layer parameters and turn a layer parameters. Public layer parameters is to point to no matter how the layer processing type, all effective layer parameters;

Proprietary layer parameters is to point to the layer of processing type change of the corresponding parameters will also be changing.

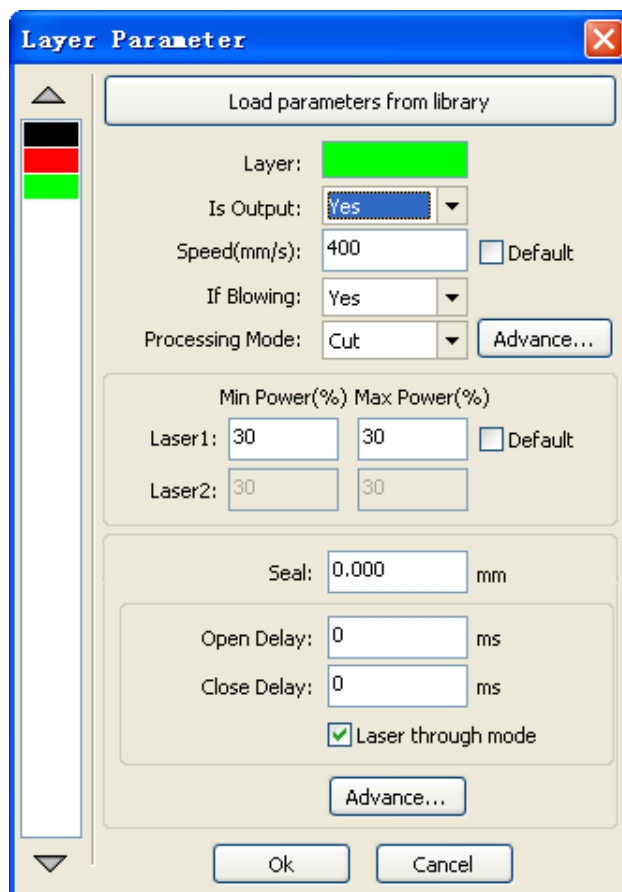

III. 4.10.2 Laser Scan Parameters Setting

Laser: Software to distinguish between different layers of the graphics processing technology parameters. For scanning processing methods, more are in the same layer bitmaps, and whole as a picture output, if hope each bitmap single output, it can be a graph respectively placed in different layer can.

Is Output: Have two options: yes and no. Choice is, the corresponding layer will output processing; Choose no, won't output processing.

Speed: The corresponding processing method of processing speed.

For cutting processing is concerned, the slower, processing the better, the more smooth track; The faster the processing results, the worse the trajectory smooth;

To scan for processing, the slower, under the same energy scanning depth, deep and scanning trace the thick, scanning the resolution also reduced.

The faster the same energy the shallow depth of the scanning, details distortion increase.

To fix for processing, the main change is empty the speed of the move.

If, check the "default", the actual speed by panel set up to speed.

If Blowing: if the machine external fan, and fan has enabled, then if choose "is", then this layer data processing, will open the fan, otherwise, will not open the fan. If you do not make can fan, no matter choose "yes" or "no", are meaningless.

Processing methods: says the method of processing corresponding layer;

If the currently selected is vector layer (i.e. color layer), it includes three choices: laser scanning, laser cutting, laser rbis;

If the currently selected is a tutu layer (namely BMP layer), the only include a choice: laser scanning.

Laser 1, laser 2: corresponding to the mainboard laser signals 1 and 2 of the way way laser output. If it is only head machine, the second road laser meaningless.

The minimum power, the maximum power: the power of the values of the range of 0 to 100, said that in the process of the strength of the laser processing; Big value, the laser is strong, is small, the laser weak. Minimum power loss to the most power is less than or equal to.

For different processing type has a different meaning.

For cutting processing, the actual power is cutting speed and phase follow, speed, low energy is also low, high speed is high also, so that we can guarantee the whole process of cutting energy evenly. So the minimum power the speed of the corresponding minimum energy, the minimum speed general is 0, but if set the speed is the minimum speed for takeoff take-off speed; The maximum power correspond to the layer speed.

Set minimum power, and the most high power flow:


1> The minimum power and the maximum power set to the same value, synchronous adjustment. Until all the cutting curve are already appear.

2> The maximum power unchanged, and gradually reduce the minimum power until the energy of the heavy cutting curve at the lowest level, and all of the cohesion parts can be processed to come out.

3> If not yet to best effect, can be the most appropriate fine-tuning high power, and repeat step 2.

If is cut through, the minimum power loss and the maximum power no significant difference, can be set to give the same.

To scan processing, ordinary scanning, the minimum power and the maximum power must be consistent. Slope sculpture, minimum power loss is the power of the corresponding factors, the most power is the power of the bottom of the corresponding.

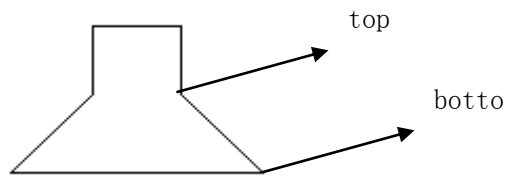


Minimum power loss is the top for the small slant wide, detail place distinguish clearly. Minimum power loss is too large slope not obvious.

To fix processing, the minimum power and the maximum power can be set to agree.

If checked "default", the actual power panel set by the power to determine.

Click the button "advanced", but also can be set to other layer parameters.

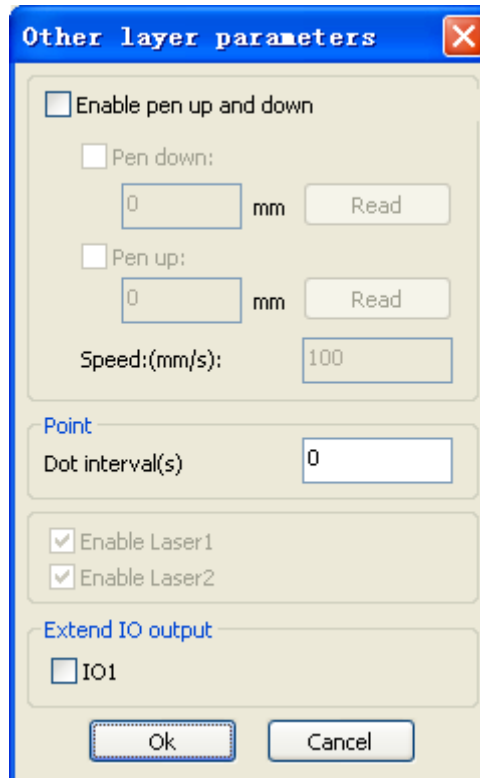

【Pen up and down】 If machines have installed the lift platform, and need to be in a different platform height on the processing, can make can write up function.

Here the corresponding is platform write position in which high on the processing, carried the corresponding is empty pen position before go, platform should be moved to which level in the optical translation will not again to interfere with the process workpiece. If confirmed the optical not and the translation of the process workpiece to interfere, don't need to set up the pen position.

Use way is:

1> Can write pen to carry.

2>Make can write position, manual control panel key mobile platform, to stay processing graphics graphics processing plane, adjust the focal length. Then click button "read", and then write all set up position.

3>That can carry a position, manual control panel key mobile platform, move to the optical will not interfere with the work of the height, and through the panel key move the optical, confirmed that won't interfere, some button "read", and then set up a position.

【point】

Here the rbis, and is suitable for drawing tool create a point figure yuan, or from DXF file into the spot diagram yuan. And the current layer processing methods has nothing to do, namely whether the current layer is cutting or a scan, graphics in the spot diagram yuan has always been to the rbi way output.

The rbi movement speed for layer speed, beating the energy for the maximum energy layer laser.

【The laser Enable】


When the machine is equipped with two road laser, usually, are two road and output.

But the user may through the set that laser, that its not output all the way.

【The joint IO output】

All the way and the layer associated IO output, obligate function.

III. 4.10.3 Laser scanning parameters Settings

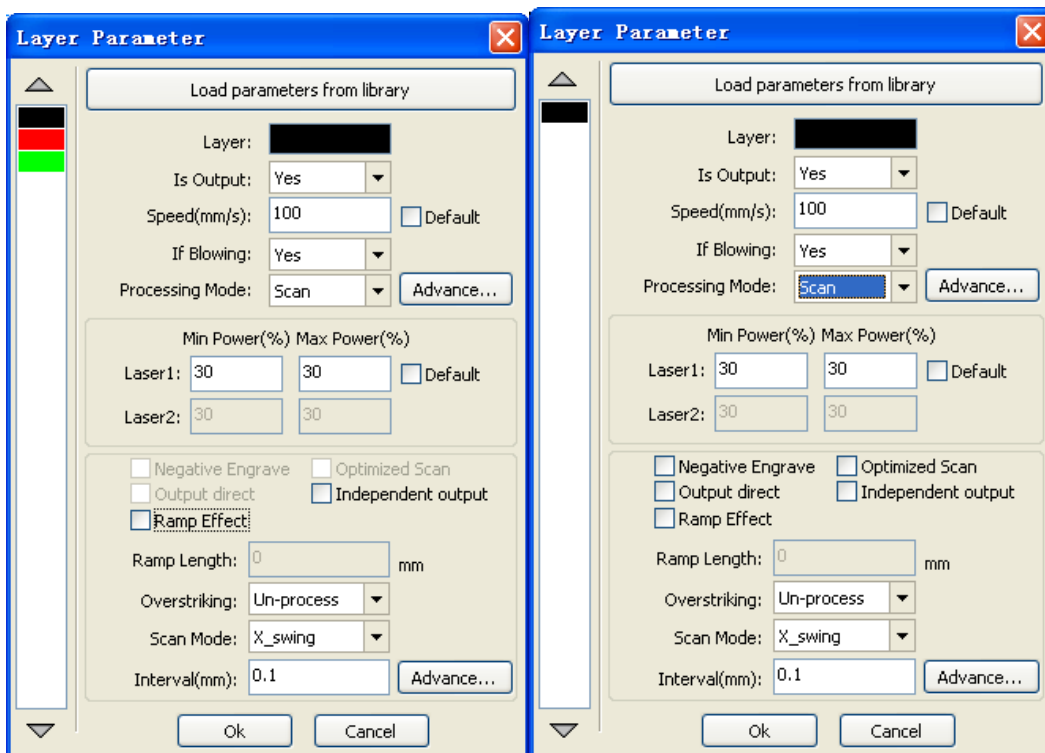

On the left of the dialog box for vector scanning parameters Settings, on the right side of the dialog box for bitmap scanning parameters Settings.

The vector data do not support the scanning the color carving, optimization scanning, direct output.

The color carving: normally scanning, bitmap in the black spots a laser, the laser in white.

Choose the color carving, the bitmap in the white of the laser, black spots in a laser.

Optimal scanning: choose optimization will automatically adjust the users scan the scanning interval to set up the best value, the scan best effect.

Otherwise, according to user Settings of the scanning interval scan pattern. Generally choose "optimal scanning"

Direct output: grayscale bitmap, according to the actual graphics gray.in output, already color deep place laser energy big, color shallow place laser

Energy is small.

Figure yuan respectively output: for vector graphics for, figure yuan respectively according to vector diagram output is the position of the yuan relationship, which in turn will get together the vector map carving output of yuan respectively.

If not checked figure yuan respectively output, it will be the whole vector graphics as a whole to sculpture.

For a bitmap for, if not checked figure yuan respectively output, the system will automatically will work with a layer of the bitmap in as a whole output.

If checked the figure yuan respectively output, the system will be in a single output bitmap.

Slope effect: the scan the edges of the figure appear slope, submit stereo effect.

Be bold font: including don't handle, scanning the font, scanning the bottom. Generally choose not processing.

Scanning is part of the font scanning is the font, also is the Yin carving.

Note that the slope effect choice, please will be bold font choose not to deal with, or slope affected the effects.

Font Yin carved: not to add text outside the box, scanning are text itself, as below:

欢迎使用

Font Yang carved: text and the outer frame, scanning is the bottom of the graphics, as below:

欢迎使用

Scanning mode: including level one, level two-way, vertical one-way, vertical two-way.

Level one way: the optical scan pattern back and forth in a horizontal direction, but only to a direction when laser scanning comes out,Such as: when the optical scan from right to left a laser, and from left to right the laser scan.

Level two-way: the optical horizontal direction in the back and forth laser scanning graphics.

The vertical one way: the optical scan pattern in vertical direction back and forth, but only to a direction will be laser scanning, Such as: when the optical scan from up to down a laser, and from the bottom to scan a laser.

The vertical two-way: in vertical direction the optical back and forth laser scanning graphics.

Note: general use level two-way scanning mode.

Scanning interval: namely the optical scan every much long distance under a line. The smaller the interval, scanning the deeper to graphics; Conversely, the more shallow.

Suggestions: (1) for vector layer (i.e. color layer), scanning interval in 0.1 mm general set below.

(2) for a tutu layer (namely BMP layer), scanning interval in 0.1 mm general set above,

Then through the change and the most high power to make the minimum power after scanning the graphics depth to achieve the ideal effect.

III. 4.10.4 Laser Cut Parameters Setting

Seal cutting has not closed the graphics appear the case is closed, you can compensate with the seal to close, but if the seal is misplaced, you can not compensate, you can use 4.9.5 optimization backlash compensation to compensate, or to use the user parameter in the Backlash compensation .

Open delay

Close delay


If checked, the light switch delay is playing in time said. Otherwise, the light switch delay said is laser movement delay.

Using the slit width compensation can compensate for the offset between the graphics and the actual output graphics that caused by laser cutting.


It only has effective for the closed graph.

Direction: Compensation direction is set according to actual needs, such as cutting a circle, if you want to retain the cutting down of the circle, you should set out the direction of compensation; If you want to keep the hole should be set to compensate for the inward direction.

Sew width: it is the width of the laser.

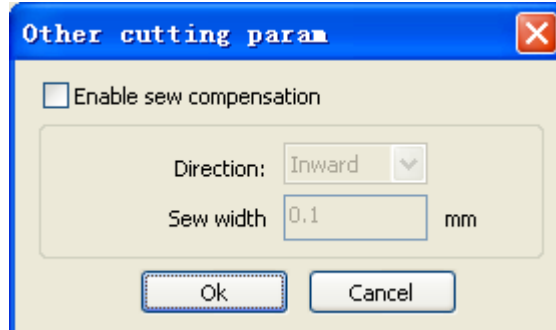

III. 4.10.4 Laser Dot Parameters Setting

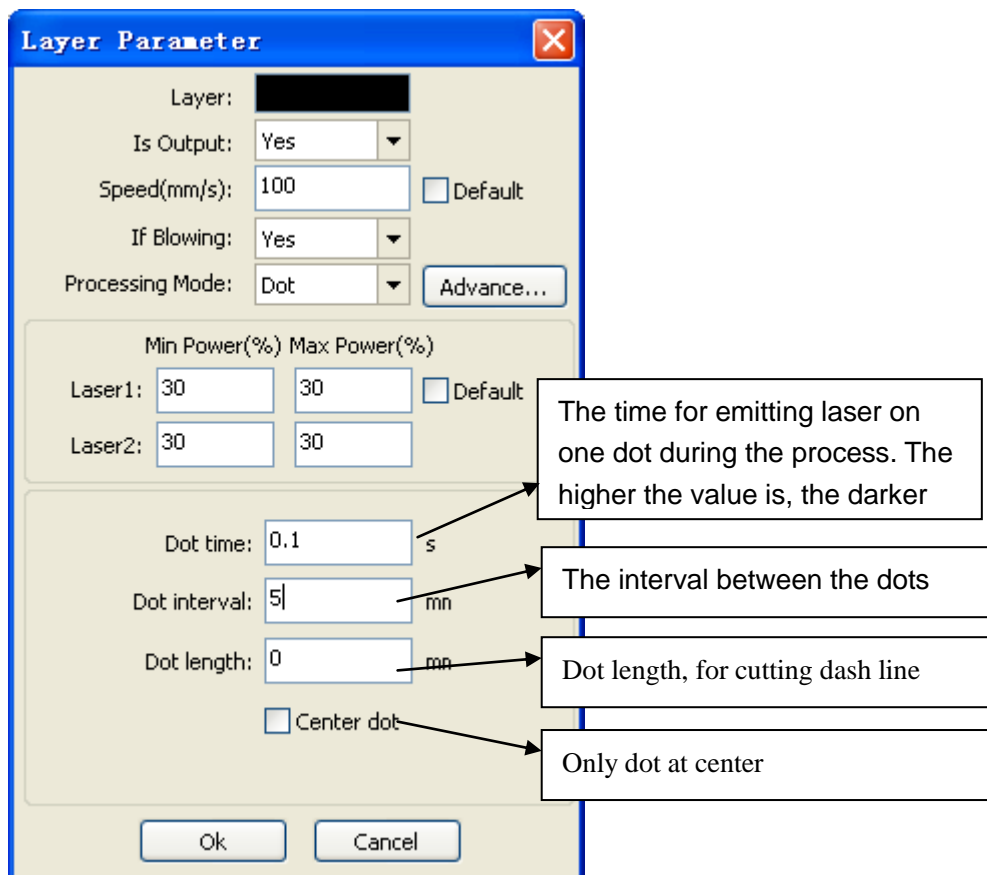

IV Introduction of AutoCAD_Laser

IV .2.1 Features of AutoCAD_Laser

Mainly used in movement control, it is an important part of laser movement control and is. It realizes effective control of laser numerical control machine tool by computer and accomplishes processing tasks according to user's different requests.

AutoCAD_Laser is a plug-in module stalled in AutoCAD, utilizing indirectly the powerful functions of plotting and edit of AutoCAD. It supports almost all the file formats supported by AutoCAD.

IV.2.2 Environmental requirements


- ① Above CPU586, above PIII or PV recommended CPU 586
- ② Memory, above 1G recommended
- ③ Windows2000/XP、 Vista, XP recommended
- ④ Supports AutoCAD software above the version of AutoCAD2000 and


AutoCAD2004. AutoCAD2005. AutoCAD2007.

IV.2.3 Installation and startup

IV. 2.3.1 Installation

1. You should have installed AutoCAD software before you install AutoCAD_Laser. If you don't, please install AutoCAD on your computer first.
2. If AutoCAD software is opened, please close it first.
3. In order to ensure smooth installation, we suggest you to close the Anti-Virus Software first.



4. Double click on , the software installation menu will pop up as Figure 2-1:

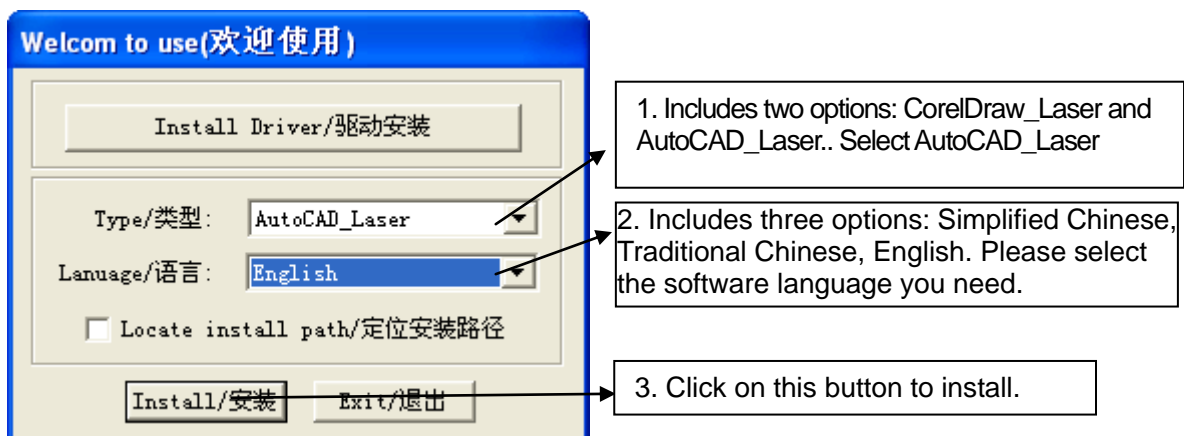


Figure 2-1 Software installation

As shown in figure 2-1, select AutoCAD_Laser, select software language, then click on the Install button, a prompt menu as shown in figure 2-2 will pop up to show successful installation.:

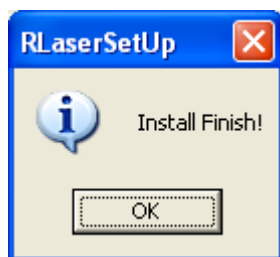


Figure 2-2 Prompt of instillation completion

IV.2.3.2 Startup

Open AutoCAD, the main menu of AutoCAD will be shown as Figure 2-3:

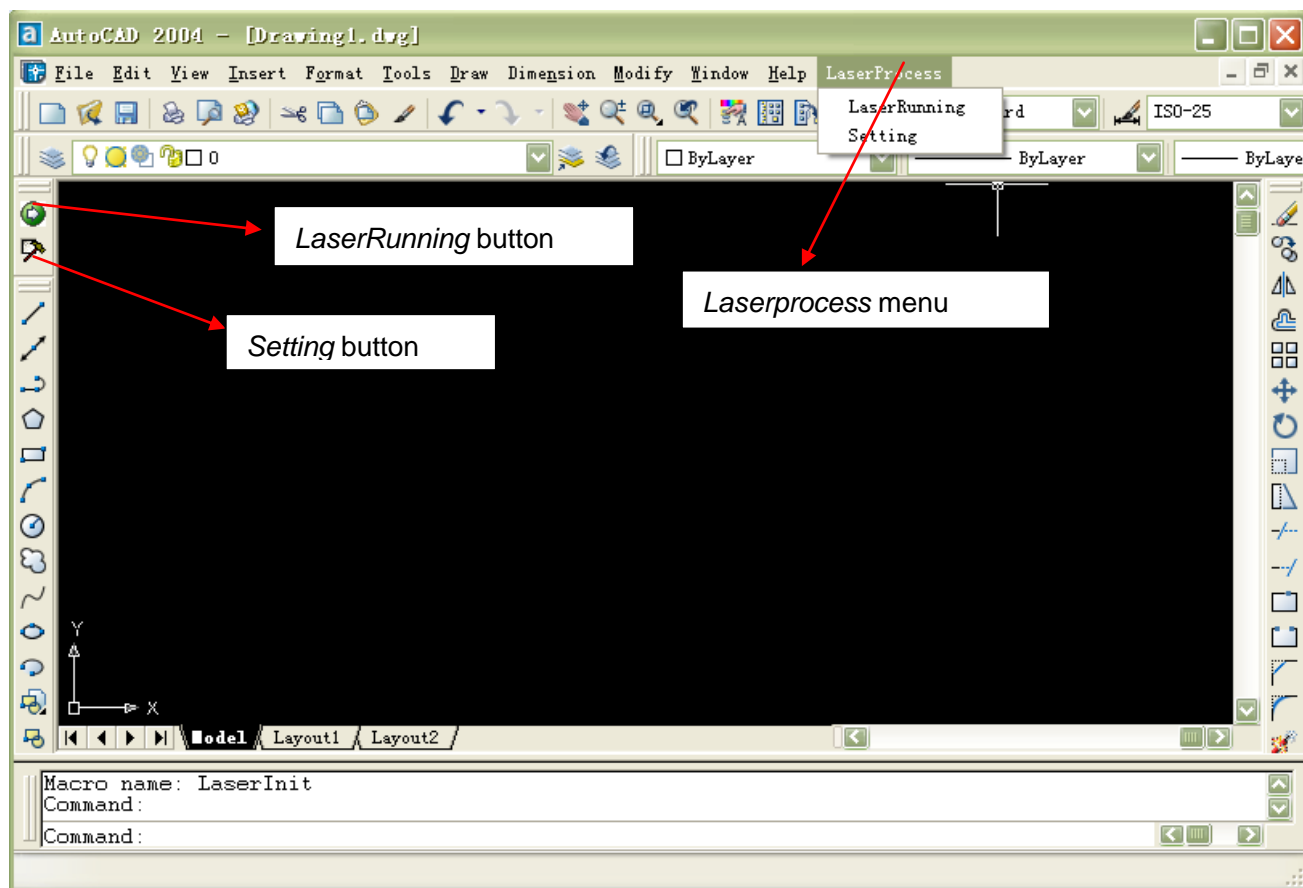


Figure 2-3

(1). Click on the *LaserRunning* button or the *LaserRunning* menu item, the main menu of *LaserRunning* will be shown as Figure 2-4:

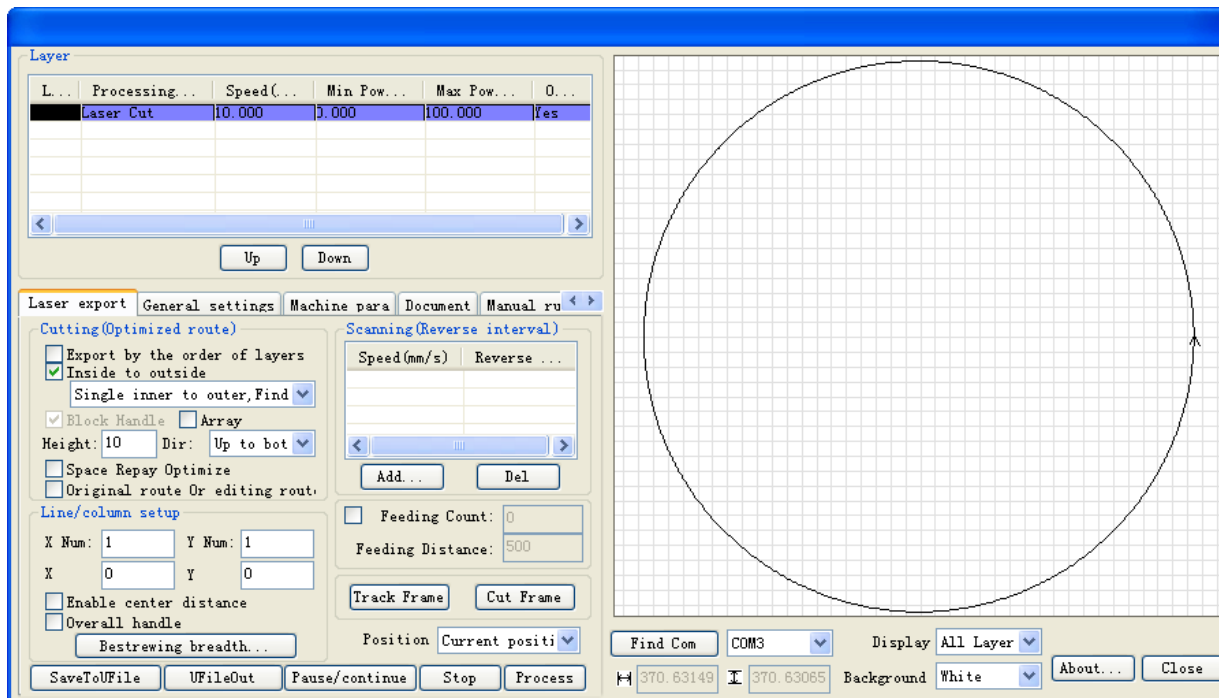


Figure 2-4

Note: this menu will not pop up when AutoCAD is not plotting at present.

(2). Click on the Setup button or the Setup menu item, the dialog box of Setup will pop up as shown in Figure 2-5:

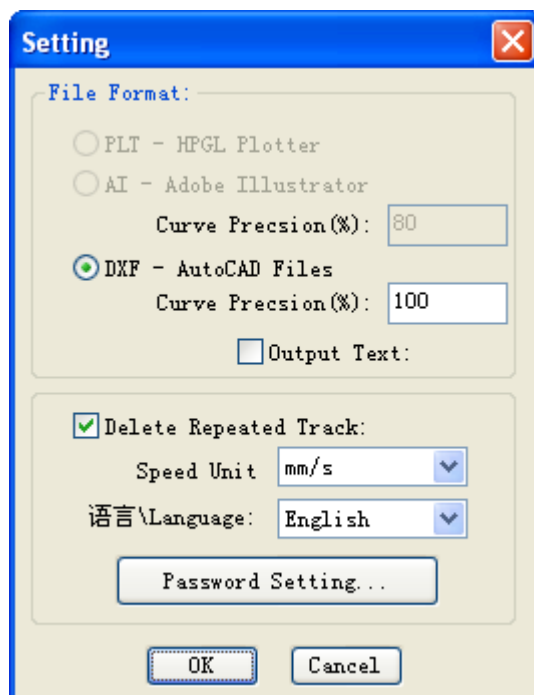


Figure 2-5

2.1 Operation instruction of AutoCAD_Laser. (Almost the same to that of CoreDraw_Laser please refer to the operation instruction of CorelDraw_Laser).

V Attached

Bitmap Creation Flow

Step one: Startup Photoshop

Step two: Select the menu File/Open to open a picture:



figure 5-1

Step three: Select the size and the precision of the picture

1、 Open the menu Image/Image Size, a window will pop up, as shown below:

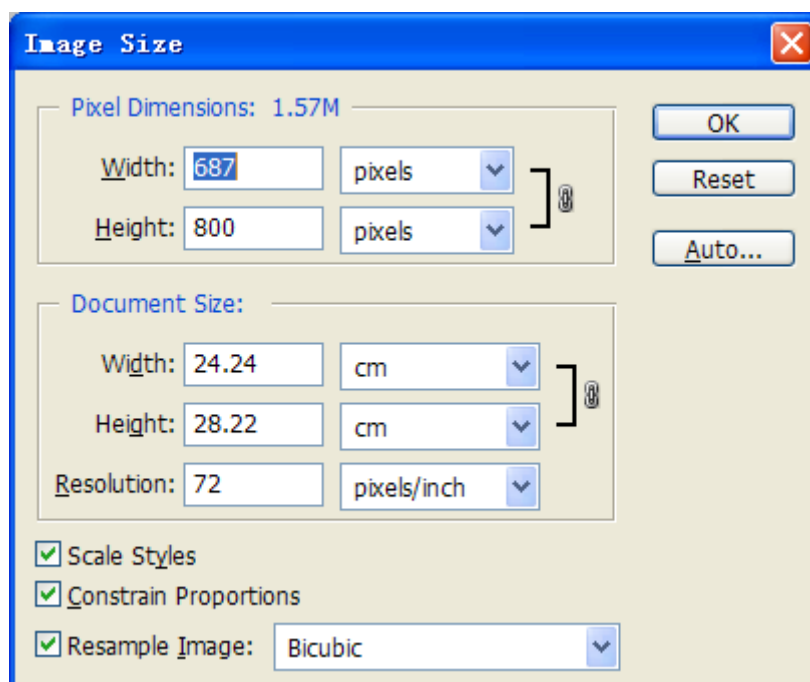


Figure 5-2

- 2、 In the column Document Size/ Height and Width, input the value you wanted, figure 5-3 followed;
- 3、 In the column Document Size/ Resolution, input the converted graph precision(600~1200 pixels per inch is recommended, the higher resolution, the clearer converted graph);

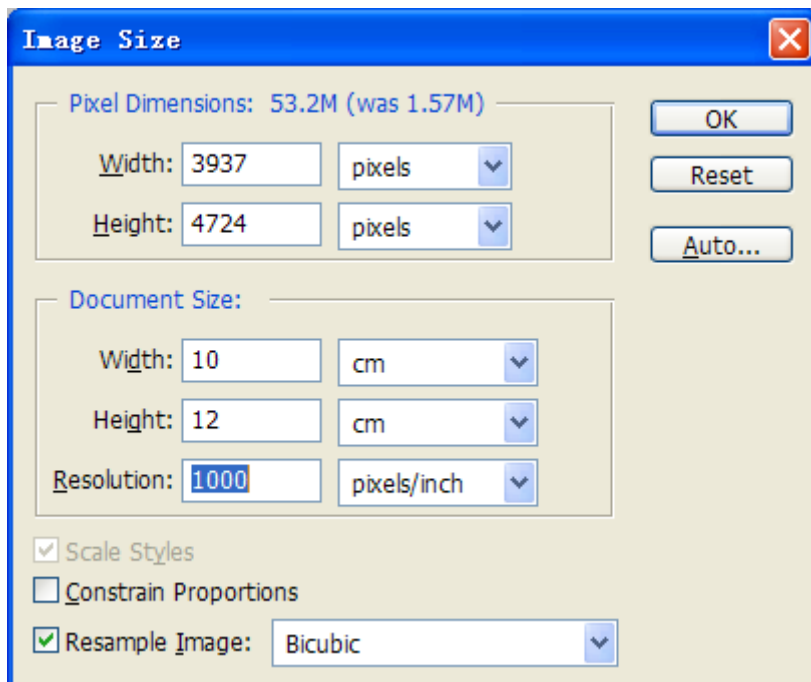


Figure 5-3

Such as figure 5-3: the converted graph size is 10cm*12cm, the resolution is 1000 pixels per inch;

- 4、 Push on the OK bottom.

Step four: Select the menu Image/Mode/Grey Scale, take out the color information.

Step five: To create net-dot bitmap, two methods are discussed below:

Method one:

1、 Select the menu Image/Mode/Bitmap, a window will pop up as below:

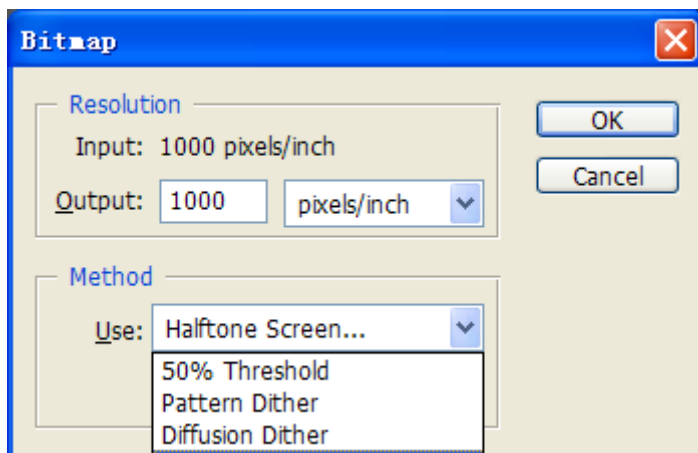


Figure 5-4

2、 Select (T) , (P) , (D) or (H) , which method is you wanted;

3、 To solid graph, Please select (T) , to create some scan graph of the character or of the logo design. To cross line graph, may select one of (P) , (D) or (H) , to create some different effect. Generally speaking, select (H) .

4、 if (H) selected, a window will pop up:

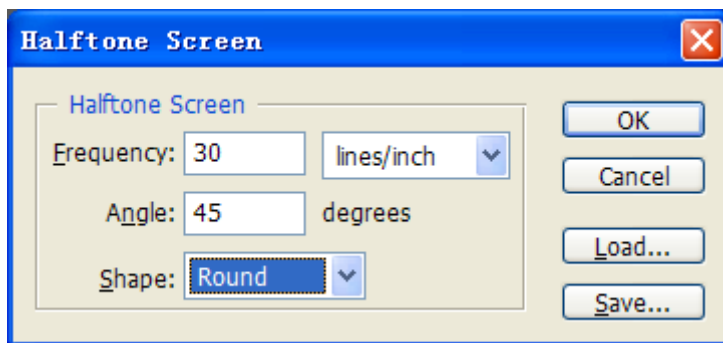


Figure 5-5

In this window, frequency (F) , that's to say, the precision of the cross line, may be 10~60 lines per inch;

Angle (N) may be 45 degree;

In column Shape (H) , circle is selected generally.

5、 Push on the bottom OK.

Method two:

1、 Select Filter/ Pixelate / Color Halftone , a window will pop up, such as figure 5-6.

2、 Confirm Max Radius, which is 4~127 pixels, to confirm the size of the color halftone gridding. The calculating method followed: graphics resolution*0.71/ gridding precision.

For example: as shown in figure 5-1, the resolution is 1000 pixels per inch, the wanted gridding precision is 60 DPI, then, the max radius is 12, the expression followed: $1000*0.7/60=12$.

3、 Confirm the net angle of the graph channels.

Input the net angle value for some of the graph channels, the angle is -360~+360 degree, which is the angle of the net dot and the horizontal line.

Note:

To grey graph, only channel 1 selected;

To RGB graph, channels 1,2 and 3 selected, then red, green and blue channels are corresponding;

To CMYK graph, all four channels selected, then cyan, magenta, yellow and black channels are corresponding.

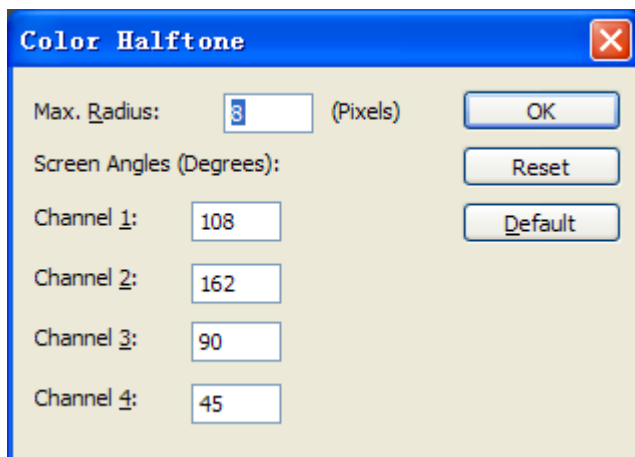


Figure 5-6

4、 Push on the OK bottom;

5、 In the menu Image/Mode/Bitmap, Select 50% Threshold, to convert the graph to one-bit bitmap.

For example, after filter processing, the RGB graph, such as figure 5-7-1, will be converted to a bitmap, as shown in figure 5-7-2.



Figure 5-7-1



Figure 5-7-2

- (1) Select Image/Rotate Canvas/Flip Horizontal to rotate the graph;
- (2) Select the menu File/Save As to save the graph file, BMP format selected;
- (3) All things are done.

Some methods of drawing in Photoshop aren't discussed in this file, if needed, please consult the Manuals of Photoshop or some related books.

VI User Parameters

(1) Cutting Parameters (Only affect cutting arts)

- **Idle Move Speed:** this parameter decides the highest speed of all non-lighting lines for the machine in the movement process.
- **Idle Move Acceleration:** it means the highest acceleration of all non-lighting lines. Idle stroke speed and idle stroke acceleration can be set higher to reduce the working time of the whole figure, but if they are set too high, it may cause the jarring of track, so comprehensive consideration should be given to the setting.
- **Turning Speed:** it means the speed of turning at the acute-angle corner, which is also the highest speed in the whole cutting process.
- **Turning Acceleration:** it means the acceleration of turning at the acute-angle corner when cutting. If the two speeds are set too high, jarring will happen to the turning; if set too low, it will influence the cutting speed.
- **Cutting Acceleration:** it means the highest acceleration value in the whole cutting process.
- **Cutting Mode:** it is divided into high-speed cutting and precision cutting. In high-speed cutting, priority is given to the cutting speed, but in precision cutting, the cutting effect.
- **Acceleration Mode:** it is divided into T acceleration and S acceleration. T accelerate will quicken the whole cutting process, but it will result in that its cutting effect is inferior to that of S acceleration.

(2) Scanning Parameters (Only affect scanning arts)


- **X-axis Starting Speed**
- **Y-axis Starting Speed**
- **X-axis Acceleration**
- **Y-axis Acceleration**

The above four parameters are used to set the starting speed and acceleration of two axes on the scanning. The higher the two speeds are, the quicker the scanning is.

- **Scanning Line-feed Speed:** this parameter is specially used to control the highest speed at which that the previous line vertically moves to the next line in the scanning mode. If the space between lines is larger during the scanning or if the distance of each block is larger during the scanning and deblocking of figure, it is necessary to position each line or block accurately. In such a case

the speed of scanning line-feed can be set as a lower value.

- **Scanning Mode:** it is divided into general mode and special mode for option. If special mode is used, the laser power should be increased. The smaller the speckle percentage is, the more the laser power reduces. The laser power to set should be larger in order to reach the same scanning depth. The purpose to select the special mode is to make the laser light at high power and short time. On the depth scanning the effect that the bottom is flatter is obtained, but it should be noticeable that if the speckle adjustment is not appropriate, it can achieve this goal. If the high power remains short, the lighting mode will influence the life of the laser. The system will default the selection of general mode.
- **Speckle Size:** When the general mode is selected as the scanning mode, this parameter will become ineffective; when the special mode is selected, this parameter will become effective. The controller will control this parameter among 50%~99%.

 提示 Prompt	The cutting and scanning parameters can't exceed the limited ones in the axle parameters. If so, the setting will become ineffective and the system will automatically cover the parameters with the axle parameters.
---	---

(3) Reset Parameters

- **Reset Speed:** it means the speed of X/Y-axle linkage reset to the origin.
- **X-axle Startup Reset**
- **Y-axle Startup Reset**
- **Z-axle Startup Reset**
- **U-axle Startup Reset**

You can select “Yes” or “No” in the field of the above four parameters, which is used to confirm whether each axle can be reset on the startup.

(4) Frame Setting

- **Bordering Mode:** “Blanked Bordering” means idling to start border preview; “Outputted Border Cutting” can manually cut off the well-processed figure; “4-corner Dotting” means to emit the light at four corner points of the frame to make a point and turn off light. The size and position of this figure can be checked intuitively through the four points. The bordering speed is the speed value set on the keyboard when the system is idle. For light output, its minimum/maximum power is the corresponding value set on the keyboard


- when the system is idle (The lasering power on the 4-corner dotting means the well-set maximum power).
- **Margin Distance:** It means whether to extend a certain length outside the original frame of the figure on the preview/cutting of frame.

提示	If the frame crosses the border, the interface will prompt it.
Prompt	If the Enter key is pressed at this time, the system will cut the border at the maximum/minimum coordinates first, and then border the figure. This bordering can be given up.

(5) Other User Parameters

- **Array Mode:** Two-way array or one-way array can be selected. Two-way array means the to-and-fro cutting of array in sequence; one-way array means the cutting of array from one direction to another. On selecting one-way array, the elements of each array are the same in action mode and completely uniform in action fluency, which takes a little more time than two-way array. Two-way array is the default option.
- **Back Position:** The origin (the relative origin) and the machine's absolute origin can be selected. This parameter decides the parking position of laser head after each work.
- **Before-feeding Time Lag:** settable at 0~300s. The lagged time can facilitate user's feeding and picking on the feeding device.
- **After-feeding Time Lag:** settable at 0~9.9s. It can facilitate the feeding device's delaying in jarring after moving to the correct position and waiting for the 2nd work after the feeding axle stands still completely.
- **Focus Setting:** it means the distance from the focal point of laser head lens to Z-axle origin. When there is no automatic focusing function, this parameter becomes invalid.
- **Backlash X:** The X axes' backlash, accurate to 1um.
- **Backlash Y:** The Y axes' backlash, accurate to 1um.

VII Instruction on the Machine Parts

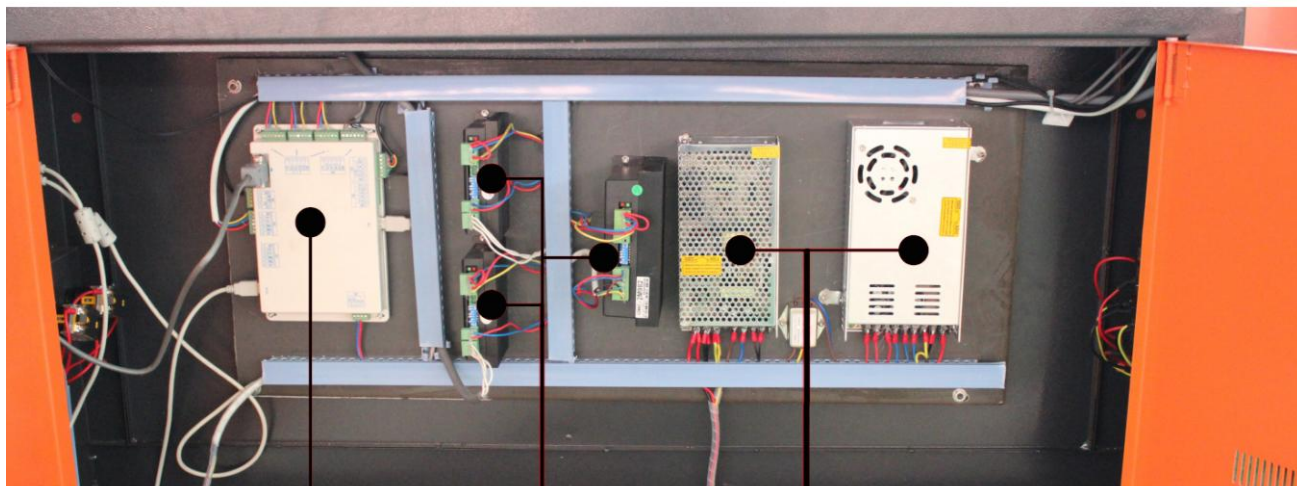

Main board

Motor driver

Switch power



Water sensor switch